

ZEISS IKON

Zeiss Service Manual

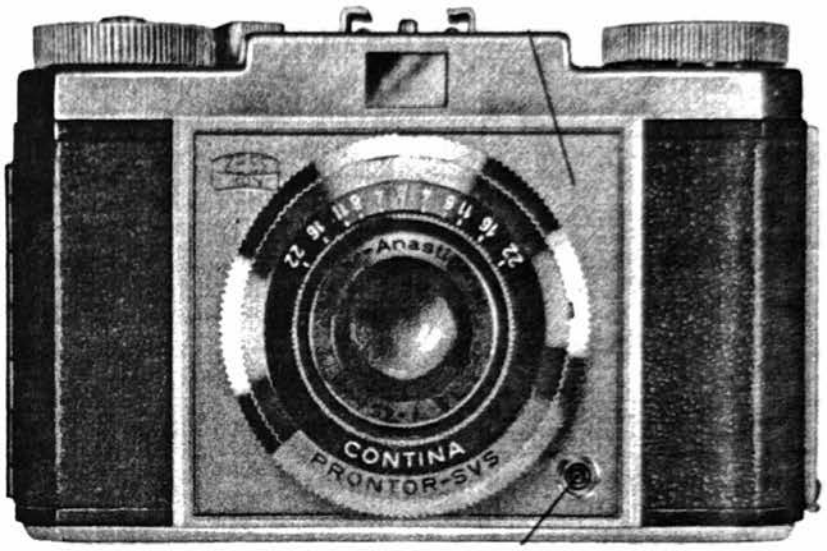

Contina Ia (526/24)

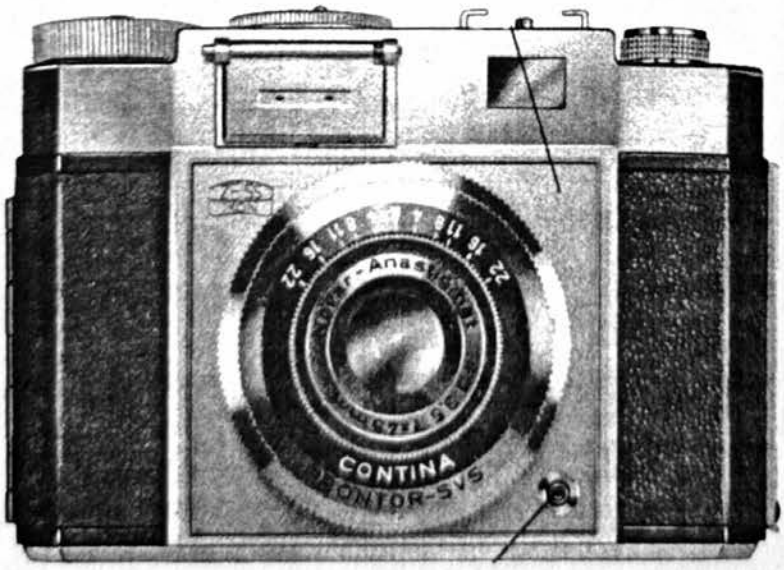

Contina IIa (527/24)
(1956)

Contina Ia Order No. 526/24 and Contina IIa Order No. 527/24

Contens

	Page
Description	1
Dismantling Instructions	3 - 4
a) Exposing the frame counter mechanism	3
b) Exposing the exposure meter	3
c) Exposing the film advance and tensioning mechanism	3
d) Exposing the release flap, the film drum and film spool	3 - 4
e) Dismantling the front plate and the shutter	4
f) The back of the camera	4
Fault finding chart	5 - 6
Instructions for assembling and adjusting	7 - 10
a) Lens	7
b) Shutter	7
c) Front plate	8
d) Film drum	8
e) Assembling the film spool	8
f) Release flap, cog rack, carrier bushing	8 - 9
g) Shutter adjustment	9
h) Winding lever	9
i) Adjusting the stop	10
j) Frame counter	10 - 11
k) Adjustment of the release locking device	11
Testing Instructions	12 - 13
Auxiliary and special tolls	
~~Lubricating plan~~	
Spare parts (Illustrations and text)	

Zeiss Ikon A.G.
Stuttgart

Description

The Contina Ia, order no. 526/24 and IIa, order no. 527/24 are tube cameras with rapid lever wind; by operating the lever 85 562 the shutter will be tensioned and the film advanced by one frame. Tensioning the shutter is carried out in this way:
By operating the winding lever 85 562 (III.1) this be coupled to the spur wheel 45 148 (III.12) via the bolt 66 454 (III.11) and the carrier bushing 15 479 (III.11). This wheel is in gear with another spur wheel 45 644 Tm (III.11) which transports the cog rack 44 017 T (III.11) in the direction of the lever by means of one of two pins which in turn engage the slot of this cog rack. The cog rack will tension the shutter via the tensioning wheel 45 319 a. (III.15)

The advance movement is adjusted so that, after tensioning the shutter, the transport pon leaves the cog rack and returns until the tensioning wheel stops at the back of the shutter cocking cam or the slotted pin in the cocking axle of the shutter. The cog rack is now in a position which makes a second operation of the winding lever impossible unless the shutter is released.

The film advance takes place simultaneously with the shutter cocking via the spur wheels 45 148 (III.12) - 45 644 Tm (III.11) - 45 642 (III.12) - 45 641 (III.5) to the film drum 45 545 (III.5). Moreover, the spur wheel 45 641 drives the spur wheel 45 646 (III.9) via the intermediate wheel 45 643. The spur wheel 45 646, by means of a friction coupling, carries aling the film spool Fs 13 (III.5).

By depressing the thumb nut 33 309 (III.2) against the tension of the copression spring 23 759 (III.9), the axle 65 411 Tm (III.8) is lifted suffeciently to allow the slotted toggle pin to leave the corresponding recesses in the film drum and thus render the couling ineffictive.

Every operation of the winding lever advances the index ring 103 447 (III.1) by means of the shift spring 22 641 (III.6) which engages in the teeth of the index ring. The spring 42 228 Tm (III.6) stop the index ring until the lever is operated once again.

The following diagrams give an idea of these various movements. III.1 shows the position all parts of the whole mechanism after releasing the shutter, that is, generally speaking, after every exposure.


III.1 a shows the mechanism of the frame counter when the winding lever is retracted and fully extended.
III. 2 demonstrates the whole mechanism with the shutter tensioned and the film advanced. The camera is ready for the next exposure.

The shutter is released by the release nipple 14 033 (III.1) via the release rod 65 414 (III.6), the release flap 34 674 (III.8) and the pull rod 54 077 (III.14) which operates the shutter release lever.

Funktionsvorgänge beim Spannen der Contina Ia 526/24 u. IIa 527/24

unctions during tensioning of shutter of Contina Ia 526/24 and IIa 527/24

unciones durante la tensión del obturador de la Contina Ia 526/24 y de la IIa 527

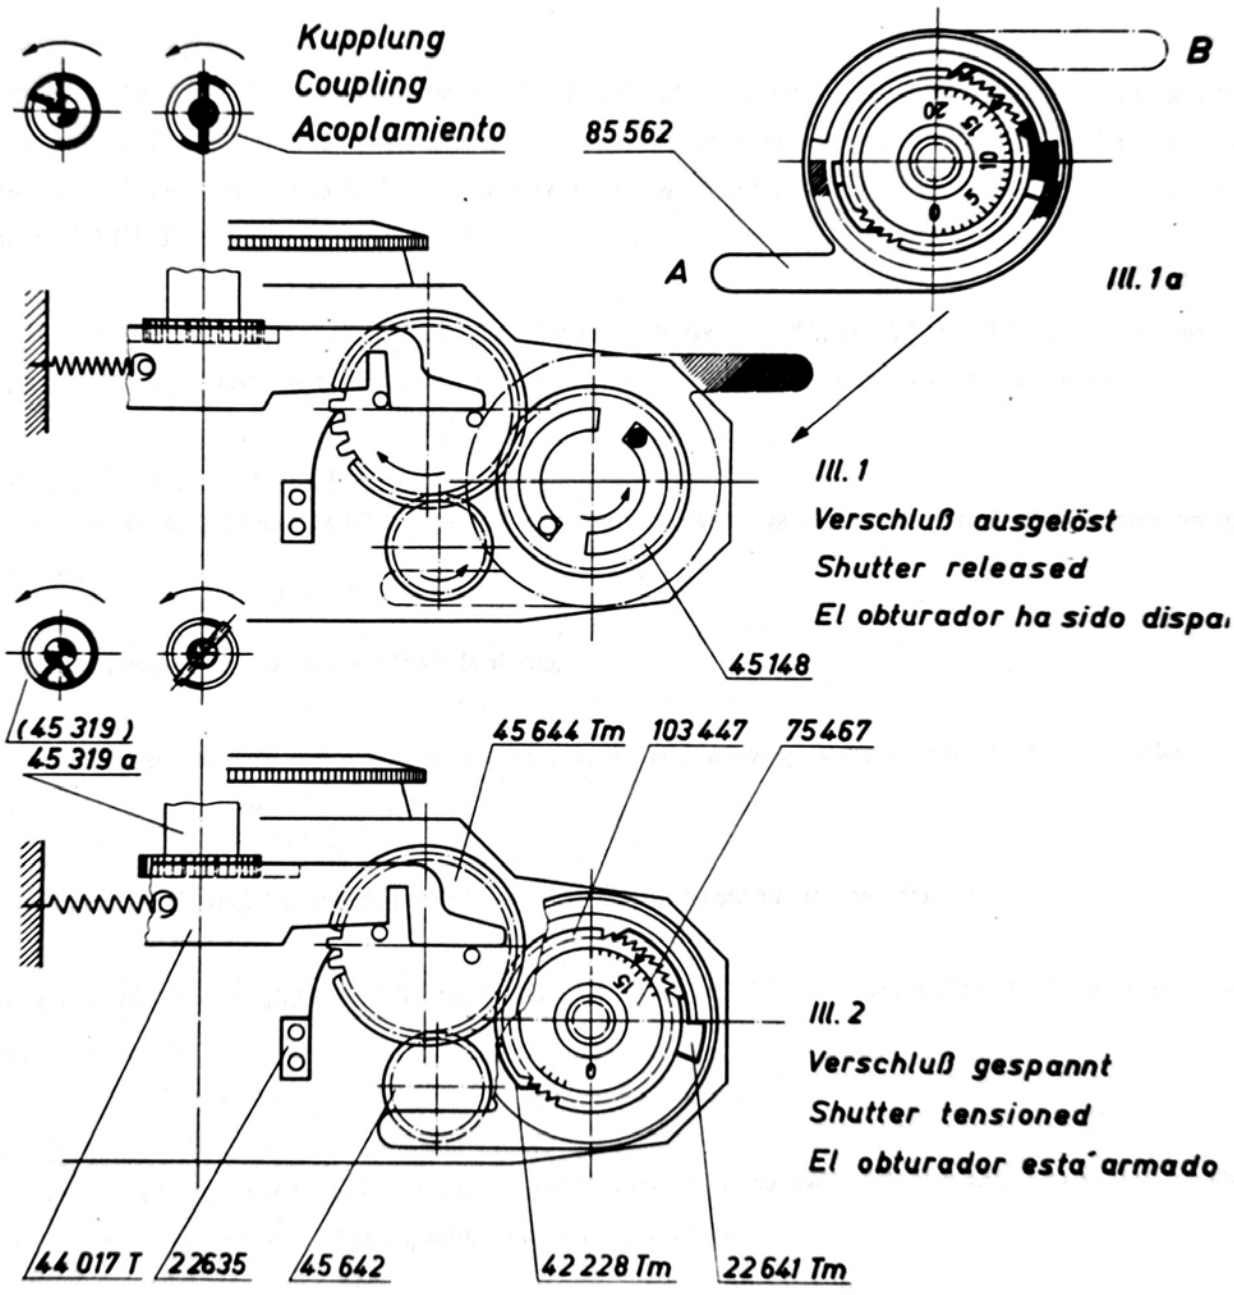

A. Aufzugshebel in Ruhestellung
Setting lever in rest position
Palanca para armar, en posición de pose

B. Aufzugshebel in Spannstellung
Setting lever in tensioned position
Palanca para armar
al estar el obturador armado

Dismantling Instructions

a) Exposing the frame counter mechanism

When the frame counter appears to be out of order it must be exposed, which means that first and foremost the release nipple 14 093 (111.1) must be loosened by means of the pincers 526/24 M/VMo 86. The nipple is screwed in and secured with varnish and must be unscrewed. The recording disc 75 467 (111.1) can then be removed. Pay special attention to the bearing bush 15 473 (111.6) which has a left-hand thread. It can be removed by means of the special key 526/24 M/VMo 85. After removing the index ring 103 447 (111.1) the shift spring 22 641 and the mounted stop 42 229 Tm (111.6) are exposed.

b) Exposing the exposure meter

After removing the lever 85 562 the countersunk screw ZIN 512 M 1,7x10-5 S (111.7) can also be removed, but care should be paid to the spring 23 762 (111.11) beneath it. Underneath screw within the cover flap is the bearing spacer 15 476 (111.7). Then unscrew the screw 184 (111.1) and the rewind knob 72 539 (111.3) with the special key 526/24 M/VMo 83 and the slotted nut 60 192 (111.6). The cover flap 38 419 T (111.3) can then be removed.

The assembled casing of the exposure meter 52 395 M (111.7) is secured by the screws M 1,7x7 DIN 84-5 S, M 1,7x9 DIN 84-5 S and M 1,7x11 DIN 84-5 S; can easily be removed when these screws are unscrewed, but mind the washers which may be underbeath.

c) Exposing the film advance and tensioning mechanism

Removal of the top cap (assembled) 38 421 T of the Contina la is done in the same way as described in paragraph b) Exposing the exposure meter.

In this model, however, the bearing spacer 15 476 is missing.

The film advance and tensioning mechanism is the same in both models. After unhooding the return spring 23 763, the assembled cog rack 44 017 T (111.11) can be removed.

The spur wheel 45 148 (111.12) is only slipped on to the bearing boss 94 063 and need only be lifted off.

Now the w cylinder screws M 1,7x3,5 DIN 84-5 S, by which the base plates 26 372 T/1 (111.10) and 26 372 T (111.10) are fixed to the body, are accessible.

d) Exposing the release flap, the film drum and the film spool

To expose these parts the cover cap below 38 420 (111.2) must be removed. First the covering 109 190/4 must be removed and then the three countersunk screw M 1,7x4,4 DIN 63-5 S, which are now visible, unscrewed.

After unscrewing the slotted nut 60 183 (111.8) which is secured by varnish (special screwdriver 26 376 T 30) and the two cylinder screws M 1,7x4,5 DIN 84-5 S (111.8) the release flap 34 674 with the torsion spring 23 769 and the axle 12 227 (111.3) can be removed The film drum 45 645 (111.5) can be removed from the body after the Benzin protector 1,9 DIN 6799 (111.9) has been removed from the assembled axle 65 411 Tm (111.8). This axle should be pulled pulled upwards until the film drum us free. It may be necessary to loosen the grub screw M 1,7x2,5 DIN 553-5 S (111.9) and to shift the bushing 15 471 (111.5) downwards slightly.

The friction of the film spool can be removed when the grub screw M 1,7 x 2,5 DIN 553-5 S (111.9) within the spur wheel 45 645 (111.3) is loosened. Caution! This spur wheel bears the whole pressure of the compression spring 23 760 b (111.9)! Somtimes washers and discs may be found inserted beneath the compression spring to adjust the friction. When a new compression spring straight from the Contessa works is inserted these adjusting rings and discs are no longer nedessary. See Test Instructions, paragraph a section 11.

After removing the two screws M 1,7x3 DIN 84-5 S and the bearing flange 33 302 (111.3) the axle of the spool 65 413 (111.9) can be pulled out in a downward direction. The film spool Fs 13 (111.5) can then be removed from the body.

e) Dismantling the front plate and the shutter

The front plate bearing the shutter is affixed to the body by 4 cylinder screws M 1,7x3,5 DIN 84-5 S (111.5). However, the shutter can be unscrewed from the front plate by means of the key 527/24 M/VMo 82 without removing the whole front plate. It has to be borne in mind, however, that the discs beneath the shutter 39 550 or 39 575 (111.13) must be replaced whin re-assembling, since these discs are essential for the correct adjustment of the lens.

f) The back of the camera

The back is attached to the camera by 3 countersunk screws ZIN 511 M 1,7x3-5 S (111.9). Access to these can be gained by removing the covering on the hinge.

Defects and their cause

Fault	Cause	Remedy
1) Film fully or partly unexposed	1. Shutter does not open Failure of the shutter 2. Tension not working Winding cam loose	According to instructiones for the repair of Prontor-SVS shutters.
2) Double exposure	1. Thumb nut 33 309 failing to engage Film drum is de-coupled 2. Perforation breaks by friction in cartridge or cassette, of friction of film spool Fs 13 not strong enough	Repair thumb nut 33 309 Use good cartridge or cassette Adjust friction according to page 8
3) Spaces between pictures dissimilar	1. Retaining spring 22 635 broken or bent	Fit new spring, according to page 8, or adjust play of film drum according to page 8
4) Pictures unsharp	1. Distance setting ring 2. Mount of centre lens loose 3. Lens wrongly inserted after repair 4. Lens wrongly adjusted after repair 5. Lenses greasy, dirty	Fix setting ring, adjusting lens focusing, page 7 Affix mount of centre lens, otherwise as above Re-focus lens Clean lens
5) Pictures over-or under-exposed Exposure meter in order!	1. Incorrect shutter speeds 2. Blades open before delayed action mechanism has run off (pre-exposure)	Adjustment according to instructions for Prontor-SVS shutters
6) Film perforation torn	1. Stoppage in cartridge or cassette 2. Friction uneven	Use good cartridge or cassette Adjust friction, page 8
7) Scratches on film	1. Defective cartridge or cassette 2. Damaged pressure plate 3. Damaged film guide	Use good cartridge or cassette Renewal of pressure plate Remedy damage
8) Winding lever cannot be moved in any direction	1. Release flap bent 2. Shutter release lever bent 3. Cog rack locked 4. Foreign bodies between the cog wheels	Adjust, page 8/11 Remove shutter, adjust release lever, adjust release flap, page 11 Adjust cog rack, page 9 Examine camera, clean it remove foreign bodies
9) Winding lever not moving far enough	1. Defective shutter	Adjustment according to instructions for Prontor-SVS shutters
10) Winding lever runs light without tensioning shutter or advancing film	1. Retaining spring 22 635 broken or bent 2. Carrier bolt Fs 452 or 66 454 locked	Insert new spring, adjust same, page 8 Re-adjust bolt, see page 9

Fault	Cause	Remedy
11) Shutter cannot be released	1. Release flap bent	Adjust it, see page 8/11
	2. Shutter release lever bent	Remove shutter, adjust release lever and release flap, see page 11
	3. Shutter defective	Repair shutter according to instructions for Prontor-SVS shutters
12) Frame counter out of order	1. Lock spring on stop 42 228 Tm broken (Most frequently caused by turning index ring against direction of arrow!)	Renewal of stop 42 228 Tm
	2. Shift spring 22 641 locked beneath index ring (Index ring much air space) Excessive clearance beneath index ring	Insert disc 39 586 between index ring 103 447 and bearing bush 15 473
13) Exposure meter does not work	1. Instrument licked	Exchange exposure meter
	2. No flow of current	

Instructions for assembling and adjusting


a) Lens

Adjusting the lens is carried out as usual by the selective placing of disc 39 558, 39 559 or 39 575 beneath the shutter. The focusing value is the same as for our other miniature cameras (Contessa, Contina I and II, Contaflex, etc.) and is actually: the deviation of the focal plane at ∞ in millimetres from the supporting area of the pressure plate. In thes case, this deviation is 0,18 mm in front of the outer film guide ribs and can on no account be disregarded if the optimum definition is to be obtained. Lens focusing must be done at full aperture and with the utmost care. The focusing tolerance (deviation of the focusing value to + or -) with the Novicar 2,8/45 mm is ± 0,05 mm with the Novar 3,5/45 mm ± 0,06 mm.

Before the individual parts of the lens are re-inserted the inner part of the shutter must be thoroughly cleaned, the same applying to the lenses if necessary. Prior to wiping the lenses with a soft lens cleaning chamois leather or lint-free rag the surfaces of the lenses should be dusted by means of an air blower (no compressed air) or a lens cleaning brush of finest hair.

1. Remove dust by air blower or brush
2. Use dust and grease-free rags or chamois only
3. Do not use any cleaning agents.

In order to avoid damage to the lenses, the removal and re-insertion of the snap rings must be carried out with the greatest care. The correct position of the lenses is also of the greatest importance. The correct position of the lenses is demonstrated in the following diagram:

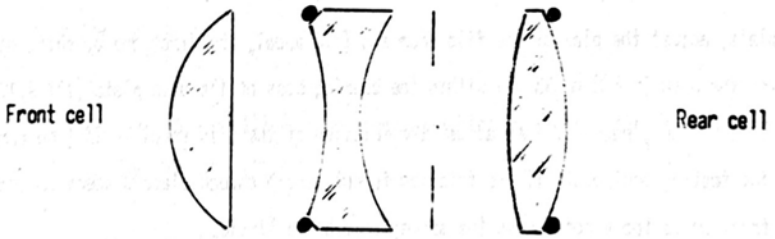

When the lenses are correctly assembled, a grid-screen seen through the lens should be free from distortion.

b) Shutter

Shutter repairs must be carried out according to the special instructions for adjusting the Prontor-SVS shutter. If spare parts are needed, they are available via the Contessa works.

It is a good plan to insert the shutter into the front plate when it is tensioned, since it is then easier to make adjustments.

For technical reasons the shutter setting mechanism has been modified. While originally a brass cam had been fitted on the shutter tensioning axle the later type has a grooved dowel pin fitted in the tensioning axle. This pin serves for transmitting. (fig. 15).

This called also for a change of the driving gear 45 319 a and corresponding bearing bush 15 480 (new number 15 490 a) (fig.15). Please bear this in mind when ordering spare parts.

c) Front Plate

The bearing bush 15 480 or 15 480 a and the winding wheel 45 319 or 45 319 a must be cleanded. The winding wheel should run smoothly in the bearing bush. Oil lightly with oil OS 2, and grease the gear-tooth system lightly with grease FM 6. The teeth must not be damaged. The pull rod 54 077 should move smoothly in the guide bolt 66 455 and should be lightly greased with grease FM 6.

d) Film Drum

To facilitate the assembly of the film drum the prepared axle 65 411 Tm is first inserted into the film drum (the follower pin should lie in the corresponding recess of the film drum). Then slip on the spring 23 759 from below and secure by Benzing protector 1,9 DIN 6799. Then remove the bush 15 471 by loosening the grub screw M 1,7x2,5 DIN 553-5 S, insert the film drum and temporarily secure the bush 15 471 (111.5,9,10). Grease the bearing in the bush with Zeiss Ikon grease FM 6.

e) Assembling the Film Spool

Insert the film spool Fs 13 into the body, slip the axle 63 413 with the ring 72 538 into the film spool from below and screw tightly the bearing flange 33 308 by means of the two screws M 1,7x3 DIN 84-5 S. Grease the bearing and the axle itself slightly with the grease FM 6. Then slide in the bush 103 446 together with the compression spring 23 760 b, but mind the distance rings or washers beneath the compression spring! When a new spring is fitted these washers are no longer necessary! The lug of the bush 103 446 must engage the corresponding recess of the film spool. Now grease lightly with grease FM 6 (on the film spool side) the spur wheel 45 646 and screw the wheel tightly on to the axle (111.9,10).

Then the vase plate 26 372 T/1 or 26 372 Tm can be replaced. Before doing so, grease the neck of the protruding axle 65 413 of the spool with grease FM 6.

After screwing on the base plate, adjust the plax of the film drum and film spool, the first one by shifting the bush 15 471 inside the casing, the latter by shifting the bush 15 478 or 15 474 within the bearing boss of the base plate (111.9,10). When doing this, bear in mind paragraph 12 of the Testing Instructions, page 12. Then adjust the friction of the film spool Fs 13 (See paragraph 11 of the Testing Instructions, page 11) by means of the testing equipment. If the friction is not strong enough place washers underneath the spring 23 760 or stretch the spring a little. If the friction is too strong press the spring together a little.

f) Release flap, cog rack, carrier bushing

The release flap must rum smoothly so the, screws should not be screwed in too tightly (moderately only). The assembled cog rack 44 017 T, with the shutter cocked, is then replaced (position as on page 2 fig. 2 of the description.) The cog rack must rum smoothly, if need be the mesh of tooth can be adjusted by shifting the front plate upwards or downwards. The same applies to the lateral clearance on the cam groove 28 217. The teeth of the cog rack and the lower sliding plane should be lightly greased with grease FM 6. After inserting the cog rack as described, the distance between the pictures should be adjusted by shifting the retaining spring 22 635. The cog rack must be in the position shown in ill. 12. In this position the follower pin of the spur wheel 45 644 Tm should be almost without play. The adjustment should also be tested for changing-over, that is, for the correct position of the other follower pin Too much play will result in dissimilar distances between the pictures or even overlappings.

Then insert the reurn spring 23 763, without hoking it to the cog rack, and replace the packing 25 392 (only if necessary). With the Contina Ia, the cover plate 26 375 (111.11) should be affixed by the screws M 1,7x3 DIN 84-5 S and M 1,7x5 DIN 84-5 S, while for the Contina IIa, after replacing the assembled casing of the exposure meter 52 385 (111.7) the screws M 1,7x7 DIN 84-5 S, M 1,7x9 DIN 84-5 S and M 1,7x11 DIN 84-5 S (111.7) should be used.

Now the spur wheel 45 148 (III.12), lightly greased at the bearing planes and the toothing with grease FM 6, must be replaced so that the two embossed carrier plates engage in those of the carrier bolts 66 454 or 66 452 and stand at an angle of 45° to the longitudinal axis of the camera (III.12).

Before replacing the carrier bush 15 479 or 15 475 the running of the carrier bolt should be tested. It should be tested. It should run smoothly in its bore hole without locking. The bolt and the carrier bush should be cleaned and all old grease and oil removed. The carrier bolt should then be oiled with Oil OS 2, while the carrier bush and the torsion spring 23 771 should be greased on the inside with grease FM 6. When the torsion spring is hooked into the carrier bush mind that it is positioned correctly in the slot. Then insert the release rod 65 415 or 65 414 together with the compression spring 23 761 (III.6,11) into the carrier bush.

g) Shutter Adjustment

If the shutter is still tensioned release it by pressing the release rod. Then insert the tensioning key 526/24 M/VMo 84 for the carrier bush 15 479 or 15 475 into the bush and tension by turning it in an anti-clockwise direction as far as is demonstrated in ill.11 that is, until the follower pin of the spur wheel 45 644 Tm is just about to leave the slot in the cog rack 44 017 T.

In this position there should be an air gap of 0,2 to 0,4 mm between the grub screw M 1,7x5 DIN 551-5 S and the turned-up lug of the cog rack 44 017 T. The grub screw and the nut BM 1,7 DIN 439-5 S must be secured with varnish.

h) Winding lever

Insert the compression spring 23 762 (III.11) into the carrier bolt.

Place the discs 39 584 or 39 557 (if necessary) on the guiding bush 15 477 or 15 470 (III.11,17) for the rewind knob. If necessary, place the disc 39 555 with 0,1 mm on the carrier bush.

With the Contina IIa, the distance bush 15 476 (III.7) must be replaced beforehand and the cover flap 38 421 T or 38 419 T be screwed on with the screws ZIN 512 M 1,7x3,5 S or ZIN M 1,7x10-5 S.

Then release shutter once again by pressing the release rod. Tension once again by using the tensioning lever 526/24 M/VMo 84, and turning the carrier bush in an anti-clockwise direction as far as it goes and against the power of the torsion spring 23 771. (The carrier bolt should be pressed downwards). The carrier bolt 66 454 or 66 452 is then once again at an angle of 45° to the longitudinal axis of the camera, that is to say, it points towards the fixing screw of the cover plate.

Hold the tensioning key 526/24 M/VMo 84 tight and make the winding lever 85 562 slide over it on to the carrier bush, keeping the latter in position by pressing it down. Then insert the disc 39 555 0,6 mm and screw on the winding lever by means of one of the screws M 1,7x4 DIN 84-5 S, which lies in the direction of the optical axis.

Then insert the stop 42 228 Tm (III.6) into the winding lever so that the turned-down lug lies in the corresponding recess of the boss. Screw in (Caution! Left-hand thread!) bearing bush 15 473 (III.6), by means of the special key 526/24 M/VMo 85 and adjust the stop in the following way.

i) Asjusting the stop

Put a light weight on the film drum or load it with a film. Loosen the screw on the winding lever and adjust this lever so that its second operation (with the shutter still tensioned) will not move the points of the film drum more than 1 mm (see Testing Instructions, paragraph 5 If this is not done, dissimilar distances between the pictures will be the result.

If this movement of the tip of a tooth is greater than 1 mm, the screw, which keeps the lever in position, should be loosened. Then the carrier bush should be slightly turned in an anti-clockwise direction and against the power of the torsion spring 23 771, while the winding lever is held tightly in position. However, if the carrier bush is turned too far, the winding lever will not advance the film.

Then screw in and tighten the screw on the opposite side and test the function of the mechanism once again.

j) Frame Counter

Unscrew the bearing bush (left-hand thread) 15 473 once again by means of the key 526/24 M/VMo 85, remove the stop and insert the two remaining screws. These screws must be securely tightened!

Insert the guiding bush 15 472 (111.11) into the boss.

The stop spring riveted to the stop must be tested for safe catching before the stop is finally inserted. It is a good plan to insert the bearing bush 15 473 into the index ring 103 447 (111.1) and to bend the spring so that the turned-up shank securely engages the teeth of the index ring. The shift spring 22 641 (111.6) should also be tested for safe meshing by placing it on the index ring. The turned-up shank of the spring should not be bent too sharply. The lower edge of the spring should not extend over the teeth, neither should it brush against the smooth side of the index ring. The collar of the index ring in which the shift spring moves, should be lightly greased with grease FM 6 and should be inserted together with the shift spring so that the riveted pin lies in front of the stop, that is towards the lens. Then grease the bore hole of the bearing bush 15 473 lightly with grease FM 6 and screw it in (left-hand thread!). The screw should be tightened well!

The index ring should then be turned so that the white index mark is in line with the optical axis but turned away from the lens (111.1). Insert the recording disc 75 476 (111.1,3) so that the index mark points to "0", then screw in the release nipple 14 083 (111.1,3) by using the pliers 526/24 M/VMo 86 and tighten it. The nipple should be secured by varnish (outer thread) against unintentional loosening.

If a new recoding disc has to be inserted, this method should be employed:

1) Place index ring in direction of optical axis (111.1)
2) Insert new recording disc so that index mark points to "0"
3) Screw the shearing device 526/24 M/VMo 80 in the thread of the guiding bush 15 472. These two parts of the device consist of a milled bolt with thread and a bush with a small lever and two protruding lugs, one of which is faceted and serves for aligning while the other fits into the recess of the recoding disc. By using this lever to turn the recording disc slightly, it can be set exactly to the index mark.

By continued screwing in of the threaded bolt one of the lugs is inserted into the recording disc so that it is secured against rotation.

Then screw the recording disc fast by means of the release nipple 14 093 (as described above) and secure the outer thread of the nipple against unintentional loosening by application of a little varnish.

On the opposite side, the cover cap with the slotted nut 60 192 (III.6,7) should be tightened by using the special key 527/24 T/M'ow83. If necessary, place washer 39 405 (III.6) on the carrier bolt 66 453 or 66 235 (III.11,7). Screw on the rewind knob 72 540 or 72 539 (III.1,3), replace film scale 75 394 T (DIN) or 75 395 (ASA) (III.1,1). Grease lightly with grease FM 6. If a slightly stiffer movement is desired, the film scale can be slightly curved. After replacing the ring 72 550 (III.1), tighten with screw 184 (III.1).

k) Adjustment of the release locking device

This adjustment has to be made with the slotted nut 60 183 (III.8). If the shutter is not released when the release nipple is depressed, the slotted nut 60 183 must be screwed in as far as is neccessary (in a clockwise direction). If after releasing the shutter once (without operating the winding lever), it is possible to depress the released nipple fully once again, the slotted nut must be turned in an anti-clockwise direction (See Testing Instructions, paragraph 7).

The shutter should be released when two-thirds of the release knob have been depressed.

After adjustment the slotted nut 60 183 must be secured with varnish.

Then replace the thumb nut 33 309 (III.2) and the cover cap below 39 420 (III.2) and affix with countersunk screws M 1,7x3,5 DIN 63-5 S (III.8). In case of backlash a washer 39 001 (0,2 mm) should be placed beneath the thumb nut.

Testing Instructions

a) Testing the Mechanism

1. When the camera is closed, the back shou d fit on to the body properly. When the locking slide is pulled out, the back should automatically open sufficiently to allow the camera to be fully opened by hand with ease. When the camera is closed, the locking slide must lock the back securely so that the camera does not open by itself when it is vigorously shaken.
2. The pressure plate must not be bent or scratched.
3. The film roller on the back should run smoothly.
4. The winding lever must work evenly without jamming until it stops. It must automatically return to its rest position. It should not be possible to swing it a long way from its rest position, if the shutter has not been released beforehand.
5. If, after advancing the film once (without depressing the release knob), the rapid wind lever is pressed from its initial position against the locking device, the tips of the teeth of the film transport roller should move only 1 mm at the utmost.
6. When the rapid wind lever has been swung until it stops once
   a) the shutter must be tensioned
   b) the film advance roller turned by 8 teeth (corresponding to a film advance of 38 mm)
   c) the take-up spool (without a film) be rotated by one turn
   d) the index ring of the frame counter advanced by one division
7. The release knob should not rotate when a cable release screwed in by hand is unscrewed. The release knob, when depressed, must run smoothly without abacklash and release the shutter without difficulty.
8. The index ring of the frame counter should turn easly in the direction of the arrow, but lock immediately when turned the other way round. It should always lock on one of the marks.
9. The rewind knob should pull out easily and without jamming; it should rotate smoothly and evenly and snap in securely when returned.
10. The film type indicator must run smoothly.
11. The take-up spool must turn on its axle by applying a torsional moment of 100 to 180 cmg (Testing device 526/24 ‰/VLe 72).
12. The take-up spool and film advance roller must be positioned in relation to the picture gate in such a way that the miniature film is guided evenly and without jamming between the outer guide-rails of the picture gate and the lateral guiding flanges of the take-up spool, the teeth of the film drum must engage the per forations easily and without excessive force. The film transport riller should be freely movable in both directions when the thumb nut is pressed down.
13. It should be possible to depress the thumb nut until the film drum is uncoupled. After releasing the nut it must spring back to its rest position.
14. The diaphragm setting on the shutter must work smoothly
15. The same applies to the shutter speed setting ring.
16. On the shutter the switch ring for the MXV settings must snap in at the individual settings. When set to M a delay to peak in relation to the full shutter opening should be obtained, while with the X setting circuit should be completed the moment the shutter is fully open. When set to V, the delayed action mechanism must go into operation, opening the shutter 8 seconds after pressing the release knob.
17. The distance setting ring must operate smoothly and have a focusing range from 0,9 m (3 feet) to ∞. This range should have stops at either end . The filter thread in the front cell focusing ring should not be damaged.

b) Exposure Meter

1. The lens should give a sharp picture of any object within the individual distances of all distance settings and at full aperture. The optical axis of the lens should be perpendicular to the focal plane.
2. The viewfinder should be free from disturbing reflections.

c) Exposure Meter

1. The time setting ring should turn smoothly in both directions.
2. It should be possible to alter the zero adjustment smoothly by means of a screwdriver. This device should be covered by the cover screw Ss 318 a.
3. The lid of the exposure meter should snap open and turn through 90° when the axle of the hinge is pressed laterally. It should close easily and safely snap into its rest position.
4. The pointer of the instrument should move smoothly over the whole working range and must be free from jamming. When the slits in the lid are covered, and light cannot penetrate to the cell, the pointer must point to zero when the camera is held horizontally.


d) General Note

1. A film which has run through the camera should be free from scratches within the path of the picture gate.
2. The camera must be light-proof and free from internal reflections.


Plublished: May 1955

Zeiss Ikon A.G.
Stuttgart


CARL ZEISS, Inc.
485 FIFTH AVENUE
NEW YORK 17, N.Y.

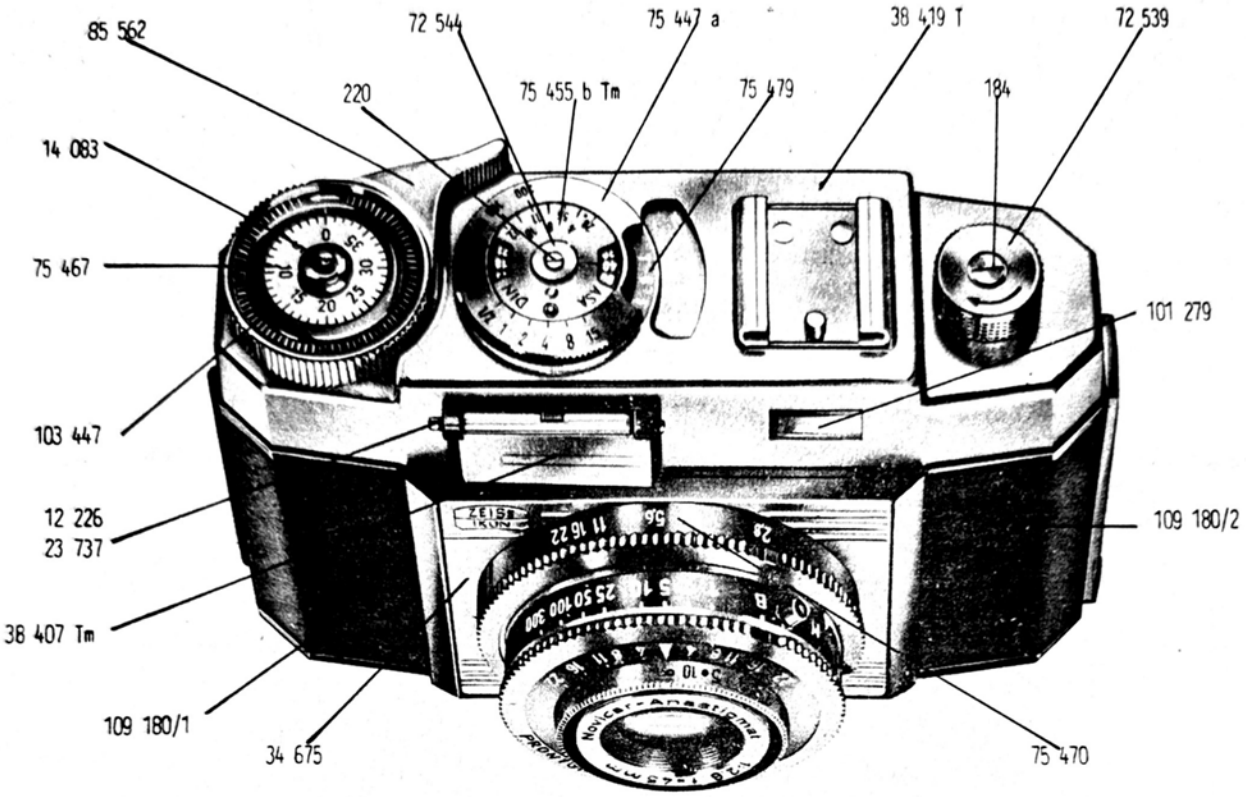
85 562
72 544
75 447 a
38 419 T
72 539
220
75 455 b Tm
75 479
184
14 083
75 467
101 279
103 447
12 226
23 737
109 180/2
38 407 Tm
109 180/1
34 675
75 470


Ill. 3

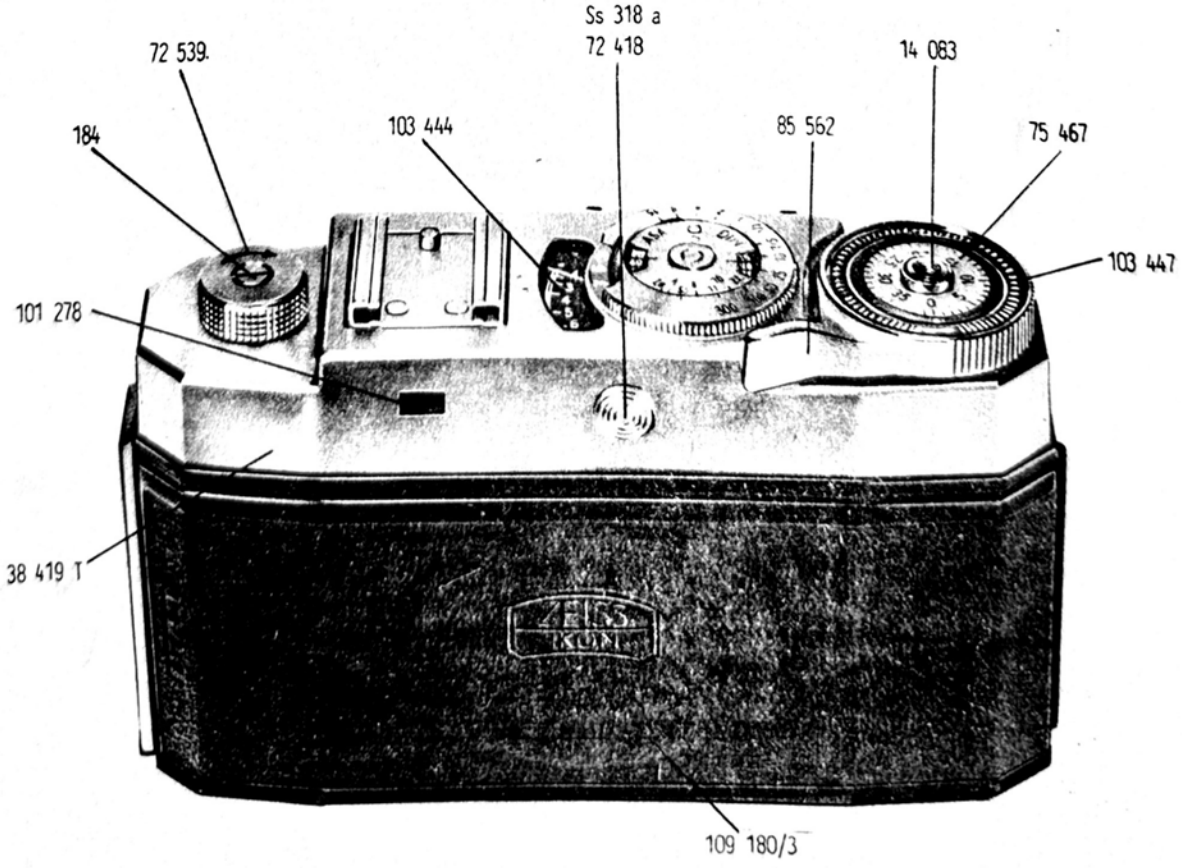
Ss 318 a
72 418
72 539
14 083
184
103 444
85 562
75 467
103 447
101 278
38 419 T
109 180/3


Ill. 4

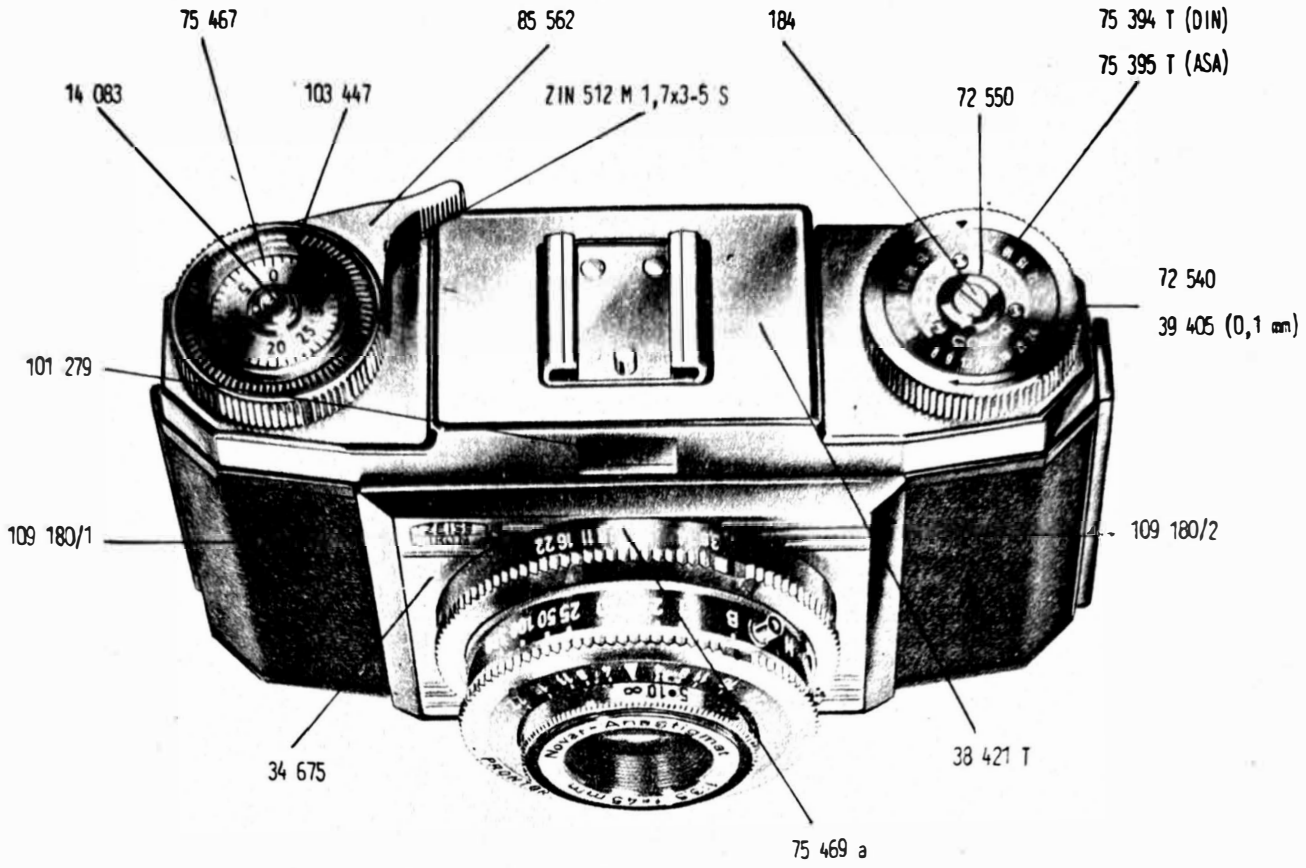
75 467
85 562
184
75 394 T (DIN)
75 395 T (ASA)
14 083
103 447
ZIN 512 M 1,7x3-5 S
72 550
72 540
39 405 (0,1 mm)
101 279
109 180/1
109 180/2
34 675
38 421 T
75 469 a


Ill. 1

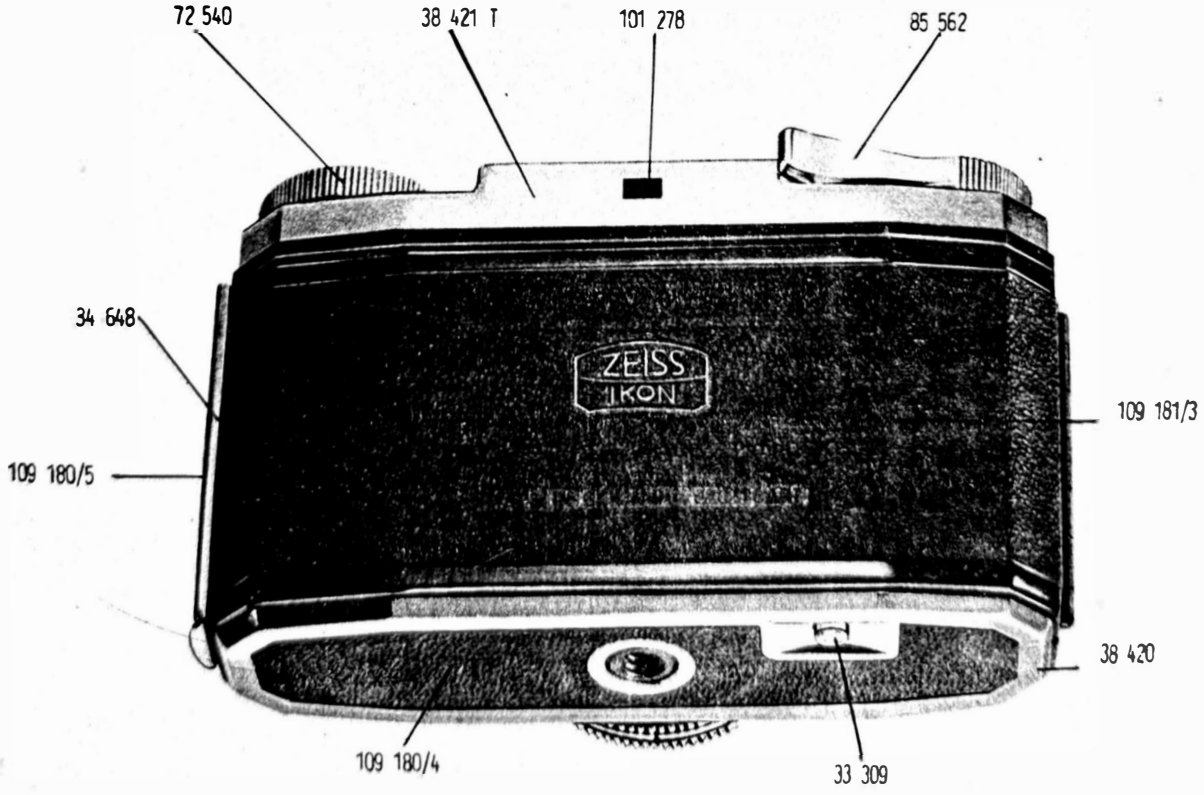
72 540
38 421 T
101 278
85 562
34 648
ZEISS
IKON
109 181/3
109 180/5
38 420
109 180/4
33 309

Ill. 2

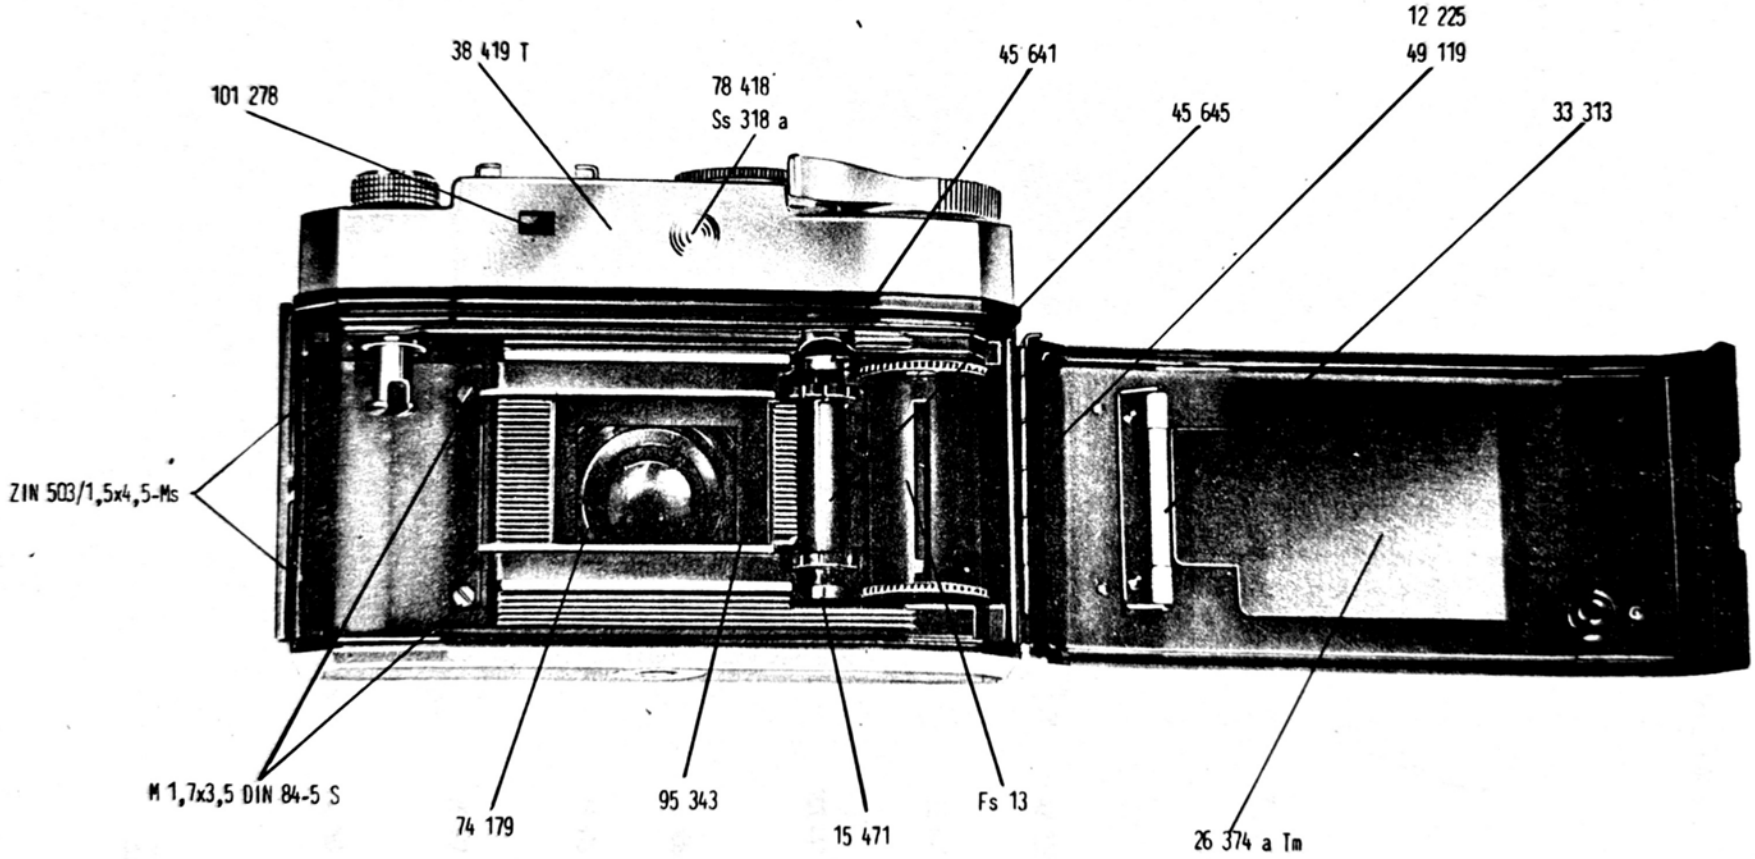
101 278
38 419 T
78 418
Ss 318 a
45 641
45 645
12 225
49 119
33 313
ZIN 503/1,5x4,5-Ms
M 1,7x3,5 DIN 84-5 S
74 179
95 343
15 471
Fs 13
26 374 a Tm

III. 5

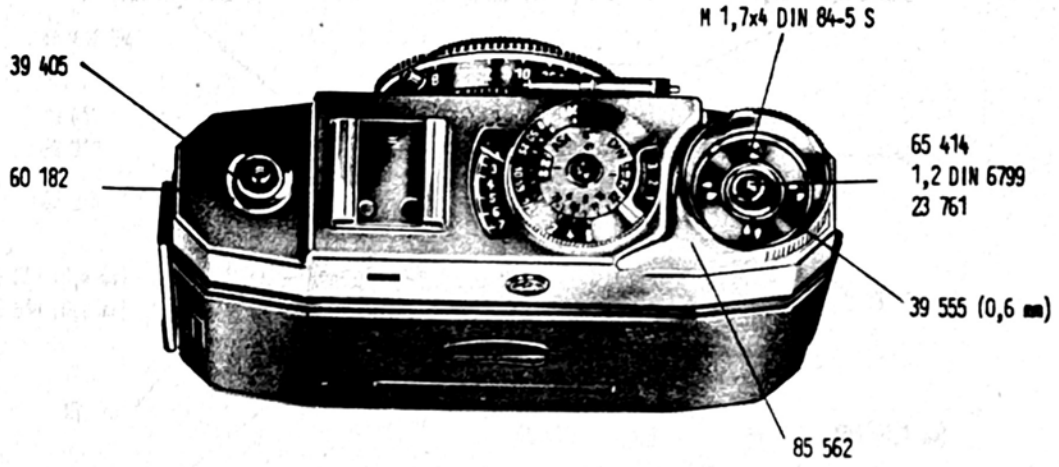


72 539


184


42 228 T


22 641


103 447



39 586


15 473



75 467


14 083

Ill: 6

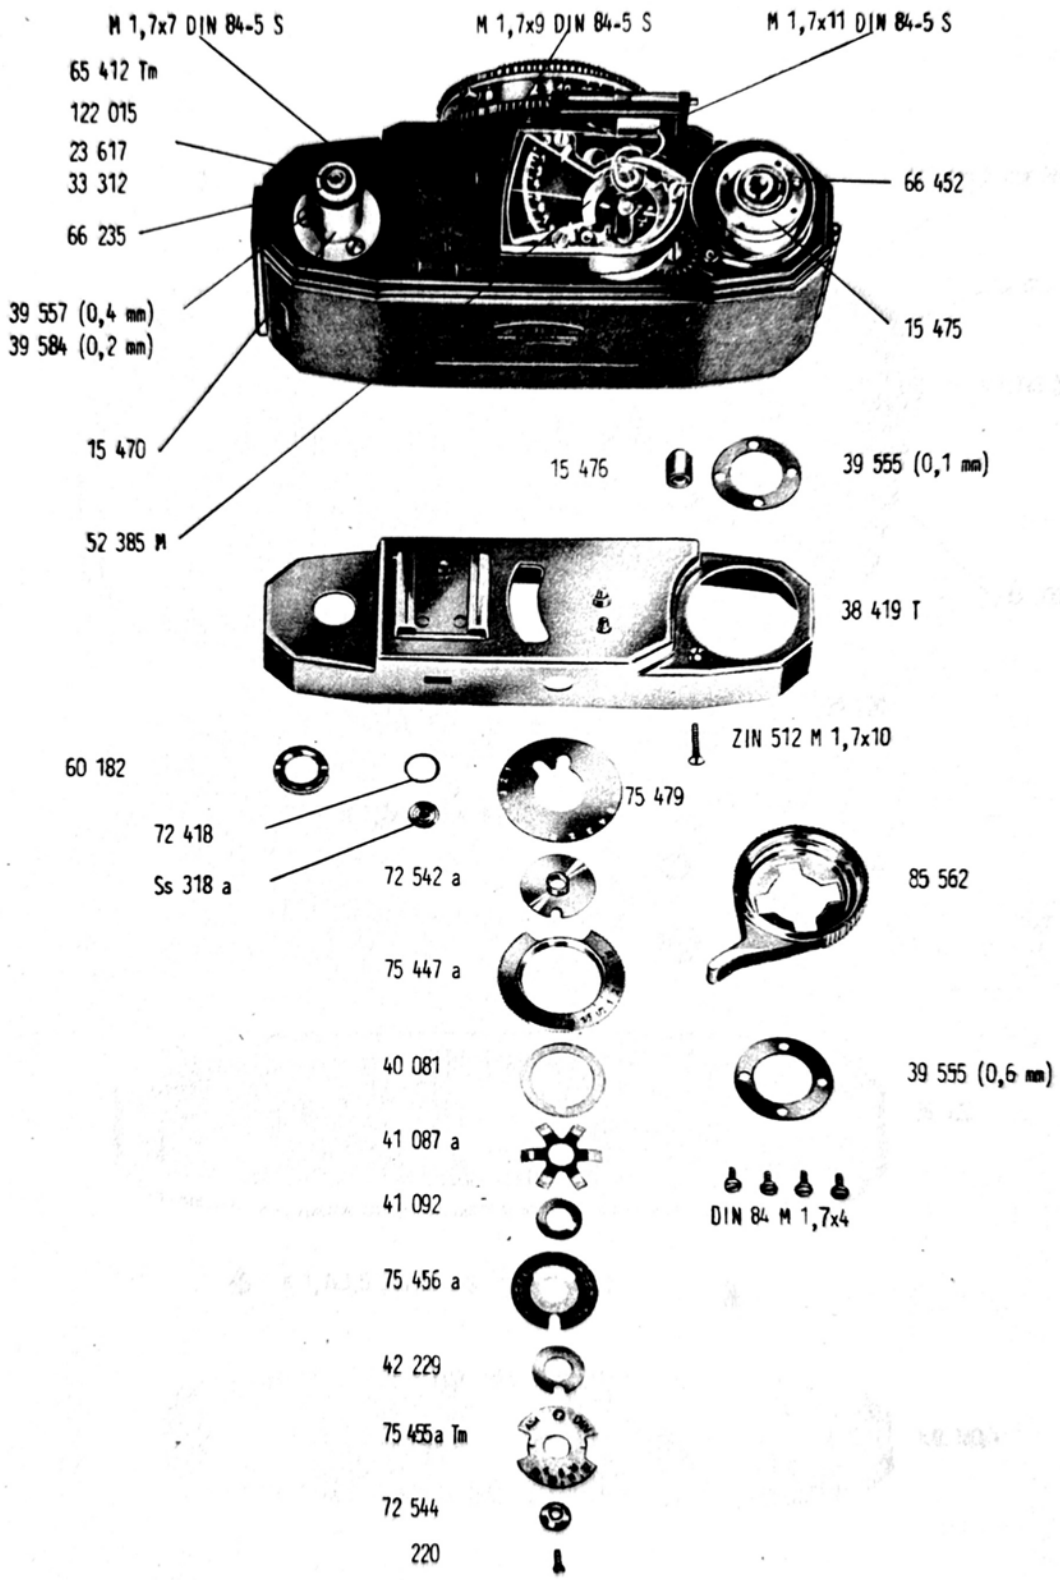

M 1,7x7 DIN 84-5 S
M 1,7x9 DIN 84-5 S
M 1,7x11 DIN 84-5 S
65 412 Tm
122 015
23 617
33 312
66 235
39 557 (0,4 mm)
39 584 (0,2 mm)
15 470
52 385 M
66 452
15 475
15 476
39 555 (0,1 mm)
38 419 T
ZIN 512 M 1,7x10
60 182
72 418
Ss 318 a
75 479
72 542 a
75 447 a
40 081
41 087 a
41 092
75 456 a
42 229
75 455a Tm
72 544
220
85 562
39 555 (0,6 mm)
DIN 84 M 1,7x4

Ill. 7

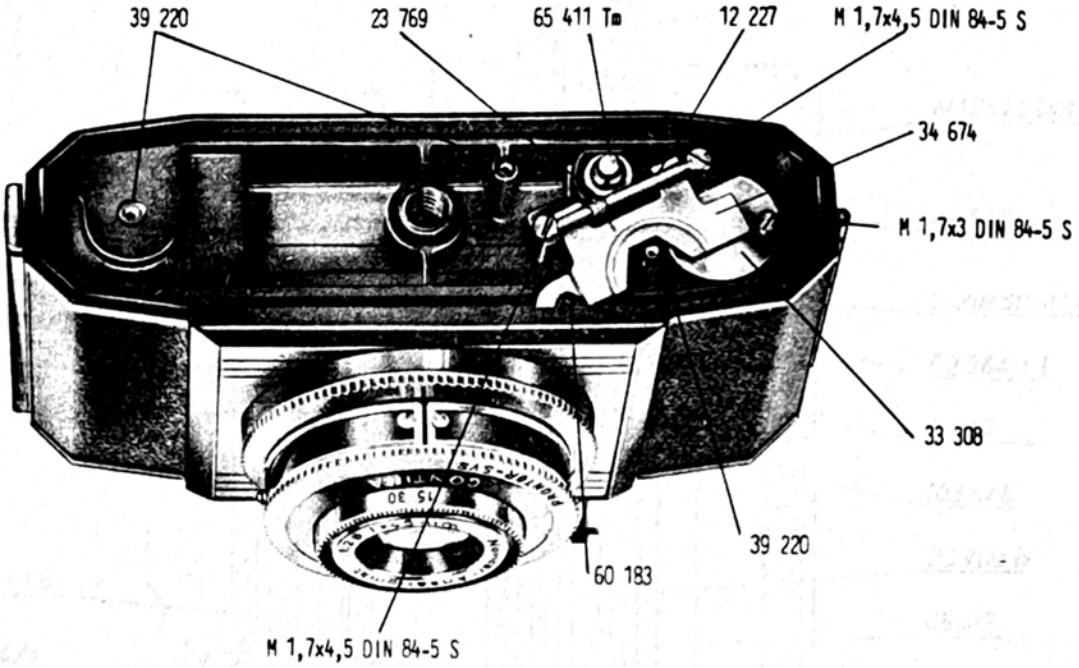

39 001 (0,2 mm)


33 309

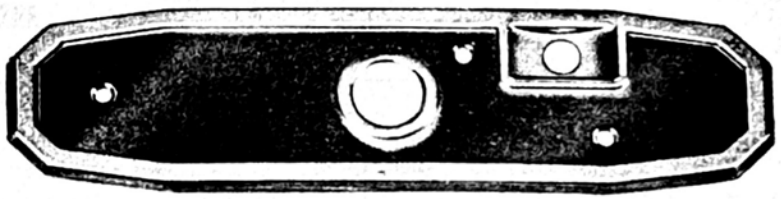

M 1,7x3,5 DIN 63-5 S




Ill. 8

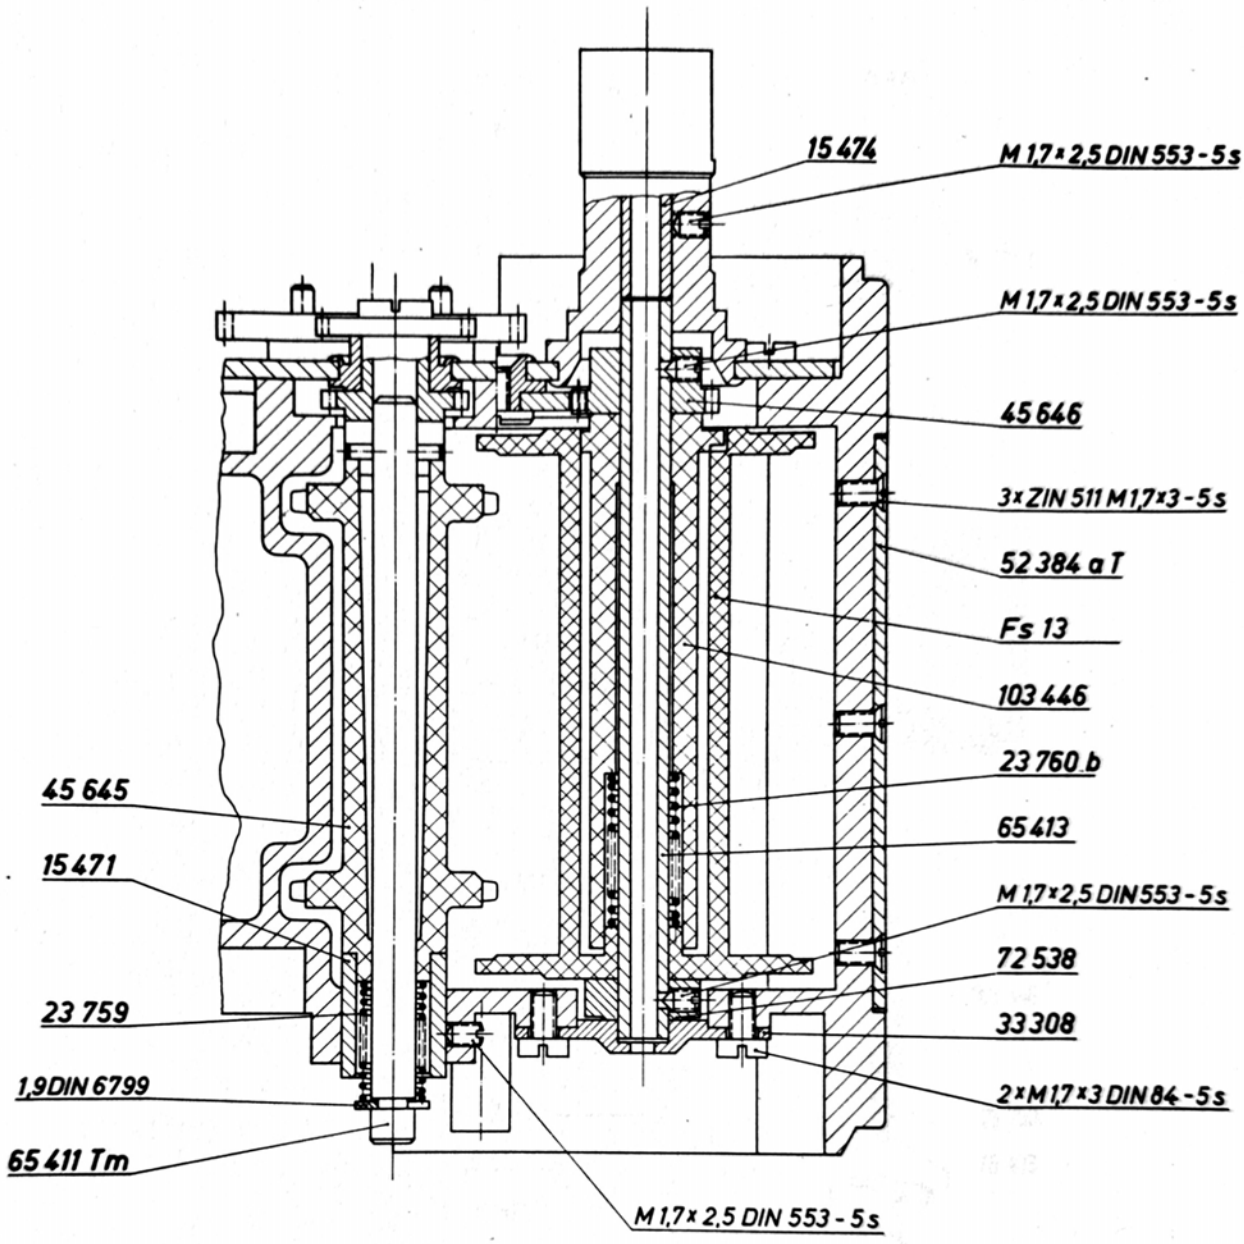

15 474
M 1,7 x 2,5 DIN 553 - 5s
M 1,7 x 2,5 DIN 553 - 5s
45 646
3 x ZIN 511 M 1,7 x 3 - 5s
52 384 a T
Fs 13
103 446
23 760 b
65 413
M 1,7 x 2,5 DIN 553 - 5s
72 538
33 308
2 x M 1,7 x 3 DIN 84 - 5s
45 645
15 471
23 759
1,9 DIN 6799
65 411 Tm
M 1,7 x 2,5 DIN 553 - 5s

Ill. 9


Contina Ia

Contina IIa

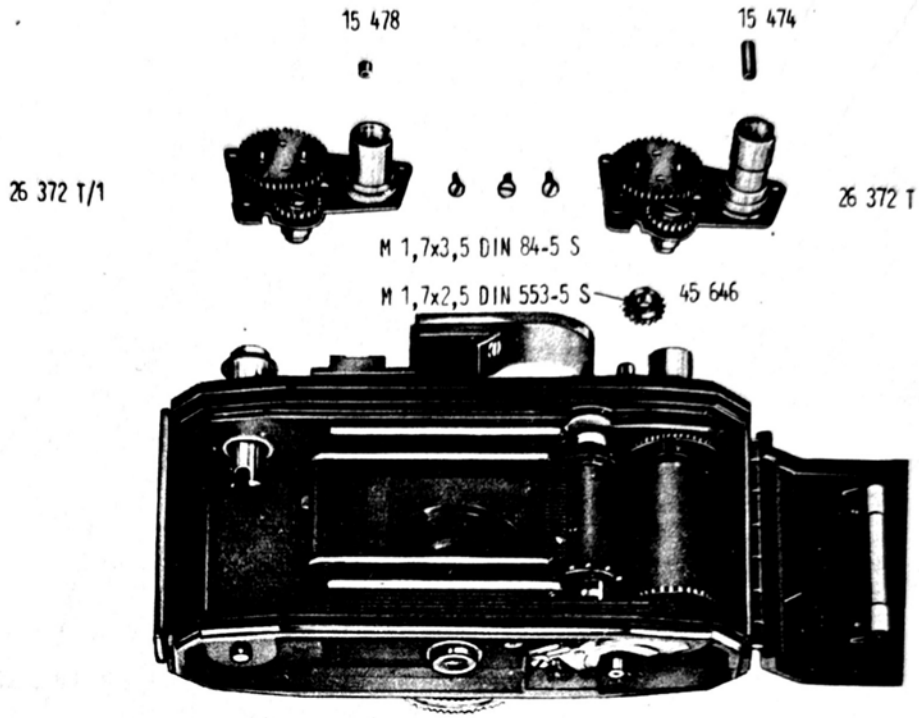


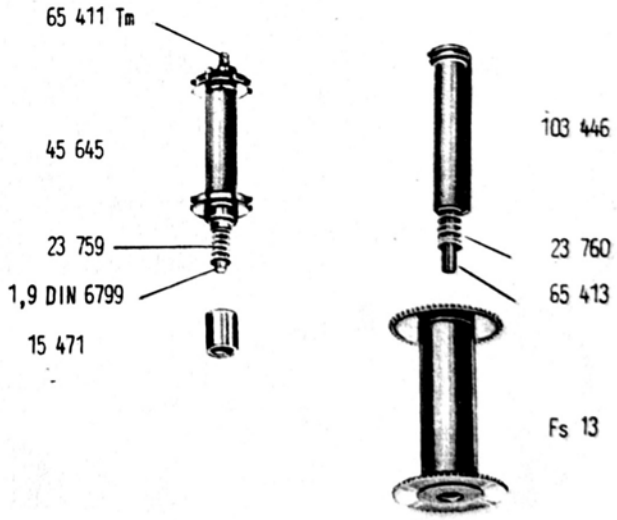

Ill. 10

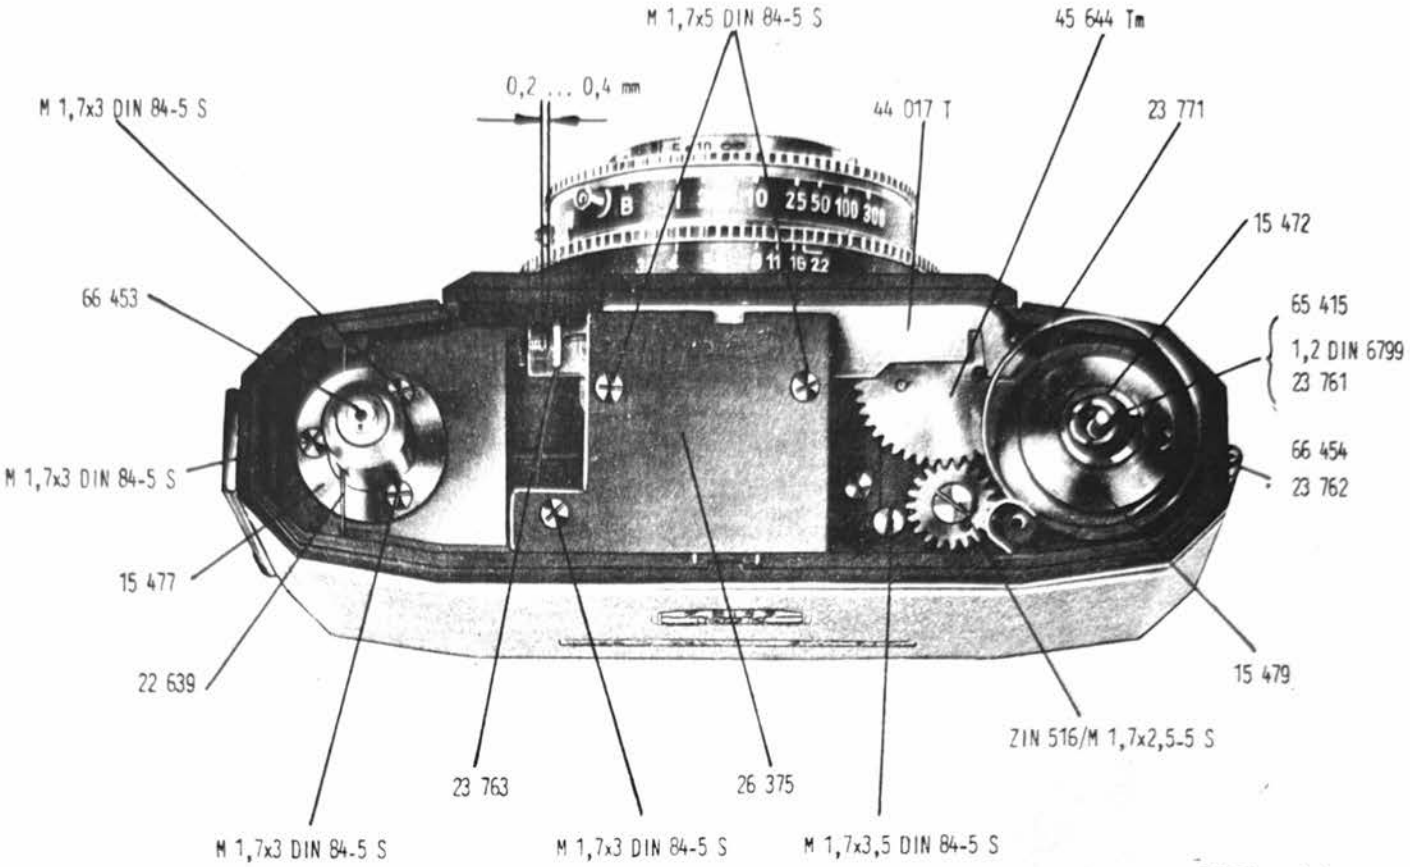
M 1,7x5 DIN 84-5 S
45 644 Tm
0,2 ... 0,4 mm
M 1,7x3 DIN 84-5 S
44 017 T
23 771
15 472
66 453
65 415
1,2 DIN 6799
23 761
M 1,7x3 DIN 84-5 S
66 454
23 762
15 477
22 639
15 479
ZIN 516/M 1,7x2,5-5 S
23 763
26 375
M 1,7x3 DIN 84-5 S
M 1,7x3 DIN 84-5 S
M 1,7x3,5 DIN 84-5 S


Ill. 11

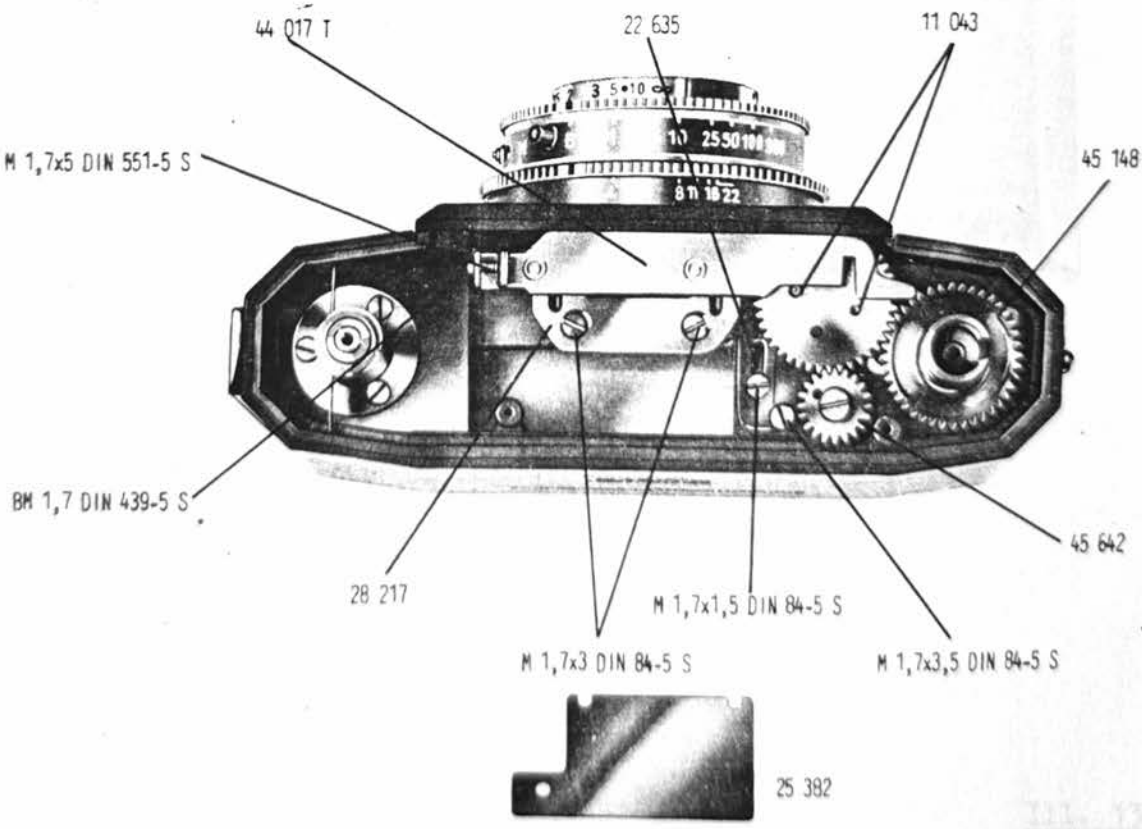
44 017 T
22 635
11 043
M 1,7x5 DIN 551-5 S
45 148
BM 1,7 DIN 439-5 S
45 642
28 217
M 1,7x1,5 DIN 84-5 S
M 1,7x3 DIN 84-5 S
M 1,7x3,5 DIN 84-5 S
25 382

Ill. 12



39 558 (0,1 mm)
39 559 (0,4 mm)
39 575 (0,15 mm)

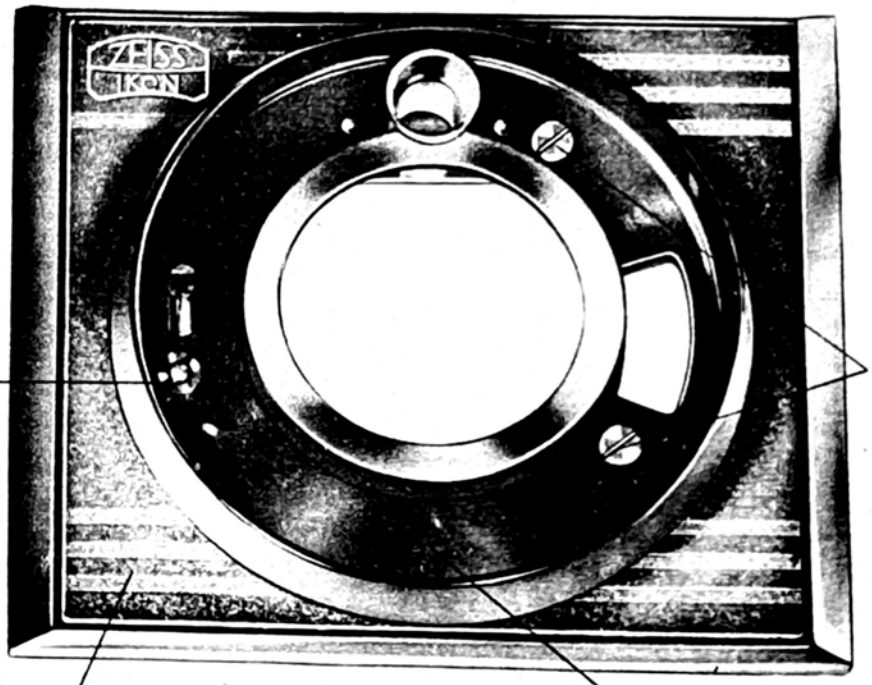


M 1,7/DIN 546-Ms

M 1,7x3 DIN 84-5 S

34 675

75 469 a (f=3,5)
75 470 (f=2,8)

Ill. 13

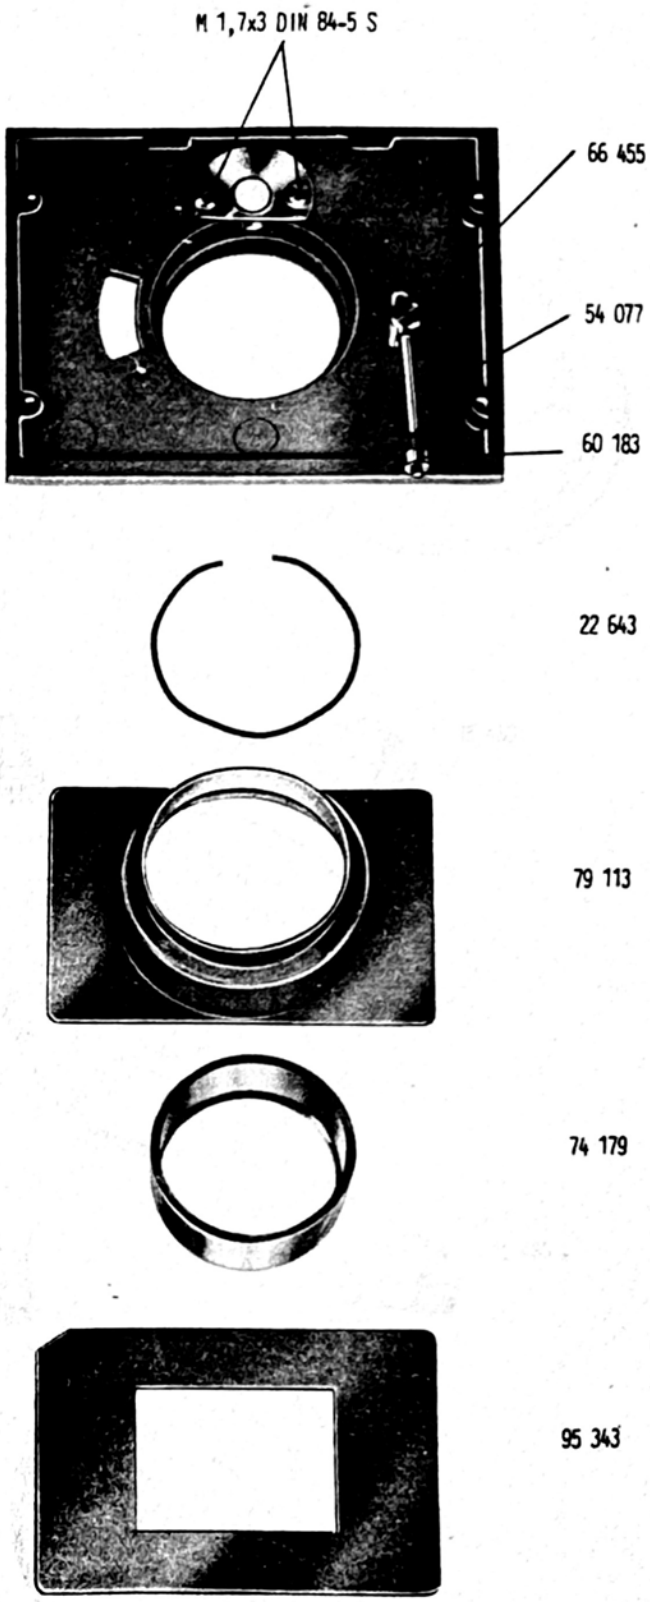

Ill. 14

Novar 3,5/45



Novicar 2,8/45



45 319



15 480






45 319 a




15 480 a



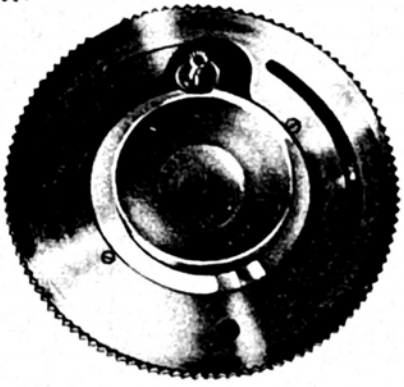


Ill. 15

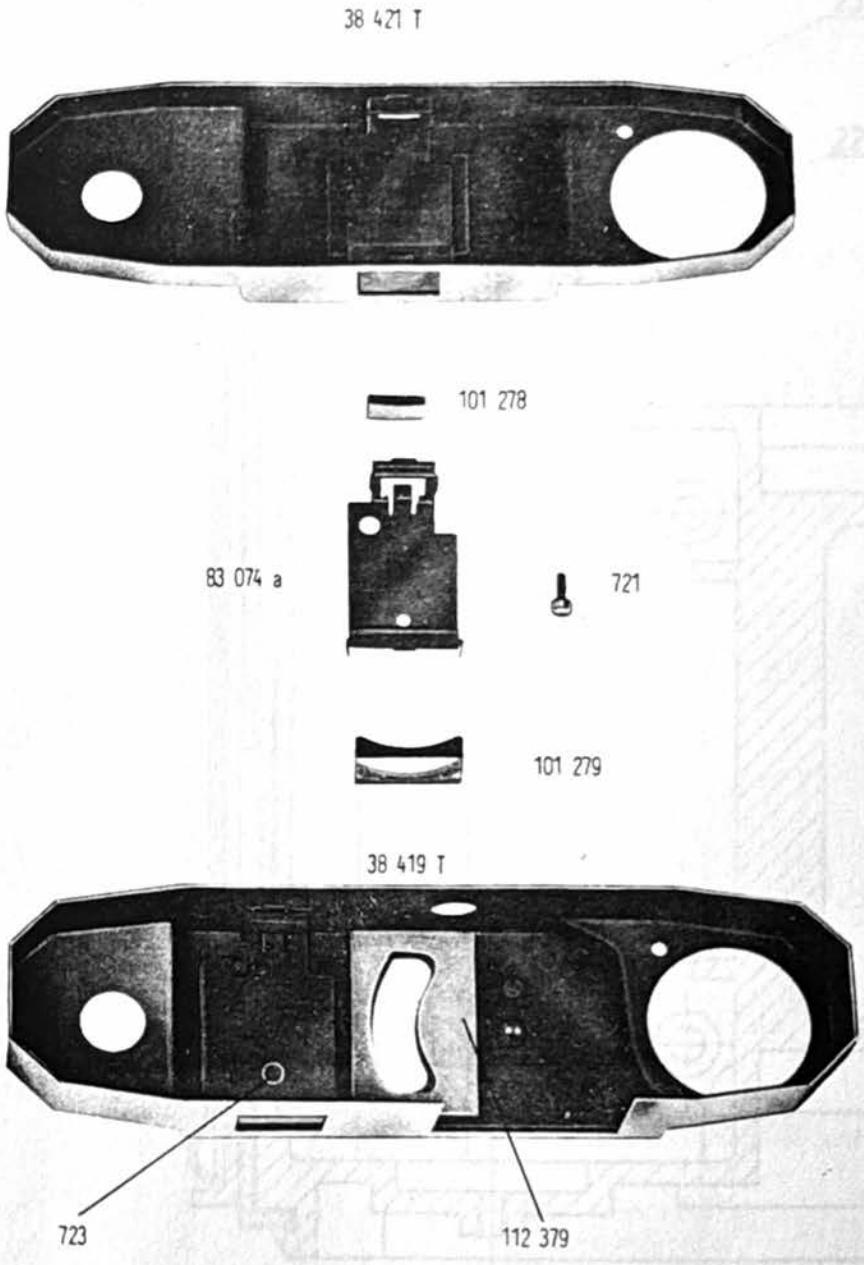

Ill. 16

Contina II a 527 / 24

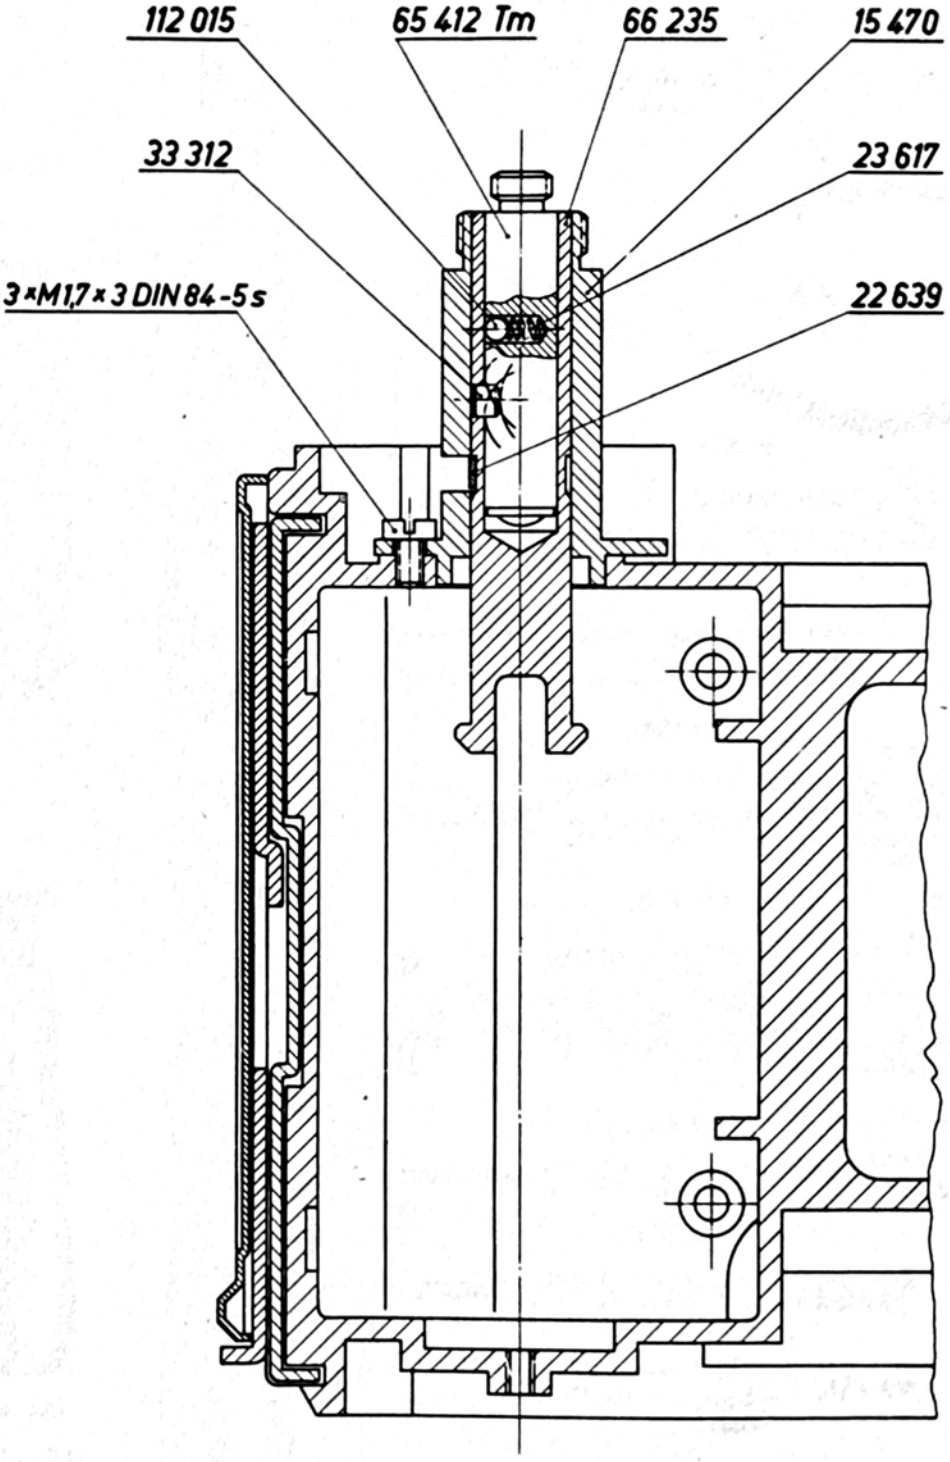

Ill. 17

VM 114




526/24 M/VLe 72




VM 63



526/24 M/VM 86

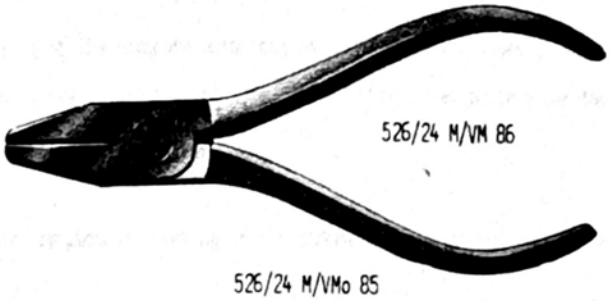


526/24 M/VMo 85

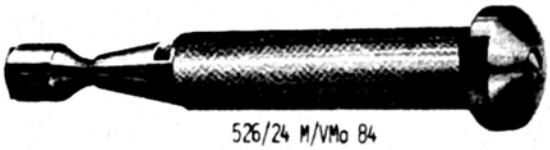

526/24 M/VMo 84



526/24 M/VMo 83

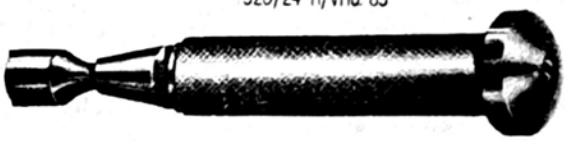

526/24 M/VMo 82



526/24 M/VMo 81



26 376 T/80



526/24 M/VM 80





526/24/Molle 88 (Novar 3,5)

527/24/Molle 81 (Novicar 2,8)



VM 82

Contina Ia, Order No. 526/24 - Contina IIa, Order No. 527/24

Supplement 1 August 1955

The exterior design of the Contina models was altered in August 1955 (intermediate model). The front panel is no longer black, the flash contact is no longer on the side of the shutter but is countersunk into the front panel. The part of the exposure meter casing which is visible has also been changed in colour and is now chromium-plated instead of black.

The new front panel with the new shutter as well as the chromium casing of the exposure meter can be used to replace those of the former design. On the other hand, it is impossible to insert a shutter with lateral flash contact into the new front panel or to alter the old shutter into one with the contact at the back.

The dismantling, the repair of the shutter as well as the assembly and consequent checking of the camera are carried out in the former models. (Instructions for repair, May 1955).

Changes

Front cover plate No. 34 675 is exchanged for No. 34 169. Price DM -.36

New components:

No. of component	Name	Ill.	Group and part of design	Pieces 526/24 Ia	Pieces 527/24 IIa	Price
M 1,7 x 4 DIN 84-5 S	Cylinder screw	20	Pre-assembled front panel 26 388 T	2	2	-.02
22 642 Tm	Pre-assembled contact spring	20	Pre-assembled front panel 26 388 T	1	1	-.24
41 100	Contact spring	20	Pre-assembled complete camera 526/24	1	-	-.05
		20	Pre-assembled complete camera 527/24	-	1	-.05
74 143 a T	Pre-assembled flash contact	18, 20	Pre-assembled front panel 26 388 T	1	-	-.96
		19, 20	Pre-assembled front panel 26 388 T	-	1	-.96

Classification of the shutters and lenses used for the Contina Ia Order No. 526/24 and Contina IIa Order No. 527/24

Shutter No.	Characteristic	Name of lens and number	Camera	Order No.	
Prontor SVS 00-350	lateral flash contact pipe thread chuck axle with brass cams	Novicar 2,8/45 No. 0003.105 normal mount	Contina IIa	527/24	
Prontor SVS 00-350 b	lateral flash contact without inner pipe thread chuck axle with brass cams	Novar 3,5/45 No. 0003.91 snap ring mount	Contina Ia Contina IIa	526/24 527/24	
Prontor SVS 00-350 c	lateral flash contact pipe thread chuck axlw with brass cams	Novar 3,5/45 No. 0003.06 normal mount	Contina Ia Contina IIa	526/24 527/24	
Prontor SVS 00-350 a1	lateral flash contact pipe thread chuck axle with notched pin	Novicar 2,8/45 No. 0003.105 normal mount	Contina IIa	527/24	
Prontor SVS 00-350 b1	lateral flash contact without internal pipe chuck axle with notched pin	Novar 3,5/45 No. 0003.91 snap ring mount	Contina Ia Contina IIa	526/24 527/24	
Prontor SVS 00-350 a2	flash contact at the back pipe thread chuck axlw with notched pin	Novicar 2,8/45 No. 0003.105	Contina IIa Contina IIa	527/24 527/24	intermediate model
Prontor SVS 00-350 b2	flash contact at the back without internal pipe thread chuck axle with notched pin	Novar 3,5/45 No. 0003.91 snap ring mount	Contina Ia Contina IIa	526/24 526/24 527/24 527/24	 intermediate model intermediate model


With the shutters of the models SVS 00-350, SVS 00-350 b, SVS 00-350 c the chuck axle of which is provided with a brass cam, it can happen, when frequently used, that the bearing bush within the shutter becomes wider because of its one-sided stress. Thus the axle will have too much radial play. Unforunately it is impossible to fit a new bearing to these shutters and to provide for a new chuck axle with notched pin, since the makers of the shutter do not supply bearing bushes.

Such shutters must be sent to Messrs. Gauthier of Calmbach or to Zeiss Ikon A.G. Stuttgart, who will forward them to Calmbach.


The soldering points at contact spring 22 642 Tm and contact nipple 74 143 a T should by no means be filled with soldering paste since otherwise there will be the risk of a puncture. You should, therefore use colophony-tin for soldering.

Zeiss Ikon A.G.
Stuttgart


CAMERA CRAFT, Inc.
485 FIFTH AVENUE
NEW YORK 17, N.Y.

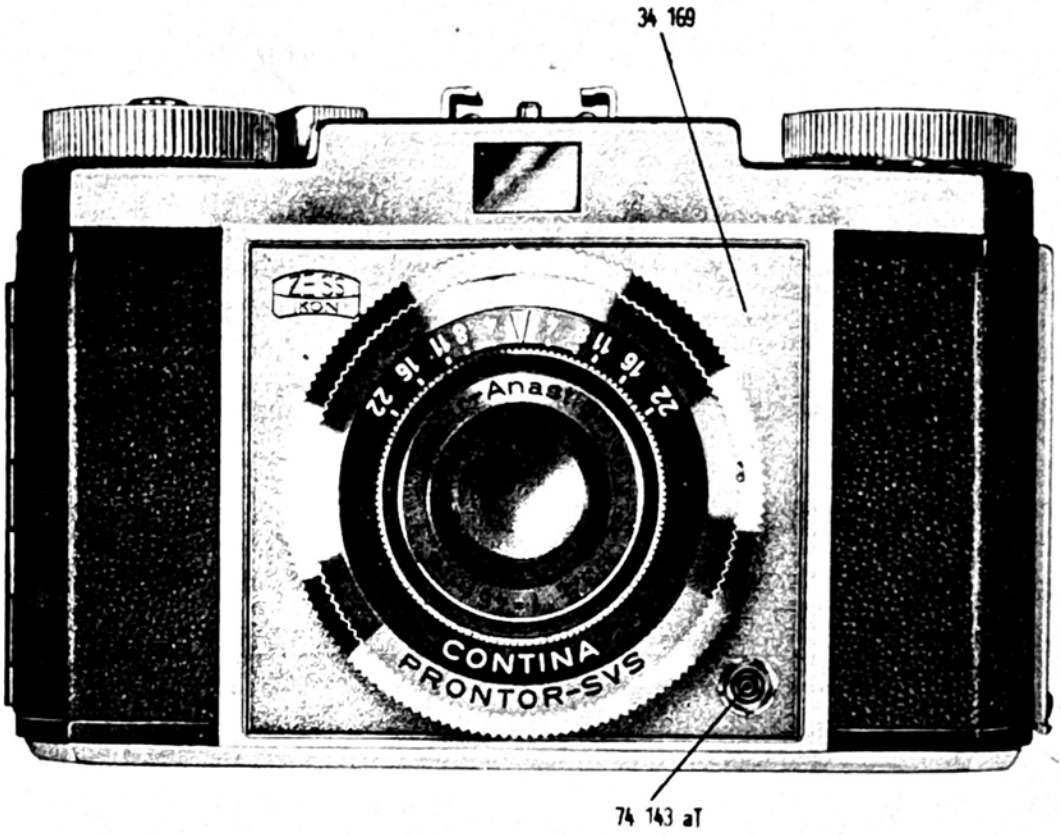

34 169
ZEISS
IKON
CONTINA
PRONTOR-SVS
74 143 aT

Ill. 18

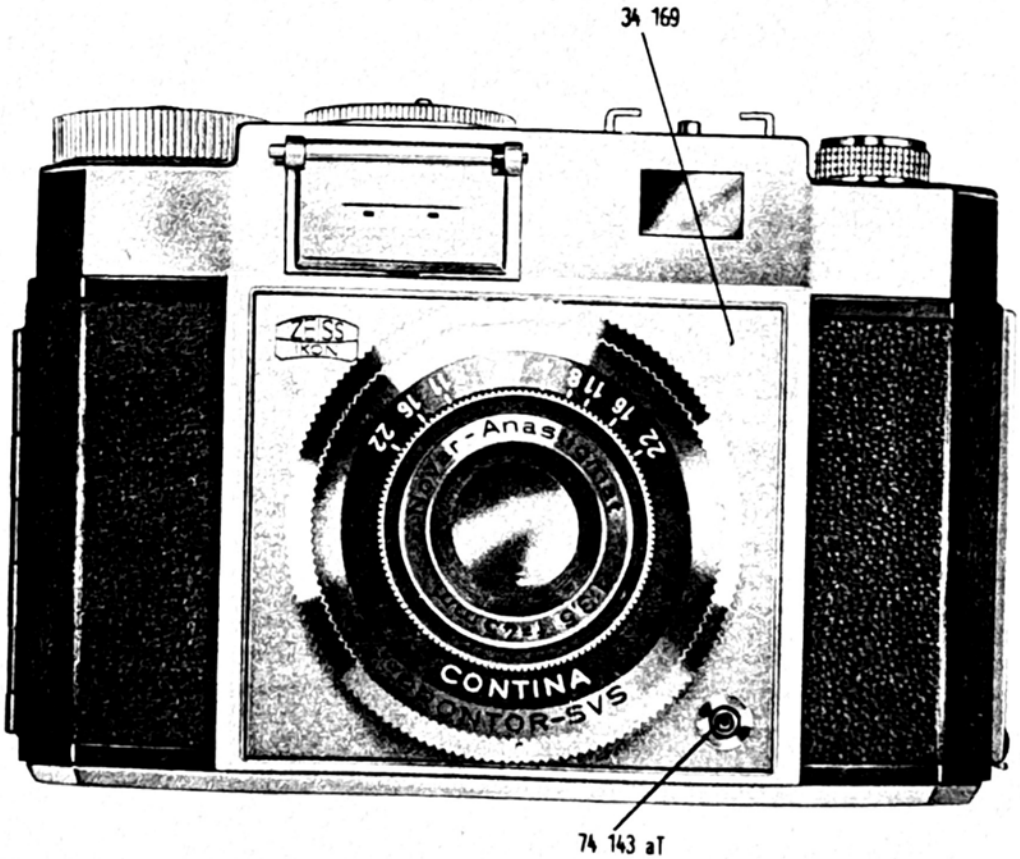
34 169
ZEISS
IKON
CONTINA
74 143 aT


Ill. 19

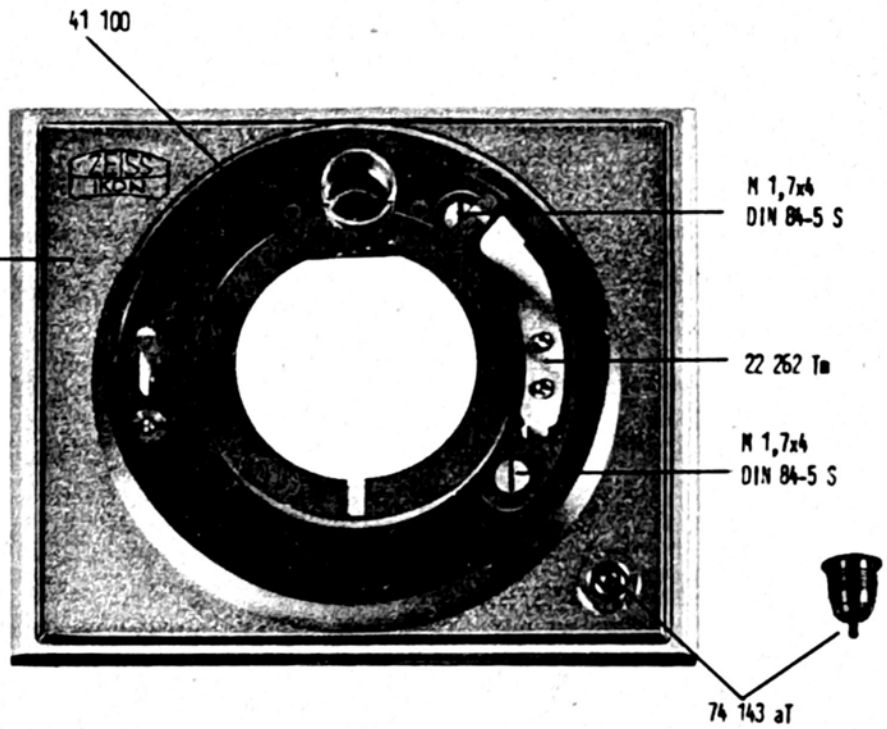
41 100
34 169
M 1,7x4
DIN 84-5 S
22 262 Tm
M 1,7x4
DIN 84-5 S
74 143 aT

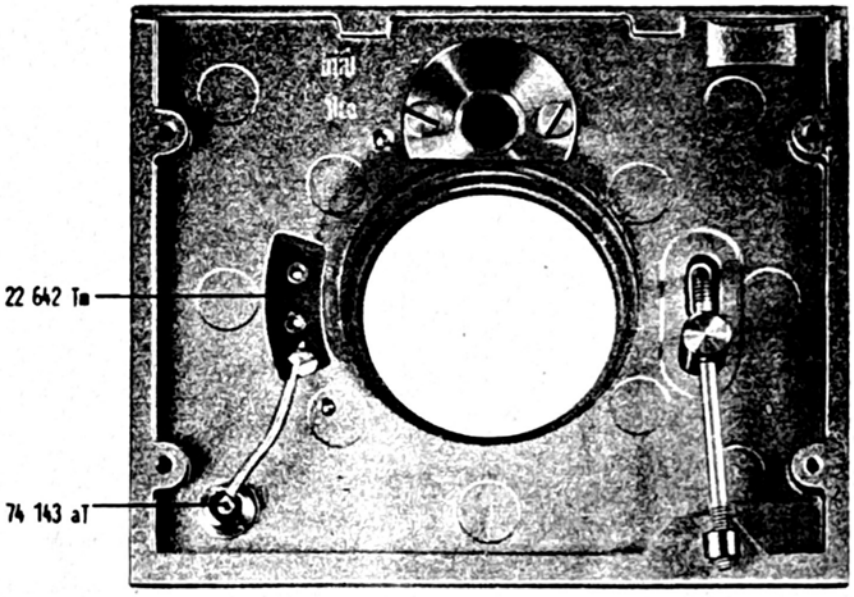
22 642 Tm
74 143 aT

Ill. 20



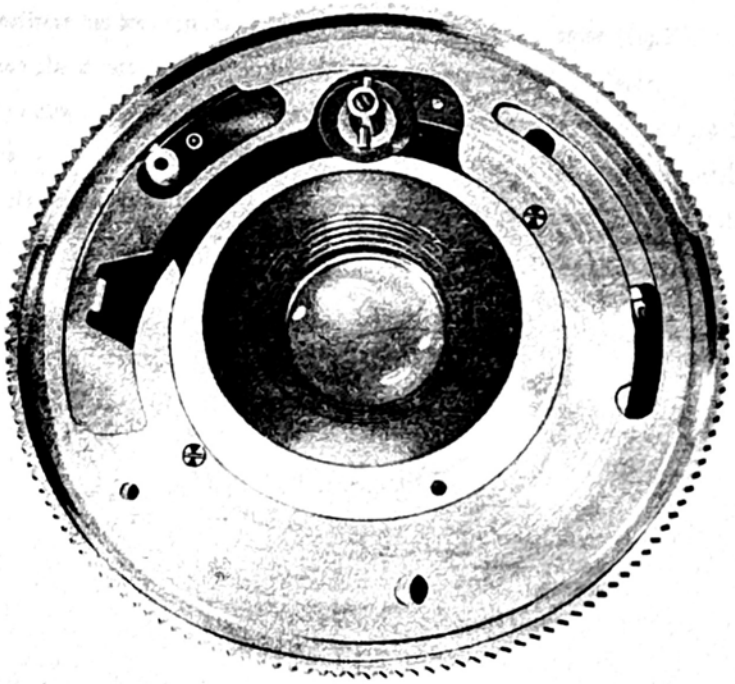

Ill. 21

Contina I Order No. 526/24 - Contina II Order No. 527/24

Second Addenda /November 1956

Contina I

The thread for accessories on the lens mount has been altered. The outer thread has been replaced by an inner thread. This has also changed the exterior appearance of the lens mount. However, it will be possible to use all the accessories hitherto supplied (fig.24 and 25). Model 526/24 AM/26: Conversion of this camera at a later date is impossible.

Model 526/24 BM/21 has been equipped with an exposure value shutter. This necessitates a new front panel (fig.26). Conversion at a later date is also impossible. The fastening of the viewfinder lens has been altered from model 521/24 AM on as shown in fig. 28. New accessories are made to fit the new thread, that is to say, they have bolt threads instead of nut threads hitherto used. Customers who have bought cameras with the old thread will be supplied with an intermediate ring 74 199, which, for the time being, will be free of charge when new accessories are bought.

Contina II

Models 527/24 AM/21 and /25 have been equipped with exposure meters with follow-up pointer. They also have the new inner thread for accessories (figs.22, 24 and 25). Models 527/24 BM/21 and /25 will be equipped with exposure value shutters. This necessitates a change of scales on the exposure meter (fig.29 to the right). Where an exposure meter with follow-up pointer is employed the viewfinder has been combined with the housing of the exposure meter (fig.30).

A paper disc 113 835 has been placed beneath the film wind lever to prevent sliding of the lever.

When the top plate is mounted care should be taken to leave sufficient play between the cover plate and the film wind lever as well as between the exposure meter setting knob and the cover plate, but in this case the operative word is sufficient, since too much play may be harmful. The washers placed here must be returned to the exact spots where they were before dismantling.

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 526/ 24 21	24A 21	24B 21	Preis Price Precio
M 1,7x4,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	8	Gehäuse mont. 52 383 T/1 Housing Caja	2			
M 1,7x6 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 526/24 AM/21 Camera 526/24 BM/21 Cámara 526/24 ZM/21		2	2	
BM 1,7 DIN 439 5S	Sechskantmutter Hexagon nut Tuerca hexagonal	12	Camera compl. 526/24 AM/21 Camera 526/24 BM/21 Cámara 526,24 ZM/21		1	1	
M 1,7 DIN 546 Ms	Schlitzmutter Slotted nut Tuerca entallada	13,26	Frontplatte mont. 26 388aT/2 Front plate 26 388bT Placa frontal 26 388aT 26 376 T	1	1	1	
M 1,7x4 DIN 551 5S	Gewindestift Grub screw Perno roscado	12	Camera compl. 526/24 M/24 Camera Cámara	1			
M 1,7x5 DIN 551 5S	Gewindestift Grub screw Perno roscado	12	Camera compl. 526/24 AM/21 Camera 526/24 BM/21 Cámara 526/24 ZM/21		1	1	
M 1,7x2,5 DIN 553 5S	Gewindestift Grub screw Perno roscado	9,10	Gehäuse mont. 52 383 T/1 Housing 52 383cT/1 Caja 52 383aT/1	4	3	3	
1,2 DIN 6799	Benzing-Sicherung Benzing-protector Protector-Benzing	6,11	Camera compl. 526/24 AM/21 Camera 526/24 BM/21 Cámara 526/24 ZM/21 526/24 M/24	1	1	1	
1,9 DIN 6799	Benzing-Sicherung Benzing-protector Protector-Benzing	9,10	Gehäuse mont. 52 383 T/1 Housing 52 383cT/1 Caja 52 383aT/1	1	1	1	
3,2 DIN 6799	Benzing-Sicherung Benzing-protector Protector-Benzing		Grundplatte mont. 26 372 T/1 Base plate Placa de base	1	1	1	1
ZIN 511 M 1,7x3 5S	Senkschraube Countersunk screw Tornillo embutido	9	Gehäuse mont. 52 383 T/1 Housing 52 383cT/1 Caja 52 383aT/1	3	3	3	
ZIN 512 M 1,7x3 5S	Senkschraube Countersunk screw Tornillo embutido	1	Camera compl. 526/24 M /24 Camera 526/24 AM/21 Cámara 526/24 BM/21 526/24 ZM/21	1	1	1	
ZIN 516 M 1,7x2,5 5S	Zylinderschraube Fillister head screw Tornillo sin fin	11	Grundplatte mont. 26 372 T/1 Base plate Placa de base	1	1	1	1

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 21	24Z 21	24A 21	24B 21	Preis Price Precio
ZIN 516 N 1,7x4,5 5 S	Zylinderschraube Fillister-head screw Tornillo sin fin		Gehäuse mont. Housing Caja	52 383 c T/1		2	2	2	
65	Zylinderschraube Fillister-head screw Tornillo sin fin		Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
184	Schraube Screw Tornillo	1,6,22	Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21 526/24 M/24	1	1	1	1	
210	Schraube Screw Tornillo		Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21 526/24 M/24	1	1	1	1	
Ss 162	Zapfenschraube Pivoted screw Tornillo pivoteado		Gehäuse mont. Housing Caja	52 383 cT/1 52 383 aT/1		1	1	1	
721	Zylinderniet Cylinder head Remache de cabeza cilíndrica	16, 28	Deckkappe mont. Top cover Tapa superior	38 421 T 38 440 T	1	1	1	1	
979	Senkniet Countersunk rivet Remache embutido	28	Deckkappe mont. Top cover Tapa superior	38 421 T 38 440 T	2	2	2	2	
Fs 13	Filmspule Film spool Carrete	5,9,10	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1	
12 225	Achse Axle Eje	5	Rückdeckel mont. Back panel Tapa posterior	52 384 T 52 384aT	1	1	1	1	
12 227a	Achse Axle Eje	8	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1	
14 083	Auslösenippel Release knob Botón disparador	1,6,22	Camera compl. Camera Cámara	526/24 N/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
15 471	Buchse Bushing Casquillo	5,9,10	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1	
15 472	Führungsbuchse Bushing Casquillo	11	Camera compl. Camera Cámara	526/24 N/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/				Preis Price Precio
					24 21	24Z 21	24A 21	24B 21	
15 473	Lagerbuchse Bearing bush Casquillo de cojinete	6	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
15 477	Führungsbuchse f.Rückspulung Bushing f.rewind button Casquillo p.botón rebobinador	11	Gehäuse mont. Housing Caja	52 383 T/1 52 383 cT/1 52 383 aT/1	1	1	1	1	
15 478	Buchse Bushing Casquillo	10	Gehäuse mont. Housing Caja	52 383 T/1 52 383 cT/1 52 383 aT/1	1	1	1	1	
15 479	Mitnehmerbuchse Winding bush Casquillo de arrastre	11	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
15 480 15 480 a 15 480 b	Lagerbuchse Bearing bush Casquillo de cojinete	15	Frontplatte Front plate Placa frontal	26 376 T 26 368 aT/2	1	1	1		
15 526 a	Lagerbuchse Bearing bush Casquillo de cojinete		Frontplatte Front plate Placa frontal	26 388 bT				1	
22 052	Feder Spring Resorte	28	Deckkappe mont. Top cover Tapa superior	28 421 T 28 440 T		1	1	1	
22 635	Sperrfeder Locking spring Resorte bloqueador	12	Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
22 636	Feder Spring Resorte		Deckkappe Top cover Tapa superior	38 421 T	1	1			
22 639	Feder Spring Resorte	16, 17	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1	
22 640	Spiralfeder Spring Resorte		Camera compl. Camera Cámara	526/24 M/24	1				
22 641	Schaltfeder Spring for counter mechanism Resorte p.mecanismo contador	6	Camera compl. Camera Cámara	526/24 M/21	1				
22 641 aIm	Schaltfeder Spring for counter mechanism Resorte p.mecanismo contador		Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21		1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 21	24Z 21	24A 21	24B 21	Preis Price Precio
22 642 Tm	Kontaktfeder	20, 26	Frontplatte mont.	26 388 aT/2			1		
	Contact spring		Front plate	26 388 bT				1	
	Resorte de contacto		Placa frontal	26 388 aT		1			
22 643	Federscheibe	14	Camera compl.	526/24 M/24	1				
	Spring disc		Camera	526/24 AM/21			1		
	Disco p. resorte		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
23 759	Druckfeder	9, 10	Gehäuse mont.	52 383 T/1	1				
	Pressure spring		Housing	52 383cT/1			1	1	
	Resorte de presión		Caja	52 383aT/1		1			
23 760 23 760 b	Druckfeder	9, 10	Gehäuse mont.	52 383 T/1	1				
	Pressure spring		Housing	52 383cT/1			1	1	
	Resorte de presión		Caja	52 383aT/1		1			
23 761	Druckfeder	6, 11	Camera compl.	526/24 M/24	1				
	Pressure spring		Camera	526/24 AM/21			1		
	Resorte de presión		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
23 762	Druckfeder	11	Camera compl.	526/24 M/24	1				
	Pressure spring		Camera	526/24 AM/21			1		
	Resorte de presión		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
23 763	Rückholfeder	11	Camera compl.	526/24 M/24	1				
	Pull-back spring		Camera	526/24 AM/21			1		
	Muelle de retración		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
23 769 23 769 a	Drehfeder	8	Gehäuse mont.	52 383 T/1	1				
	Torsion spring		Housing	52 383cT/1			1	1	
	Resorte de torsión		Caja	52 383aT/1		1			
23 771	Drehfeder	11	Camera compl.	526/24 AM/21			1		
	Torsion spring		Camera	526/24 BM/21				1	
	Resorte de torsión		Cámara	526/24 ZM/21		1			
25 390	Unterlage		Camera compl.	526/24 AM/21			1		
	Washer		Camera	526/24 BM/21				1	
	Arandela		Cámara	526/24 ZM/21		1			
25 405	Unterlage		Camera compl.	526/24 AM/21			1		
	Washer		Camera	526/24 BM/21				1	
	Arandela		Cámara						
26 372Tm/1	Grundplatte vormont.		Grundplatte mont.	26 372 T/1	1	1	1	1	
	Base plate		Base plate						
	Placa de base		Placa de base						
26 372 T/1	Grundplatte mont.	10	Gehäuse mont.	52 383 T/1	1				
	Base plate		Housing	52 383cT/1			1	1	
	Placa de base		Caja	52 383aT/1		1			

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 21	24A 21	24B 21	Preis Price Precio
26 374 Tm 26 374aTm	Andrückplatte mont. Pressure plate Plancha de presión	5	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1 1	1	
26 375	Deckplatte Cover plate Placa de recubrimiento	11	Gehäuse mont. Housing Caja	52 383 T/1	1			
			Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21		1 1	1	
26 376	Frontplatte Front plate Placa frontal		Frontplatte mont. Front plate Placa frontal	26 376 T	1			
26 376 T	Frontplatte Front plate Placa frontal		Camera compl. Camera Cámara	526/24 M/24	1			
26 388 a 26 388 b	Frontplatte Front plate Placa frontal	22,24,26	Frontplatte mont. Front plate Placa frontal	26 388 aT/1 26 388 bT		1	1	1
26 388 aT 26 388aT/2 26 388bT	Frontplatte mont. Front plate Placa frontal	24, 26	Camera compl. Camera Cámara	526/24 ZM/21 526/24 AM/21 526/24 BM/21		1	1	1
28 217	Führungsleiste Guide gib Aletra-guía	12	Gehäuse mont. Housing Caja	52 383 T/1	1			
			Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21		1 1	1	
33 308	Lagerflansch Bearing flange Brida de cojinete	8, 9	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1
33 309	Drücker Rewind release button Botón de desembargo	2, 8	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1 1	1	
34 169	Frontdeckblech Front cover plate Plancha de recubrimiento frontal	18,19,20 24,26	Frontplatte Front plate Placa frontal	26 388cT/2 26 388bT 26 388aT		1 1	1	1
34 674	Auslöseklappe Release flap Placa disparadora	8	Gehäuse mont. Housing Caja	52 383 T/1 52 383cT/1 52 383aT/1	1	1	1	1

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 / 24A / 24B 21 / 21 / 21 / 21	Preis Price Precio
34 675	Frontdeckblech Front cover plate Plancha de recubrimiento frontal	1, 13	Frontplatte Front plate Placa frontal	26 376 T	1	
38 420	Deckkappe unten Lower cover Tapa inferior	2, 8	Camera compl. Camara Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1 / 1 / 1	
38 421	Deckkappe Cover Tapa		Deckkappe mont. Cover Tapa	36 321	1 / 1	
38 421 T	Deckkappe mont. Cover Tapa	1,2,16	Camera compl. Camera Cámara	526/24 M/24 526/24 ZM/21	1 / 1	
38 440	Deckkappe Cover Tapa	28	Deckkappe mont. Cover Tapa	38 440 T	1 / 1	
38 440 T	Deckkappe mont. Cover Tapa	28	Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21	1 / 1	
39 001	Unterlagscheibe Washer Arandela	8	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1+) / 1+) / 1+) / 1+)	
39 065	Unterlagscheibe Washer Arandela		Grundplatte mont. Base plate Placa de base	26 372 T/1 26 372cT/1	1 / 1 / 1 / 1	
39 194	Scheibe Disc Disco	22	Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21	1+) / 1	
39 426	Scheibe Disc Disco		Gehäuse mont. Housing Caja	52 383cT/1	1+) / 1+)	
39 436	Scheibe Disc Disco		Grundplatte mont. Base plate Placa de base	26 272 T/1	1+) / 1+) / 1+)	
39 511	Scheibe Disc Disco		Grundplatte mont. Base plate Placa de base	26 272 T/1	1+) / 1+) / 1+)	
39 555 a	Scheibe Disc Disco	6, 7	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1 / 1 / 1 / 1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 526/	Preis Price Precio
				24 24Z 24A 24B 21 21 21 21	
39 556	Scheibe Disc Disco		Camera compl. 526/24 M/21 Camera Cámara	1	
39 557	Scheibe Disc Disco	7	Camera compl. 526/24 M/24 Camera 526/24 AM/21 Cámara 526/24 BM/21 526/24 ZM/21	1+) 1+)	
39 558	Scheibe Disc Disco	13	Camera compl. 526/24 M/24 Camera 526/24 AM/21 Cámara 526/24 ZM/21	1+) 1+)	
39 559	Scheibe Disc Disco	13	Camera compl. 526/24 M/24 Camera 526/24 AM/21 Cámara 526/24 ZM/21	1+) 1+)	
39 575	Scheibe Disc Disco	13	Camera compl. 526/24 M/21 Camera 526/24 ZM/21 Cámara	1+)	
39 584	Scheibe Disc Disco	7	Camera compl. 526/24 AM/21 Camera 526/24 ZM/21 Cámara	1+)	
39 586	Scheibe Disc Disco	6	Camera compl. 526/24 AM/21 Camera 526/24 BM/21 Cámara 526/24 ZM/21	1+)	1+)
39 587	Scheibe Disc Disco		Camera compl. 526/24 ZM/21 Camera Cámara	1+)	
39 610	Scheibe Disc Disco	21	Camera compl. 526/24 BM/21 Camera Cámara		1.
39 615	Scheibe Disc Disco	26,29	Camera compl. 526/24 BM/21 Camera Cámara		1+)
39 616	Scheibe Disc Disco	26	Camera compl. 526/24 BM/21 Camera Cámara		1+)
39 635	Scheibe Disc Disco		Camera compl. 526/24 BM/21 Camera Cámara		1
41 100	Kontaktscheibe Contact disc Disco de contacto	20	Camera compl. 526/24 AM/21 Camera 526/24 ZM/21 Cámara	1 1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/				Preis Price Precio
					24 21	24Z 21	24A 21	24B 21	
41 105	Kontaktscheibe Contact disc Disco de contacto	26	Camera compl. Camera Cámara	526/24 BM/21				1	
42 228 Tm	Anschlag mont. Stop Tope	6	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
44 017 T	Zahnstange mont. Rack Cremallera	11,12	Gehäuse mont. Housing Caja	52 383 T/1	1				
			Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21 526/24 ZM/21		1	1	1	
45 148	Stirnrad (40 Zähne) Spur wheel Rueda frontal	12	Camera compl. Camera Cámara	526/24 M/21 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
45 319 45 319 b	Aufzugsrad (16 Zähne) Winding wheel Rueda de arrastre	15	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 ZM/21	1	1	1		
45 324	Aufzugsrad (16 Zähne) Winding wheel Rueda de arrastre		Camera compl. Camera Cámara	526/24 BM/24				1	
45 338	Schaltring Ratched wheel Rueda de trinquete	22	Camera compl. Camera Cámara	526/24 AM/24 526/24 BM/24			1	1	
45 641 45 641 a	Stirnrad (18 Zähne) Spur wheel Rueda frontal	5	Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
45 642	Stirnrad (20 Zähne) Spur wheel Rueda frontal	12	Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
45 643	Zwischenrad (22 Zähne) Intermediate gear Rueda intermediata		Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
45 644 Tm	Stirnrad mont. Spur wheel Rueda frontal	11	Grundplatte mont. Base plate Placa de base	26 372 T/1	1	1	1	1	
45 645 45 645 a	Filmtrommel Film drum Tambor p.pelicula	5, 9 10	Gehäuse mont. Housing Caja	52 383 T/1 52 383 cT/1 52 383 aT/1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/				Preis Price Precio
					24 21	24Z 21	24A 21	24B 21	
45 646	Stirnrad (18 Zähne)	9, 10	Gehäuse mont.	52 383 T/1	1				
	Spur wheel		Housing	52 383 cT/1			1	1	
	Rueda frontal		Caja	52 383 aT/1		1			
50 283 aT	Linsenfassung mont.	28	Deckkappe mont.	38 440 T			1	1	
	Mount w. lens		Top cover						
	Montura p. lente		Tapa superior						
52 384 T	Rückdeckel mont.	9	Gehäuse mont.	52 383 T/1	1				
52 384 aT	Back panel		Housing	52 383 cT/1			1	1	
	Tapa posterior		Caja	52 383 aT/1		1			
54 077	Zugstange	14	Frontplatte	26 376 T	1				
	Traction rod		Front plate	26 388 aT/2			1		
	Varilla de tracción		Placa frontal	26 388 bT				1	
				26 388 aT		1			
60 182	Schlitzmutter	6, 7	Camera compl.	526/24 M/24	1				
	Slotted nut		Camera	526/24 AM/21			1		
	Tuerca entallada		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
60 183	Schlitzmutter	8, 14	Camera compl.	526/24 M/24	1				
	Slotted nut		Camera	526/24 AM/21			1		
	Tuerca entallada		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
65 411 Tm	Achse mont.	8, 9, 10	Gehäuse mont.	52 383 T/1	1				
65 411 aTm	Axle		Housing	52 383 cT/1			1	1	
	Eje		Caja	52 383 aT/1		1			
65 413	Spulenachse	9, 10	Gehäuse mont.	52 383 T/1	1				
	Spool axle		Housing	52 383 cT/1			1	1	
	Eje de carrete		Caja	52 383 aT/1		1			
65 415	Auslösestange	11	Camera compl.	526/24 M/24	1				
	Release rod		Camera	526/24 AM/21			1	1	
	Varilla de disparo		Cámara	526/24 BM/21					
				526/24 ZM/21		1			
66 453	Mitnehmerbolzen	11	Gehäuse mont.	52 383 T/1	1				
	Winding pin		Housing	52 383 cT/1			1	1	
	Perno de arrastre		Caja	52 383 aT/1		1			
66 454	Mitnehmerbolzen	11	Camera compl.	526/24 M/24	1				
	Winding pin		Camera	526/24 AM/21			1		
	Perno de arrastre		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
66 455	Führungsbolzen	14	Frontplatte	26 376 T	1				
	Guide pin		Front plate	26 388 aT/1			1		
	Perno de guia		Placa frontal	26 388 bT				1	
				26 388 aT		1			

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 21	24Z 21	24A 21	24B 21	Preis Price Precio
75 467	Zählscheibe	1,6,22	Camera compl.	526/24 M/24	1				
	Counter disc		Camera	526/24 AM/21			1		
	Disco contador		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
75 469	Skalenring f.Novar 1:3,5/45	13	Frontplatte	26 376 T	1				
75 469 a	Scale ring f.Novar f=1:3,5-45 mm		Front plate	26 388 aT		1			
	Anillo con escala p.Novar 1:3,5/45		Placa frontal						
75 514	Skalenring f.Novar 1:3,5/45	24	Frontplatte	26 388 a T/2			1		
	Scale ring f.Novar f=3,5-45 mm		Front plate						
	Anillo con escala p.Novar 1:3,5/45		Placa frontal						
79 113	Tubus	14	Camera compl.	526/24 M/24	1				
79 113 a	Tube		Camera	526/24 AM/21			1		
	Tube		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
83 074	Sucherfassung	16	Deckkappe	38 421 T	1				
83 074 a	Mount of viewfinder		Top cover			1			
	Montura de visor		Tapa superior						
83 075	Sucherfassung	28	Deckkappe	38 440 T			1		
83 075 a	Mount of viewfinder		Top cover					1	
	Montura de visor		Tapa superior						
85 562 a	Aufzugshebel	1,2,6,7	Camera compl.	526/24 M/24	1				
	Winding lever	22,23	Camera	526/24 AM/21			1		
	Palanca de arrastre		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
95 343	Blende	5,14	Camera compl.	526/24 M/24	1				
	Diaphragm		Camera	526/24 AM/21			1		
	Diafragma		Cámara	526/24 BM/21				1	
				526/24 ZM/21		1			
101 278	Suchereinblicklinse	2,5	Deckkappe	38 421 T	1	1			
	Lens f.eyepiece of viewfinder	16	Top cover						
	Lente p.mirilla de visor		Tapa superior						
101 279	Sucherausblicklinse	1,16,28	Deckkappe	38 421 T/1	1	1			
	Front lens of viewfinder		Top cover	38 440 T			1	1	
	Lente frontal de visor		Tapa superior						
103 446	Buchse	10	Gehäuse mont.	52 383 T/1	1				
	Bushing		Housing	52 383 cT/1			1	1	
	Casquillo		Caja	52 383 aT/1		1			
103 447	Indexring	1,6	Camera compl.	526/24 M/24	1				
	Index ring		Camera	526/24 ZM/21		1			
	Anillo indicador		Cámara						
109 181	Bezug compl.		Camera compl.	526/24 M/24	1	1	1	1	
	Covering		Camera	526/24 AM/21					
	Cubierta		Cámara	526/24 BM/21					
				526/24 ZM/21					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje		Stück Number Número 526/ 24 21	 24Z 21	 24A 21	 24B 21	Preis Price Precio
109 180/1	Bezug für Gehäuse Covering f.housing Cubierta p.caja	1,22	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
109 180/2	Bezug für Gehäuse Covering f.housing Cubierta p.caja	1,22	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
109 180/3	Bezug für Gehäuserückwand Covering f.back panel of housing Cubierta p.tapa posterior de caja	2,22	Camera compl. Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
109 180/4	Bezug für Boden Covering f.cover lower Cubierta p.tapa inferior	2,8,22	Camera Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 526/24 ZM/21	1	1	1	1	
109 180/5	Bezug für Deckblech Covering f.cover plate Cubierta p.placa recubridora	2,22	Camera Camera Cámara	526/24 M/24 526/24 AM/21 526/24 BM/21 525/24 ZM/21	1	1	1	1	
113 820	Dichtungsstreifen Tightening strip Tira impermeable		Gehäuse mont. Housing Caja	52 383 c T/1 52 383 a T/1		1	1	1	
113 835	Scheibe Disc Disco		Camera compl. Camera Cámara	526/24 AM/21 526/24 BM/21			1	1	
116 559	Schaltdraht Flex Contuctor		Frontplatte Front plate Placa frontal	26 376 T	1				
116 577	Schaltdraht Flex Contuctor		Frontplatte Front plate Placa frontal	26 388 a T/1 26 388 b T 26 388 a T		1	1	1	
00350 b/3	Prontor SVS 00 m.Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00,Novar 1:3,5/45		Camera compl. Camera Cámara	526/24 M/24	1				
00390 b	Prontor SVS 00 m.Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00,Novar 1:3,5/45	22	Camera compl. Camera Cámara	526/24 AM/21			1		

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 526/ 24 21	24A 21	24B 21	Preis Price Precio
00476 b/3,5	Prontor SVS 00 (Lichtwerte) mit Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00, Novar 1:3,5/45		Camera compl. 526/24 BM/21 Camera Cámara			1	
00350 b/2	Prontor SVS 00 m.Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00 Novar 1:3,5/45		Camera compl. 526/24 ZM/21 Camera Cámara	1			
			+) Nach Bedarf As required Según convenga				

Zeiss Ikon A.G.
Stuttgart

Ersatzteil-Preisliste

Price list f. spare parts
Lista de precios p.piezas de recambio

Ausgabe September 1956
Published September 1956
Edicion Septiembre 1956

Contina II, Kat.Nr. 527/24

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
M 1,7x3,5 DIN 63-5S	Senkschraube Countersunk screw Tornillo		Camera compl. 527/24 Camera Cámara	3	3	3	3	3	3	3	3	
M 1,4x2,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtungsmesser mont. 52314M Exposure meter casing 52407M Caja de exposimetro					2	2	2	2	
M 1,7x1,8 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Grundplatte mont. 26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
M 1,7x3 DIN 84-5S	Zylinderschraube Fillister head screw	8 13 14	Gehäuse mont. 52383 aT Housing 52383 cT Caja	5	5	5	5	5	5	5	5	
		9 12 17	Frontplatte 26376 T Front plate 26376 T/1 Placa frontal 26388 T 26388 aT 26388 aT/2 26388 aT/3 26388 bT	4	4	2	2	2	2	2	2	
		11	Camera compl. 527/24 Camera Cámara	2	2	2	2	2	2	2	2	
M 1,7x3,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	5 8 10 11 12	Gehäuse mont. 52383 aT Housing 52383 dT Caja	3	3	3	3	3	3	3	3	
			Camera compl. 527/24 Camera Cámara	4	4	4	4					
M 1,7x4 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	6 7 20	Camera compl. 527/24 Camera Cámara	4	4	4	4	8	8	8	8	
		8	Frontplatte 26388 aT/1 Front plate 26388 aT/2 Placa frontal 26388 aT/3 26388 bT				2	2	2	2	2	
M 1,7x4,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Gehäuse mont. 52383 aT Housing Caja	2	2	2						

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Ż 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
M 1,7x6 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo		Camera compl.527/24 Camera Cámara					2	2	2	2	
M 1,7x7 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	7	Camera compl.527/24 Camera Cámara	1	1	1	1					
M 1,7x8	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl.527/24 Camera Cámara					1	1	1	1	
M 1,7x9	Zylinderschraube Fillister head screw Tornillo sin fin	7	Camera compl.527/24 Camera Cámara	1	1	1	1					
M 1,7x11 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	7	Camera compl.527/24 Camera Cámara	1	1	1	1					
1,5 DIN 433-Ms	Scheibe Disc Disco	30	Deckel mont.103 505 T Cover Tapa					1	1	1	1	
BM 1,7 DIN 439-5S	Sechskantmutter Hexagon nut Tuerca hexagonal	12	Camera compl.527/24 Camera Cámara	1	1	1	1	1	1	1	1	
M 1,7 DIN 546-Ms	Schlitzmutter Slotted nut Tuerca entallada	13 26	Frontplatte 26376 T Front plate 26376 T/1 Placa frontal 26388 aT 26388 aT/1 26388 aT/2 26388 aT/3 26388 bT	1	1	1	1	1	1	1	1	
M 1,7x5 DIN 551-5S	Gewindestift Grub screw Perno roscado		Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
M 1,7x2,5 DIN 553-5S	Gewindestift Grub screw Perno roscado	9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	3	3	3	3	3	3	3	3	
1,2 DIN 6799	Benzing-Sicherung Benzing protector Protector Benzing	6 11	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
1,9 DIN 6799	Benzing-Sicherung Benzing protector Protector Benzing	9 10	Gehäuse mont. 52383 aT Housing Caja	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
3,2 DIN 6799	Benzing-Sicherung Benzing protector Protector Benzing		Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
ZIN 511 M 1,7x3-5S	Senkschraube Countersunk screw Tornillo embutido	9	Gehäuse mont.52383 aT Housing 52383 dT Caja	3	3	3	3	3	3	3	3	
ZIN 512 M 1,4x2-5S	Senkschraube Countersunk screw Tornillo embutido		Deckel mont. 103505 T Cover 103505 T/2 Tapa					2	2	2	2	
ZIN 512 M 1,4x2,5 -5S	Senkschraube Countersunk screw Tornillo embutido		Belichtungsmesser mont.52385 M Exposure meter, casing 52394 T Caja de exposimetro 52407 T	1	1	1	1	1	1	1	1	
ZIN 512 M 1,7x10 -5S	Senkschraube Countersunk screw Tornillo embutido	7 29	Camera compl. Camera Cámara	1	1	1	1	1	1	1	1	
ZIN 515 M 1,4x7,3	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtungsmesser mont.52394 M Exposure meter, casing 52407 M Caja de exposimetro					2	2	2	2	
ZIN 515 M 1,7x2,5	Zylinderschraube Fillister head screw Tornillo sin fin		Belichtungsmesser mont. 52394 M Exposure meter. casing Caja de exposimetro					1	1			
ZIN 515 M 1,7x3 -5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtungsmesser mont. 52394 M Exposure meter, casing 52407 M Caja de exposimetro					3	3	3	3	
ZIN 515 M 1,7x4,5 -5S	Zylinderschraube Fillister head screw Tornillo sin fin		Belichtungsmesser mont. 52385 M Exposure meter. casing Caja de exposimetro	5	5	5	5					
ZIN 515 M 1,7x6-5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtungsmesser mont.52394 M Exposure meter, casing 52407 M Caja de exposimetro					2	2	2	2	
ZIN 515 M 1,7x7-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 527/24 Camera Cámara					1	1	1	1	
ZIN 516 M 1,7x2,5 -5S	Zylinderschraube Fillister head screw Tornillo sin fin	11	Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
ZIN 516 M 1,7x4,5 -5S	Zylinderschraube Fillister head screw Tornillo sin fin		Gehäuse mont. 52383 aT Housing Caja			1	1	1	1	1	1	
65	Zylinderschraube Fillister head screw Tornillo sin fin		Grundplatte 26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
184	Schraube Screw Tornillo	3, 4, 6, 22	Camera compl. 527/24 Camera Cámara	1	1	1		1		1	1	
220 220 a	Schraube Screw Tornillo	3, 7, 29	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
Ss 162	Zapfenschraube Pivoted screw Tornillo pivoteado		Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
Ss 318 a	Abschlußschraube Cover screw Tornillo recubridor	4, 5, 7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
Ss 511	Exzenterschraube Eccentric screw Tornillo excéntrico		Belichäuse mont. 52385 M Exposure meter, casing Caja de exposimetro	1	1	1	1					
Ss 518	Exzenterschraube Eccentric screw Tornillo excentrico	30	Belichäuse mont. 52384 M Exposure meter, casing Caja de exposimetro					1	1			
Ss 523	Klemmschraube Camping screw Tornillo de presión		Belichäuse mont. 52407 M Exposure meter, casing Caja de exposimetro							1	1	
723	Zylinderniet Cylinder head rivet Remache de cabeza cilíndrica	16	Deckkappe 38419 T Top cover Tapa inferior	1	1	1	1					
954	Senkniet Countersunk rivet Remache embutido		Deckkappe 38419 Top cover Tapa inferior	2	2	2	2					
Fa 13	Filmspule Film spool Carrete	5, 9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
12 225	Achse Axle Eje	5	Rückdeckel 52384 aT Back panel Tapa posterior	1	1	1	1	1	1	1	1	
12 227a	Achse Axle Eje	8	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
14 083	Auslösenippel Release Knob Botón disparador	3, 4, 6, 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
15 470	Führungsbuchse Bushing Casquillo	7 17	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
15 471	Buchse Bushing Casquillo	5, 9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
15 472	Führungsbuchsen Bushing Casquillo	11	Camera compl. 52383 aT Camera Cámara	1	1	1	1	1	1	1	1	
15 473	Lagerbuchse Bearing bush Casquillo de cojinete	6	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
15 474	Buchse Bushing Casquillo	9, 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
15 475	Mitnehmerbuchse Winding bush Casquillo de arrastre	7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
15 476	Distanzbuchse Spacer Tubo de distancia	7, 29	Camera 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
15 480a 15 480b	Lagerbuchse Bearing bush Casquillo de cojinete	15	Frontplatte 26376 T Front plate 26376 T/1 Placa frontal 26388 aT 26388 aT/1 26388 aT/2 26388 aT/3	1	1	1	1	1				
15 483a	Arretierbuchse Bushing Casquillo		Deckkappe 38419 T Top cover Tapa superior	1	1	1	1					
15 526a	Lagerbuchse Bearing bush Casquillo		Frontplatte 26388 bT Front plate Placa frontal							1	1	
22 052	Feder Spring Resorte	27	Deckkappe 38519 T Top cover Tapa superior			1	1					
22 635	Sperrfeder Locking spring Resorte bloqueador	12	Grundplatte 26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
22 636	Feder Spring Resorte		Deckkappe 26 372 T Top cover Tapa superior	1	1	1	1					
22 639	Feder Spring Resorte	11, 17	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
22641aTm	Schaltfeder mont. Spring for counter mechanism Resorte p. mechanismo contador	6	Camera compl. 527/24 Cámera Cámara	1	1	1	1	1	1	1	1	
22642 Tm	Kontaktfeder Contact spring Resorte de contacto	20 26 14	Frontplatte 26388 aT Front plate 26388 aT/1 Placa frontal 26388 aT/2 26388 aT/3 26388 bT			1	1	1	1	1	1	
22643	Federscheibe Spring disc Disco p. resorte		Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
22617	Feder Spring Resorte	7	Beligehäuse mont.52385M Exposure meter casing Caja de exposímetro	1								
22678	Feder Spring Resorte	30	Beligehäuse mont.52385M Exposure meter casing 52394M Caja de exposímetro 52407M	1	1	1	1	1	1	1	1	
23617	Druckfeder Pressure spring Resorte de presión	17	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
23759	Druckfeder Pressure spring Resorte de presión	9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
23760 b	Druckfeder Pressure spring Resorte de presión	9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
23761	Druckfeder Pressure spring Resorte de presión	6 11	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
23762	Druckfeder Pressure spring Resorte de presión	11	Camera mont. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
23763	Rückholfeder Pull-pack-spring Muelle de retración		Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
23769 23769 a	Drehfeder Torsion spring Resorte de torsión	8	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
23771	Drehfeder Torsion spring Resorte de torsión	11	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
23778 a	Drehfeder Torsion spring Resorte de torsión	30	Deckel mont. 103 505 T Cover 103 505 T/1 Tapa					1	1	1	1	
25308	Ausgleichplättchen Compensating plate Planchita de ajuste		Belichtungsmesser-Gehäuse mont.52385 M Exposure meter casing Caja de exposímetro	1	1	1	1					
25390	Unterlage Washer Arandela		Camera Camera Cámara	1	1	1	1	1	1	1	1	
25403	Unterlage Washer Arandela	30	Camera compl. 527/24 Camera Cámara					1		1	1	+)
25405	Unterlage Washer Arandela		Camera compl. 527/24 Camera Cámara					1	1	1	1	+)
26372 Tm	Grundplatte vormont. Base plate Placa de base		Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
26372 T	Grundplatte mont. Base plate Placa de base	10	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
26373	Zwischenplatte Intermediate Placa intermedia		Deckkappe 26372 T Top cover 38419 T Tapa superior	1	1	1	1					
26374aTm	Andrückplatte mont. Pressure plate Plancha de presión	5	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
26376	Frontplatte Front plate Placa-frontal		Frontplatte mont.26376 T Front plate Placa-frontal	1	1							
26376 T 26376 T/1	Frontplatte mont. Front-plate Placa frontal		Camera compl. 527/24 Camera Cámara	1	1							
26387	Deckplatte Cover plate Plancha de recubrimiento		Camera compl. 527/24 Camera Cámara							1	1	

Teil-Nr. Serial-No. Pieze-No.	Bezeichnung Name Designaciòn	Abbildung Illustration Ilustraciòn	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
26388 a 26388 b	Frontplatte Front-plate Placa frontal	24 26	Frontplatte mont.26388 aT Front-plate 26388 aT/1 Placa frontal 26388 aT/2 26388 aT/3 26388 bT			1	1	1	1	1	1	
26388 aT 26388 aT/ 26388 aT/2 26388 aT/3 26388 bT	Frontplatte mont. Front-plate Placa frontal	22 24 25	Camera compl. 527/24 Camera Câmara			1	1	1	1	1	1	
26389	Ausgleichplatte Compensating plate Planchita de ajuste		Camera compl. 527/24 Camera Câmara					1	1	1	1	+)
28217	Führungsleiste Guide gib Aletra-guia	12	Camera compl. 527/24 Camera Câmara	1	1	1	1	1	1	1	1	
33308	Lagerflansch Bearing flange Brida de cojinete	8 9	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
33312	Rolle Roller Rodillo	7 17	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
34169	Frontdeckblech Front cover plate Plancha de recubrimiento frontal	18,19,20 24, 26 8	Frontplatte mont.26388 aT Front plate 26388 aT/1 Placa frontal 26388 aT/2 26388 aT/3 26388 bT			1	1	1	1	1	1	
24674	Auslösklappe Release flap Placa disparadora		Gehäuse mont. 52383 aT Housing Caja	1	1	1	1	1	1	1	1	
34675	Frontdeckblech Front cover plate Plancha de recubrimiento frontal	3 13	Frontplatte 26376 T Front plate 26376 T/1 Placa frontal	1	1							
34687	Einstellblech Adjusting plate Plancha de ajuste	30	Belichtungsmesser-Gehäuse mont.52394 M Exposure meter casing Caja de exposimetro					1	1			
34695	Abdeckblech Cover plate Plancha de recubrimiento		Belichtungsmesser-Gehäuse mont.52385 M Exposure meter casing Caja de exposimetro	1	1	1	1					
34702	Abdeckblech Cover plate Plancha de recubrimiento	30	Belichtungsmesser-Gehäuse mont.52394 M Exposure meter casing 52407 M Caja de exposimetro					1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
34734	Einstellblech Adjusting plate Plancha de ajuste		Beligehäuse mont.52407 M Exposure meter casing Caja de exposimetro							1	1	
38419	Deckkappe Cover Tapa		Deckplatte mont.38419 T Cover Tapa	1	1	1	1					
38419 T	Deckkappe mont. Cover Tapa	3, 4, 5 7 16	Camera compl. 527/24 Camera Cámara	1	1	1	1					
38420	Deckkappe unten Lower cover Tapa inferior	8	Camera compl. 527/24 Camera Cámara		1	1	1	1	1	1	1	
38438 T	Deckkappe mont. Cover Tapa	22 29	Camera compl. 527/24 Camera Cámara					1	1	1	1	
39001	Unterlagscheibe Washer Arandela	8	Camera compl. 527/24 Camera Camara	1	1	1		1	1	1	1	+)
39065 a	Unterlagscheibe Washer Arandela		Grundplatte 26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
39103	Scheibe Disc Disco		Deckel mont.103505 T Cover Tapa					1	1			
39150	Scheibe Disc Disco	30	Deckel mont.103505 T Cover 103505 T/1 Tapa					1	1	1	1	
39194	Scheibe Disc Disco	22	Camera compl. 527/24 Camera Cámara					1	1	1	1	+)
39288	Scheibe Disc Disco		Beligehäuse mont.52394 M Exposure meter casing Caja de Exposimetro					2	2	+)		
39 426	Scheibe Disc Disco		Gehäuse mont.52383 dT Housing Caja					1	1	1	1	+)
39436	Scheibe Disc Disco		Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	+)

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				.24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
39457	Scheibe Disc Disco		Deckel mont.103505 T Cover Tapa					1	1			
39511	Scheibe Disc Disco		Grundplatte.mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	*)
39555	Scheibe Disc Disco	6 7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
39557	Scheibe Disc Disco	7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	*)
39558	Scheibe Disc Disco	13	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	*)		
39559	Scheibe Disc Disco	13	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	*)		
39572	Scheibe Disc Disco	29	Camera compl. 527/24 Camera Cámara							1	1	*)
39575	Scheibe Disc Disco	1?	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	*)		
39584	Scheibe Disc Disco	7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	*)
39586	Scheibe Disc Disco	6	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	*)		
39587	Scheibe Disc Disco		Camera compl. 527/24 Camera Cámara		1	1	1					
39610	Scheibe Disc Disco	26	Camera compl. 527/24 Camera Cámara							1	1	
39614	Scheib Disc Disco	29	Camera compl. 527 24 Camera Cámara					1	1	1	1	*)
39615	Scheibe Disc Disco	26	Camera compl. 527/24 Camera Cámara							1	1	*)

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
39616	Scheibe Disc Disco	26	Camera compl. 527/24 Camera Cámara							1	1	+)
39635	Scheibe Disc Disco		Camera compl. 527/24 Camera Cámara							1	1	+)
40081	Scheibe Disc Disco	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
40083	Scheibe Disc Disco	30	Deckel mont. 103505 T Cover Tapa					1	1			
41087 a	Federteller Spring disc Disco resorte	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
41092	Federscheibe Spring disc Disco resorte	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
41100	Kontaktscheibe Contact disc Disco de contacto	20	Camera compl. 527/24 Camera Cámara			1	1	1	1			
41105	Kontaktscheibe Contact disc Disco de contacto	26	Camera compl. 527/24 Camera Cámara							1	1	
41107	Federscheibe Spring disc Disco resorte	29	Camera compl. 527/24 Camera Cámara					1	1	1	1	
42228 T	Anschlag mont. Stop Tope	6	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
42229	Scheibe Disc Disco	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
42254	Anschlagscheibe Stop Tope	29 11 12	Camera compl. 527/24 Camera Cámara					1	1	1	1	
44017 T	Zahnstange mont. Rack Cremallera		Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
45148	Stirnrad(40 Zähne) Spur wheel Rueda frontal	12	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
45319 b	Aufzugsrad(16 Zähne) Winding wheel Rueda de a rastre	15	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1			
45324	Aufzugsrad(16 Zähne) Winding wheel Rueda de arrastre		Camera compl. 527/24 Camera Cámara								1	
45388	Schaltring Ratched wheel Rueda de trinquete	22 5	Camera compl. 527/24 Camera Cámara					1	1	1	1	
45641 45641 a	Stirnrad(18 Zähne) Spur wheel Rueda frontal		Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
45642	Stirnrad(20 Zähne) Spur wheel Rueda frontal	12	Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
45643	Zwischenrad Intermechiale gear Rueda intermedia		Grundplatte mont.26372 Base plate Placa de base	1	1	1	1	1	1	1	1	
45644 Tm	Stirnrad mont. Spur wheel Rueda frontal	11	Grundplatte mont.26372 T Base plate Placa de base	1	1	1	1	1	1	1	1	
45645 45645 a	Filmtrommel Film drum Tambor p.pelicula	5 9 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
45646	Stirnrad(18 Zähne) spur wheel Rueda frontal	9 10	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
52384 aT	Rückdeckel mont. Back panel Tapa posterior	9	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
52385 T	Beligehäuse vormont. Exposure meter casing Caja de exposimetro	30	Beligehäuse mont.52385 M Exposure meter casing Caja de exposimetro	1	1	1	1					
52385 M	Beligehäuse mont. Exposure meter casing Caja de exposimetro	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
52394 T	Beligehäuse vormont. Exposure meter casing Caja de exposimetro	30	Beligehäuse mont.52394 M Exposure meter casing Caja de exposimetro					1	1			
52394 M	Beligehäuse mont. Exposure meter casing Caja de exposimetro	22	Camera compl. 527/24 A Camera Cámara					1	1			

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
52407 T	Beligehäuse vormont. Exposure meter casing Caja de exposímetro		Beligehäuse mont.52407 M Exposure meter casing Caja de exposímetro							1	1	
52407 M	Beligehäuse mont. Exposure meter casing Caja de exposímetro		Camera compl. 527/24 B Camera Cámara							1	1	
53198 53198 a	Lagerflansch Bearing flange Brida de cojinete	30	Deckel mont.103505 T Cover Tapa					1	1	1	1	
54077	Zugstange Traction red Varilla de tracción	14 30	Frontplatte 26376 T Front plate 26376 T/1 Placa frontal. 26388 aT 26388 aT/1 26388 aT/2 26388 aT/3 26388 bT	1	1	1	1	1	1	1	1	
55061	Nachführzeiger Follow-up mark Marca movediza		Deckel mont. 103505 T Cover 103505 T/1 Tapa					1	1	1	1	
60182	Schlitzmutter Slotted nut Tuerca entallada	6 , 7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
60183	Schlitzmutter Slotted nut Tuerca entallada	8 , 14	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
60194	Sechskantmutter Hexagon nut Tuerca hexagonal	30	Deckel mont.103505 T Cover 103505 T/1 Tapa					1	1	1	1	
65411 Tm 65411 aTm	Achse mont. Axel Eje	8 , 9 10	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
65412 Tm	Rückspulachse mont. Rewind shaft Eje p.rebobinar	7 , 17	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
65413	Spulenachse Spool axle Eje de carrete	9 , 10	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
65414	Auslösestange Release rod Varilla de disparo	6	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
66235	Mitnehmerbolzen Winding pin Perno de arrastre	7 , 17	Gehäuse mont. 52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
66452	Mitnehmerbolzen Winding pin Perno de arrastre	7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
66455	Führungsbolzen Guide pin Perno de guia	14	Frontplatte 26376 T Front plate 26376 T/1 Plaça frontal 26388 aT 26388 aT/1 26388 aT/2 26388 aT/3 26388 bT	1	1	1	1	1	1	1	1	
72418	Scheibe Disc Disco	7	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
72538	Ring Ring Guiador	9 , 10	Gehäuse mont.52383 aT Housing Caja	1	1	1	1	1	1	1	1	
72539	Rückspulknopf Rewind knob Bontón p.rebobinar	3, 4, 6 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
72542 a	Ring Ring Guiador	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
72544	Ring Ring Guiador	3 , 7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
72591	Indexring Index-ring Anillo indicador	22	Camera compl. 527/24 Camera Cámara					1	1	1	1	
72592	Indexring Index-ring Anillo indicador	26	Frontplatte 26388 bT Front plate Placa frontal							1	1	
72595	Ring Ring Guiador		Camera compl. 527/24 Camera Cámara					1	1	1	1	
73079 a	Einschubschuh Slip-in shoe Zapato de enchufe		Deckkappe mont. 38419 T Top cover Tapa superior	1	1							
73089	Einschubschuh Slip-in shoe Zapoto de enchufe	28	Deckkappe mont. 38419 T Top cover Tapa superior			1	1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
74143 aT	Blitzlichtanschluß mont. Flash synchronizer Sinchronizador	18, 19 20,24,26	Frontplatte mont.26388 aT Front plate 26388 aT/1 Placa frontal 26388 aT/2 26388 aT/3 26388 bT			1	1	1	1	1	1	
74148 T/1	Gewindering Threaded ring Anillo con rosca	29	Camera compl. 527/24 Camera Cámara					1	1	1	1	
74179	Anschraubring f. Verschluß Screw ring f.shutter Anillo roscado p. obturador	5 , 14	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
74195	Schutzring Protektive ring Anillo protector	29	Camera compl. 527/24 Camera Cámara					1	1	1	1	
75447 a	Zeiteinstellring Shutter speed setting ring Anillo graduador p.velcocidades	3 , 7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
75455 bTm	Blendenskala mont. Diaphragm scale Escala de diafragma	3 , 7 29	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1			
75456 a	Empfindlichkeitsskala Film speed scala Escala p.sensibilidades de pelicula	7	Camera compl. 527/24 Camera Cámara	1	1	1	1					
75466	Skalenblech Skale Escala		Belgehäuse mont.52385 M Exposure meter casing Caja de exposimetro	1	1	1	1					
75467	Zählscheibe Counter dise Disco contador	22,3,4,6	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
75469 a	Skalenring f.Novar 1:3,5/45 Skale ring f.Novar f-3,5-45 mm Anillo con escala p.Novar 1:3,5/45	13	Frontplatte Front plate Placa frontal	1		1						
75470 a	Skalenring f.Novar 2,8/45 Scale ring f.Novar f-3,5/45 mm Anillo con escala p.Novar 1:3,5/45	3, 13	Frontplatte 26376 T/1 Front plate Placa frontal		1		1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
75479	Leitzahlenskala Scale with guide numbers Escala con números de guia	3, 7	Camera compl. 527/24 Camera Cámara	1	1		1	1				
75709 Tm	Zeiteinstellring mont. Shutter speed setting ring Anillo graduador p. velocidades	22, 29	Camera compl. 527/24 Camera Cámara					1		1		
75514	Skalenring f.Optik 1:3,5 Scale ring for lens Anillo con escala para objetivo	24	Frontplatte 26388 aT/2 Front plate Placa frontal					1				
75515	Skalenring f. Optik 1:2,8 Scale ring for lens Anillo con escla para objetivo	25	Frontplatte 26388 aT/3 Front plate Placa frontal						1			
75522 Tm	Zeitskalenring mont. Speed dial Anillo p.velocidades	23, 29	Camera compl. 527/24 Camera Cámara							1	1	
75523 Tm	Blendenskala mont. Diaphragm scala Escala de diafragma	29	Camera compl. 527/24 Camera Cámara							1	1	
75527 a	Empfindlichkeitsskala Film speed scale Escala p.sensibilidades	29	Camera compl. 527/24 Camera Cámara					1	1	1	1	
79113 a	Tubus Tube Tube	14	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
83074 a	Sucherfassung Viewfinder mount Montura de visor		Deckkappe 38419 T Top cover Tapa superior	1	1	1	1					
85562 a 85562 b 85562 c	Aufzugshebel Winding lever Palanca de arastre	3, 4, 6 7, 22, 13	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
85568 Tm	Tasthebel mont. Control lever Palanca de mando	30	Deckel 103505 T Cover 103505 T/1 Tapa					1	1	1	1	
91056 a	Steuerscheibe Cam disc Disco de mando		Belichäuse mont.52394 M Exposure meter casing 52407M Caja de exposimetro					1	1	1	1	

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
94067	Nabe Hub Cube		Deckkappe 38429 T Top cover Tapa superior	1	1	1	1					
95343	Blende Diaphragm Diafragma	5, 14	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
95345	Maske Mask Máscara		Belichtungsmessergehäuse mont.52394 M Exposure meter casing Caja de exposímetro					1	1			
101278	Sucher-Einblicklinse Lens f. eyepiece of viewfinder Lente p.mirilla de visor	4, 5 16	Deckkappe 38429 T Top cover Tapa superior	1	1	1	1					
101279	Sucher-Ausblicklinse Front lens of viewfinder Lente frontal de visor	3, 16 25	Deckkappe 38429 T Top cover Tapa superior	1	1	1	1					
101418	Sucher-Ausblicklinse Front lens of viewfinder Lente frontal de visor	30	Belichtungsmessergehäuse mont.52394 Exposure meter casing Caja de exposímetro					1	1	1	1	
103444	Deckel Cover Tapa	4	Belichtungsmessergehäuse mont.52385 M Exposure meter casing Caja de exposímetro	1	1	1	1					
103445	Boden Bottom Fondo		Belichtungsmessergehäuse mont.52385 M Exposure meter casing Caja de exposímetro	1	1	1	1					
103446	Buchse Bushing Casquillo		Gehäuse mont.52383 aT Housing Caja	1	1	1	1	1	1	1	1	
103447	Indexring Index ring Anillo indice	3, 4, 6	Camera compl. 527/24 Camera Cámara	1	1	1	1					
103449	Scheibe Disc Disco	30	Belichtungsmessergehäuse mont.52385 Exposure meter casing 52407 M Caja de exposímetro	1	1	1	1	1	1			
103450 a 103450 b	Prismenscheibe Prism pane Cristal prismático	30	Belichtungsmessergehäuse mont.52385 M Exposure meter casing 52394 M Caja de exposímetro 52407 M	1	1	1	1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
103488	Deckel unten Cover Tapa	30	Beligehäuse mont.52394 M Exposure meter casing 52407 M Caja de exposímetro					1		1	1	
103505 T	Deckel Cover Tapa	30	Deckel mont.103505 T Cover Tapa					1		1	1	
103505 T 103505 T/1	Deckel mont. Cover Tapa		Beligehäuse mont.52394 M Exposure meter casing Caja de exposímetro					1	1	1	1	
109180	Bezug compl. Covering Cubierta		Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
109180/1	Bezug f.Gehäuse Covering f.housing Cubierta p. caja	3, 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
109180/2	Bezug f.Gehäuse Covering f.housing Cubierta p. caja	3, 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
109180/3	Bezug f.Gehäuse-Rückwand Covering f. back panel of housing Cubierta p.tapa posterior de caja	4, 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
109180/4	Bezug für Boden Covering f.cover lever Cubierta p. tapa inferior	8, 22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
109180/5	Bezug f. Deckblech Covering f.cover plate Cubierta p. placa recubridora	22	Camera compl. 527/24 Camera Cámara	1	1	1	1	1	1	1	1	
110049	Filzstreifen als Dichtung Felt strip Tira de fieltro		Deckkappe mont. 38419 T Top cover Tapa superior	1	1	1	1	1	1	1	1	
112279	Abdichtung Tightening strip Tira impermeable	16	Deckkappe mont. 38419 T Top cover Tapa superior	1	1	1	1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
113669	Maske Mask Mascaria		Beligehäuse mont.52407 M Exposure meter casing Caja de exposímetro							1	1	
113793	Isolierplatte Insulation Aislamiento	30	Beligehäuse mont.52385 M Exposure meter casing 52394 M Caja de exposímetro 52407 M	1	1	1	1	1	1	1	1	
113820	Dichtungsstreifen Tightening strip Tira impermeable		Gehäuse mont. 52383 dT Housing Caja							1	1	
113835	Scheibe Disc Disco		Camera compl. 527/24 Camera Cámara							1	1	
116577	Schaltdraht Flex Conductor		Frontplatte mont.26388aT Front plate 26388 aT/1 Placa frontal 26388 aT/2 26388 aT/3 26388 bT			1	1	1	1			
116598	Schaltdraht Flex Conductor		Beligehäuse mont.52394 M Exposure meter casing 52407 M Caja de exposímetro					1	1	1	1	
122015	Stahlkugel Steel bal Bola de acero	7, 17	Gehäuse mont.52383 aT Housing 52383 dT Caja	1	1	1	1	1	1	1	1	
132173	Widerstände n.Bedarf 0,25 4 4,5 5 5,5 6 6,5 7 7,5 8 8,5 9 9,5 10 10,5 11 11,5 12 12,5 K Ohm Resistance 0,25-12,5 K Ohms as may be required Resistancia 0,25-12,5 K ohmios segun se necesite	30	Beligehäuse mont.52394 M Exposure meter casing 52407 M Caja de exposímetro					1	1	1	1	*)
132182 T/1	Zelle vollständig Photo-cell Fotocélula	30	Beligehäuse mont.52385 M Exposure meter casing 52394 Caja de exposímetro 52407 M	1	1	1	1	1	1	1	1	
1354/6	K-Instrument vollst. Exposure meter movement Instrumento con bobina giratoria	30	Beligehäuse mont.52385 M Exposure meter casing Caja de exposímetro	1	1	1	1					

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/ 24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	Preis Price Precio
1354/11 M	K-Instrument vollst. Exposure meter movement Instrumento con bobina giratoria		Beligehäuse mont. 52394 M Exposure meter casing 52407 M Caja de exposímetro					1	1	1	1	
00350 b	Prontor SVS 00 mit Novar 1:3,5/45 Prontur shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00 Novar 1:3,5/45		Camera compl. 527/24 Camera Cámara	1								
00350	Prontor SVS 00 mit Novicar 1:2,8/45 Prontor shutter SVS 00 with Novicar f=1:2,8-45 mm Obturador Prontor SVS 00 Novicar 1:2,8/45		Camera compl. 527/24 Camera Cámara		1							
00350 b/2	Prontor SVS 00 mit Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f= 1:3,5-45 mm Obturador Prontor SVS 00 Novar 1:3,5/45		Camera compl. 527/24 Camera Cámara			1						
00350a/2	Prontor SVS 00 mit Novicar 1:2,8/45 Prontor shutter SVS 00 with Novicar f=1:2,8-45 mm Obturador Prontor SVS 00 Novicar 1:3,5/45		Camera compl. 527/24 Camera Cámara				1					
00390 b	Prontor SVS 00 mit Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00 Novar 1:3,5/45	22, 24	Camera compl. 527/24 Camera Cámara					1				

Teil-Nr. Serial-No. Pieza-No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 527/								Preis Price Precio
				24 21	24 25	24Z 21	24Z 25	24A 21	24A 25	24B 21	24B 25	
00390 a	Prontor SVS mit Novicar 1:2,8/45 Prontor shutter SVS 00 with Novicar f=1:2,8-45 mm Obturador Prontor SVS 00 Novicar 1:2,8/45	25	Camera compl. 527/24 Camera Cámara						1			
00476 b	Prontor SVS 00 (Lichtwert) mit Novar 1:3,5/45 Prontor shutter SVS 00 with Novar f=1:3,5-45 mm Obturador Prontor SVS 00 Novar 1:3,5/45		Camera compl. 527/24 Camera Cámara							1		
00476 a	Prontor SVS 00 (Lichtwert) mit Novicar 1:2,8/45 Prontor shutter SVS 00 with Novicar f=1:2,8-45mm Obturador Prontor SVS 00 Novicar 1:2,8/45	26	Camera compl. 527/24 Camera Cámara								1	

+) Bei Bedarf
As required
Según converga

Contina III

Catalogue No. 529/24

Contents

1. Specification

2. Dismantling

3. Instructions for repair

4. Instructions for assembling and adjusting

5. Instructions for testing

~~6. Lubricating plan~~

7. List of spare parts

8. Tools

9. Illustrations

CARL ZEISS, Inc.
485 FIFTH AVENUE
NEW YORK 17, N.Y.

Edition: December 1956

Zeiss Ikon A.G.

Stuttgart

Zeiss Ikon A.G.
Stuttgart

Edition: December 1956

Contina III

1. Specification

The Contina III is equipped with a f/2.8,45mm Pantar lens, which differs from previous lenses in that the front element has a bayonet mount and can be removed from the camera by depressing the lever with the red dot. The standard front element can be replaced by one for wide-angle exposures, f/4,30 mm (catalogue no. 1001) or another one for telephoto exposures f/4,75 mm (catalogue no. 1002).

The special Prontor SVS 00 shutter with exposure values is mounted on a new front plate and differs from previous models in that it is not fixed to the front plate by the usual retaining ring but by 4 cylinder screws from behind (fig.27).

The camera body and the top cap, including the viewfinder and the exposure meter, correspond exactly to the Contina II, catalogue no. 527/24 Bm.

Contina III

2. Instructions for dismantling

The instructions for dismantling the previous models of this camera apply also to the Contina III with the exception of the dismantling of the front plate and the shutter.

The front plate is fixed to the camera body by means of 4 cylinder screws M 1.7 x 4 DIN 84 - 5 S. When the plate is removed the tube 79 153 a, the diaphragm 95 343 and the winding wheel 45 319 will be released. The spring washer 22 643 will usually adhere to the groove in the front plate. When the shutter needs repairing it must be unscrewed from the front plate. It is fixed on the back by 4 cylinder screws M 1.7 x 7 DIN 54 - 5 S (fig. 27). After unscrewing the screws, the ring 72 576 and the washers 39 178 - 021 will be freed. These washers, guaranteeing the correct focusing of the lens, must be replaced carefully when reassembling (fig.27).

In order the repair damaged shutters it will be necessary to remove the front lens first, by depressing the lever with red dot and turning the mount in an anti-clockwise direction until the front element can be lifted out.

Now the 4 screws ZIN 515 M 1.4 x 2 - 5 S, retaining the depth-of-field ring 75 507, should be unscrewed. This ring as well as the shutter speed ring 52 393 Tm and the diaphragm setting ring 75 525 Vm can now be removed.
The exposed flat spring 21 671 should later be returned to the reamedrecess in the bayonet flange. In the newest models the spring has been replaced by two compression springs which are placed in corresponding bore holes in the diaphragm setting ring.

If a bayonet flange shows visible deformations or test exposures show a one-sided lack of definition, the shutter should be removed and with the lens to our factory.

Before unscrewing the bayonet flange from the shutter their exact position relative each other should be marked carefully.The position, determined with the utmost care during manufacture, should under no condition be altered.

The repair of the shutters should be performed according to the instructions for repairing SVS-shutters.

Owing to the novelty of the mounting, the lens should never be altered, in particular the Pantar front element should never be dismantled.

Zeiss Ikon A.G.
Stuttgart

Edition: December 1956

Contina III

3. Instructions for the repair

The instructions for the repair of the Contina I and II and their addenda apply also to the Contina III as far as the body, the film advance, the shutter tensioning and releasing mechanism and the exposure meter are concerned.

Fault	Cause	Remedy
Pantar front element is loose	Insufficient spring pressure in bayonet	Unscrew the bayonet ring, slightly rebend the lugs and return ring. Note the exact position of stops. Test focusing.

Contina III

4. Instructions for reassembling and adjusting

The bayonet flange (after repairing the shutter) must be acrefully returned to the adjusting cylinder. If there are washers, etc., they have to be returned to exactly the same places and should under no conditions be left behind. The eccentric screw, ensuring the exact position of the bayonet flange in relation to the shutter, has been correctly adjusted at our works and is secured with Zeiss Ikon adhesive No. 6106. When this has been loosened by the dismantling process the correct position can be restored by turning the eccentric screw until the position previously marked has been reached. The exactitude of the mark should always be carefully tested with a magnifier. The four retaining screws must be tightened crosswise, first gently then tightly, in order to prevent warping. The head of the screws must not protrude above the flat surface.

The positioning of the bayonet flange is extremely exact and the horizontal and radial clearance must be irreproachable to ensure perfect interchangangeability of the front elements and accessories (stereo). The latch on the arresting spring 22 670aTm can protrude from the setting face of the front lens by 0.8 to 1.1 mm but should, when the knob of the spring is completely depressed, be on the level with the seating face or a little below it.

Now the diaphragm ring 75 525 Vm can be added. With the new models it should be noted that the two compression springs 23 821 are inserted. The rings and springs, according to the lubricating plan, should be slightly greased. The shutter speed ring 72 595 Tm can now be put on, however, with older models, the flat spring 22 671 has first to be placed in the shallow recess on the bayonet flange. Then the depth-of-field ring has to be added and screwed on with 4 screws ZIN 515 M 1.4 x 2 - 5 S. When all the rings have been positioned correctly the exposure value 8 must be opposite the f/number 8 and the shutter speed 4. The scales can be adjusted with the neccessary exactitude after loosening the retaining screws since the oblong holes permit slight movement of the scales. Before screwing the shutter on the front plate all its various functions should be tested thoroughly.

The ring 72 376 should be laid on the front plate 26 391 Tm so that the bolt riveted to the front plate fits the slot made for it and prevents the ring from turning. The washers which ensure the correct focusing of the lens are measured painstakingly at the factory and must all be re-inserted. After screwing the front plate to the body a test should be made according to the instructions for adjustment of the Contina I and II. The shutter should be screwed to the front plate from behind by means of 4 screws M 1.7 x 7 DIN 84 - 5 S. These screws must be tighten crosswise first lightly and then really tight.

Now the mask 95 343 and the tube 79 143 a should be inserted into the body. The winding wheel 45 519 b should be inserted into the guiding bush on the front plate after it has been lubricated according to the lubricating plan. The toothing system should point upwards to the left. The front plate can now be fixed to the body but attention should be paid to the nut on the release rod which must engage the slot of the release cap while the winding wheel should mesh with the cogged shaft. The teeth between the winding wheel and the cogged rod must have sufficient space, since the tensioning lever would move too stiffly otherwise. By rocking within the holes of the four retaining screws this can be prevented and corrected. The screwing on with the four cylinder screws M 1.7 x 4 DIN 84 - 5 S should also be done crosswise to

prevent warping. Reassembling and adjusting the other components of the camera should be done according to the instructions for the Contina I and II. After the repair and reassembly, the camera should be examined thoroughly according to the test instructions.

Contina III

5. Instructions for testing

Mechanical test

1. The spring-loaded latch should snap in automatically when a Pantar is inserted an securely lock it. When the distance setting ring is turned the front element of the Pantar should not loosen itself from the bayonet. When the stop knob is depressed the spring-loaded latch should go back until the inserted front element of the Pantar is uncoupled.

2. The distance setting ring should rotate easily and positively. At the stop ∞, the intersection point of the sling should be at the point of the distance setting mark. When the stop is "inf." the point of the mark should be within the "n". When focused to 1 metre or 4 feet a small tolerance is permissible.

3. When the grip on the diaphragm ring is depressed the latter should be uncoupled so that it can be set to all values of the diaphragm and exposure value ring (the shutter speed ring must follow correspondingly at the same time). The diaphragm ring should snap in securely at all values and also at the point half-way between any two values.

4. When the diaphragm ring is uncoupled, it should be possible to set the shutter speed ring to all shutter speeds between "B" and 300 and should snap in at these values. Furthermore, it should carry the coupled diaphragm ring over the whole range of stops if one of the exposure values between 8 and 12 is set. 5

5. The reversing lever shouldsnap home at the settings MXV. The three letters should be fully visible in all cases. There is a new slightly changed shutter which permits the delayed action mechanism to be set only when the shutter is tensioned. The reversing lever springs back to the "X" setting automatically as soon as the delayed action mechanism has run off. When set to "M" the contact should be made before the shutter is fully open, to allow for the delay to peak. At the "X" setting the contact is made at the moment when the shutter is fully open. For operating the "V" setting the delayed action mechanism must be switched on. It opens the shutter 6 seconds, at the earliest, after the release knob is depressed. The electrical contact should be the same as with the "X" setting

The back

6. The back should fit the camera body tightly when the camera is closed. When the locking slide is pulled out the back should open automatically so that it can be opened completely by hand.

7. The locking slide should lock the back automatically and securely so that it does not open when the camera is vigorously shaken or knocked at by hand.
The pressure plate should under no conditions be bent or scratched.

8. The film guide roller on the back should run easily.

Film advance and counting mechanism

9. The film wind lever should work without hindrance until it stops. It must then return automatically to its initial position. It should be impossible to move it from its initial position if the shutter has not been released beforehand.

10. If, after one advance the film wind lever is pressed further from its initial position towards the swing-stop without the shutter being released, the film advance roller should turn no more than 1 mm at the utmost.

11. With one swing of the film wind lever until it stops
    a) the shutter should be tensioned
    b) the film advance sprocket be turned by 8 teeth (corresponding to a film advance of 38 mm)
    c) the take up spool without film make on turn
    d) the index ring of the film counting mechanism be advanced by one stroke.

12. The release knob should not rotate when a cable release that has been screwed in too tightly is unscrewed. The knob should, when the shutter is tensioned, act positively and release the shutter securely when depressed.

13. The index ring of the counting mechanism should turn in the direction of the arrow. In the reversed direction it should lock immediately and it should always point to one stroke.

14. The rewind knob should be adjusted so that it can easily be pulled out. It should securely snap home when pushed in and should rotate easily and positively.

15. The take-up spool should turn on the axle with a torsional moment of 100 to 150 cmgr.
    (Test equipment 526/21 M/VLe 72)

16. The take-up spool and the film advance roller (sprocket) should be arranged in relation to the film gate in such a way that a miniature film runs without jamming between the outer ribs of the negative stage and the lateral guiding flanges of the take-up spool. The teeth of the advance sprocket should engage the perforations easily and without hindrance.

17. The film advence sprocket, after depressing the idler knob, should be freely rotatable in both directions.

18. The idler knob, when depressed, should uncouple the film advance sprocket automatically and snap home to its initial position when left alone.

Exposure meter

19. The DIN-ASA disc must be adjusted so that it can be set to all DIN-ASA values on the scale.

20. The time setting ring should turn easily in both directions and be limited by stops on both ends. When turned, the follow-up pointer should follow positively.

Zero point

21. The follow-up pointer (ring) should be brought into the initial position at the beginning of the measuring range.

The measuring pointer beneath the ring of the follow-up pointer should point to the beginning of the measuring range (tangential movement) when no light strikes the cell.
Tolerance: when seen from above the measuring pointer should apparently touch the ring on the out side or inside.

22. The zero point must not shift automatically and the set screw should be covered by the stop screw Ss 318 (not adjustable by the customer).

23. The flap, when pressed laterally on the axle of the hinge, should spring open and snap home easily and securely when closed.

24. The pointer of the instrument must turn freely along the whole range without any hindrance.

Lenses

25. The lens should yield sharp definition of all subjects focused upon when the distance setting ring is set to the appropriate distances. To obtain the best possible definition the permissible adjustment tolerance of the front lens ring is half the depth-of-field range for the full aperture besides the actual value.

26. The optical axis should be exactly perpendicular to the film plane.

27. The viewfinder should be free from disturbing reflections.

General requirements

28. Inside the camera should be clean, light-proof and free from reflections.

29. A film wound through the camera forewards and backwards should be absolute free from scratches within the path of the film gate.

Zeiss Ikon A.G.
Stuttgart

Ersatzteil-Preisliste

Price List f. Spare Parts
Lista de Precios p. piezas de recambio

Ausgabe Oktober 1956
Published October 1956
Edición Octubre 1956

Contina - III, Kat.Nr. 529/24

Teil-Nr. Serial No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 529/24	Preis Price Precio
M 1,7x3,5 DIN 63-5S	Senkschraube Countersunk screw Tornillo embutido		Camera compl. 529/24 Camera Cámara	3	
M 1,4x2,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtgh. mont. 52 407 M Exposure meter casing Caja de exposumetro	2	
M 1,7x3 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	9, 12, 17	Frontplatte mont. 26 391 T Front plate Placa frontal	2	
		8, 13, 14	Gehäuse mont. 52 383 dT Housing Caja	7	
		11	Camera compl. 529/24 Camera Cámara		
M 1,7x1,8 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Grundplatte mont. 26 372 T Base plate Placa de base	1	
M 1,7x3,5 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	5, 8, 10, 11, 12	Gehäuse mont. 52 383 dT Housing Caja	3	
M 1,7x4 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	6, 7, 20 27	Frontplatte mont. 26 391 T Front plate Placa frontal	2	
			Camera compl. 529/24 Camera Cámara	8	
M 1,7x6 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 529/24 Camera Cámara	2	
M 1,7x7 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin	7, 27	Frontplatte vollst. 26 391 T Front plate Placa frontal	4	
M 1,7x8 DIN 84-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
1,5 DIN 433-Mg	Scheibe Disc Disco	30	Deckel mont. 103 505 T/1 Cover Tapa	1	
BM 1,7 DIN 439-5S	Sechskantmutter Hexagon nut Tuerca hexagonal	12	Camera compl. 529/24 Camera Cámara	1	
M 1,7x5 DIN 551-5S	Gewindestift Grub screw Perno roscado		Camera compl. 529/24 Camera Cámara	1	
M 1,4x3 DIN 553-5S	Gewindestift Grub screw Perno roscado		Camera compl. 529/24 Camera Cámara	3	
M 1,7x2,5 DIN 553-5S	Gewindestift Grub screw Perno roscado	9, 10	Gehäuse mont. 52 383 dT Housing Caja	3	
1,2 DIN 6799	Benzing-Sicherung Benzing protector Protector Benzing	6, 11	Camera compl. 529/24 Camera Cámara	1	
1,9 DIN 6799	Benzing-Sicherung Benzing protector Protector Benzing	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
3,2 DIN 6799	Benzing Sicherung Benzing protector Protector Benzing		Grundplatte mont. 26 372 T Base plate Placa de base	1	
ZIN 511 M 1,7 x 3-5S	Senkschraube Countersunk screw Tornillo embutido	9	Gehäuse mont. 52 383 dT Housing Caja	3	
ZIN 512 M 1,4 x 2-5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Deckel mont. 103 505 T/1 Cover Tapa	2	
ZIN 512 M 1,4 x 2,5-5S	Senkschraube Countersunk screw Tornillo embutido		Belichtgehäuse mont. 52 407 T Exposure meter casing Caja de exposimetro	1	
ZIN 512 M 1,7 x 10-5S	Senkschraube Countersunk screw Tornillo embutido	7, 29	Camera compl. 529/24 Camera Cámara	1	
ZIN 515 M 1,4 x 2 - 5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 529/24 Camera Cámara	4	
ZIN 515 M 1,4 x 7,3-5S	Zylinderschraube Fillister head screw Tornillo sin fin	30	Belichtgehäuse mont. 52 407 M Exposure meter casing Caja de exposimetro	2	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Numero 529/24	Preis Price Precio
ZIN 515 M 1,7 x 3 - 5S	Zylinderschraube Fillister head screw Tornillo sin fin		Belgehäuse mont. 52 407 M Exposure meter casing Caja de exposímetro	3	
ZIN 515 M 1,7 x 6 - 5S	Zylinderschraube Fillister head screw Tornillo sin fin		Belgehäuse mont. 52 407 M Exposure meter casing Caja de exposímetro	2	
ZIN 515 M 1,7 x 7 - 5S	Zylinderschraube Fillister head screw Tornillo sin fin		Camera compl. 529/24 Camera Cámara	1	
ZIN 516 M 1,7 x 2,5-5S	Zylinderschraube Fillister head screw Tornillo sin fin	11	Grundplatte mont. 26 372 T Base plate Placa de base	1	
ZIN 516 M 1,7 x 4,5-5S	Zylinderschraube Fillister head screw Tornillo sin fin		Gehäuse mont. 52 383 dT Housing Caja	2	
65	Zylinderschraube Fillister head screw Tornillo sin fin		Grundplatte mont. 26 372 T Base plate Placa de base	1	
110	Linsenschraube Lens head screw Tornillo de cabeza lenticular		Blendeneinstellring mont.75525 VM Diaphragm ring Anillo de diafragma	2	
111	Linsenschraube Lens head screw Tornillo de cabeza lenticular		Zeiteinstellring 72 593 Tm Speed dial Anillo para velocidades	2	
184	Schraube Screw Tornillo	3, 4, 6, 22	Camera compl. 529/24 Camera Cámara	1	
220a	Schraube Screw Tornillo		Camera compl. 529/24 Camera Cámara	1	
Ss 162	Zapfenschraube Pivoted screw Tornillo pivoteado		Gehäuse mont. 52 383 dT Housing Caja	1	
Ss 318a	Abschlußschraube Cover screw Tornillo recubridor	4, 5, 7	Camera compl. 529/24 Camera Cámara	1	
Ss 523	Klemmschraube Camping screw Tornillo de presión		Belgehäuse mont. 52 407 M Exposure meter casing Caja de exposímetro	1	
Fs 13	Filmspule Film spool Carrete	5, 9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
12 225	Achse Axle Eje	5	Rückdeckel 52 384 aT Back panel Tapa posterior	1	
12 227a	Achse Axle Eje	8	Gehäuse mont. 52 383 dT Housing Caja	1	
14 083	Auslösenippel Release knob Botón disparador	3, 4, 6, 22	Camera compl. 529/24 Camera Cámara	1	
15 470	Führungsbuchse Bushing Casquillo	7, 17	Gehäuse mont. 52 383 dT Housing Caja	1	
15 471	Buchse Bushing Casquillo	5, 9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
15 472	Führungsbuchse Bushing Casquillo	11	Camera compl. 529/24 Camera Cámara	1	
15 473	Lagerbuchse Bearing bush Casquillo de cojinete	6	Camera compl. 529/24 Camera Cámara	1	
15 474	Buchse Bushing Casquillo	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
15 475	Mitnehmerbuchse Winding bush Casquillo de arrastre	7	Camera compl. 529/24 Camera Cámara	1	
15 476	Distanzbuchse Spacer Tubo de distancia	7, 29	Camera compl. 529/24 Camera Cámara	1	
15 526a	Lagerbuchse Bearing bush Casquillo de cojinete	27	Frontplatte mont. 26 391 T Front plate Placa frontal	1	
22 635	Sperrfeder Locking spring Resorte bloqueador	12	Grundplatte mont. 26 372 T Base plate Placa de base	1	
22 639	Feder Spring Resorte	11, 17	Gehäuse mont. 52 383 dT Housing Caja	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
22 641 aTm	Schaltfeder mont. Spring f. counter mechanism Resorte p. mecanismo contador	6	Camera compl. 529/24 Camera Cámara	1	
22 642 Tm	Kontaktfeder Contact spring Resorte de contacto	20, 26, 27	Frontplatte mont. 26 391 T Front plate Placa frontal	1	
22 643	Federscheibe Spring disc Disco p. resorte	14	Camera compl. 529/24 Camera Cámara	1	
22 678	Feder Spring Resorte	30	Belichtgehäuse mont. 52 417 M Exposure meter casing Caja de exposímetro	1	
23 617	Druckfeder Pressure spring Resorte de presión	17	Gehäuse mont. 52 383 dT Housing Caja	1	
23 759	Druckfeder Pressure spring Resorte de presión	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
23 760 b	Druckfeder Pressure spring Resorte de presión	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
23 761	Druckfeder Pressure spring Resorte de presión	6, 11	Camera compl. 529/24 Camera Cámara	1	
23 762	Druckfeder Pressure spring Resorte de presión	11	Camera compl. 529/24 Camera Cámara	1	
23 763	Rückholfeder Pull-back spring Muelle de retracción	11	Camera compl. 529/24 Camera Cámara	1	
23 769 a	Drehfeder Torsion spring Resorte de torsión	8	Gehäuse mont. 52 383 dT Housing Caja	1	
23 771	Drehfeder Torsion spring Resorte de torsión	11	Camera compl. 529/24 Camera Cámara	1	
23 778 a	Drehfeder Torsion spring Resorte de torsión	30	Deckel mont. 103 505 T/1 Cover Tapa	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Numero 529/24	Preis Price Precio
23 821	Feder Spring Resorte		Camera compl. 529/24 Camera Cámara	1	
25 390	Unterlage Washer Arandela		Camera compl. 529/24 Camera Cámara	1	
25 403	Unterlage Washer Arandela	30	Deckel mont. 103 505 T/1 Cover Tapa	1	
25 405	Unterlage Washer Arandela		Camera compl. 529/24 Camera Cámara	1 +)	
26 372 Tm	Grundplatte vormontiert Base plate Placa de base		Grundplatte mont. 26 372 T Base plate Placa de base	1	
26 372 T	Grundplatte mont. Base plate Placa de base	10	Gehäuse mont. 52 383 dT Housing Caja	1	
26 374 aTm	Andrückplatte mont. Pressure plate Plancha de presión	5	Camera compl. 529/24 Camera Cámara	1	
26 387	Deckplatte Cover plate Plancha de recubrimiento		Camera compl. 529/24 Camera Cámara	1	
26 389	Ausgleichplatte Compensating plate Planchita de ajuste		Camera compl. 529/24 Camera Cámara	1 +)	
26 391 Tm	Frontplatte vormontiert Front plate Placa frontal	27	Frontplatte mont. 26 391 T Front plate Placa frontal	1	
26 391 T	Frontplatte mont. Front plate Placa frontal	27	Frontplatte vollst. 26 391 M Front plate Placa frontal	1	
26 391 M	Frontplatte vollst. Front plate Placa frontal	23	Camera compl. 529/24 Camera Cámara	1	
28 217	Führungsleiste Guide gib Aleta-guía	17	Camera compl. 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Numero 529/24	Preis Price Precio
33 308	Lagerflansch Bearing flange Brida de cojinete	8, 9	Gehäuse mont. 52 383 dT Housing Caja	1	
33 309	Drücker Rewind release button Botón de desembrarco	8	Camera compl. 529/24 Camera Cámara	1	
33 312	Rolle Roller Rodillo	7, 17	Gehäuse mont. 52 383 dT Housing Caja	1	
34 674	Auslöseklappe Release flap Placa disparadora		Gehäuse mont. 52 383 dT Housing Caja	1	
34 734	Einstellblech Setting plate Plancha de graduador		Belichtungsmesser-Gehäuse mont. 52 407 M Exposure meter casing Caja de exposímetro	1	
34 700	Frontdeckblech Front cover plate Plancha de recubrimiento frontal	27	Frontdeckblech mont. 34 701 Tm Front cover plate Plancha de recubrimiento frontal	1	
34 700 Tm	Frontdeckblech mont. Front cover plate Plancha de recubrimiento frontal		Frontplatte mont. 26 391 T Front plate Placa frontal	1	
34 702	Abdeckblech Cover plate Plancha de recubrimiento	30	Belichtungsmesser-Gehäuse mont. 52 407 M Exposure meter casing Caja de exposímetro	1	
38 420	Deckkappe unten Lower cover Tapa inferior		Camera compl. 529/24 Camera Cámara	1	
38 488 T	Deckkappe mont. Cover Tapa	22, 29	Camera compl. 529/24 Camera Cámara	1	
39 001	Unterlagscheibe Washer Arandela	8	Camera compl. 529/24 Camera Cámara	1	
39 018	Abstimmscheibe 0,1 mm Washer Arandela	27	Frontplatte vollst. 26 391 M Front plate Placa frontal	1 a)	
39 019	Abstimmscheibe 0,05 mm Washer Arandela	27	Frontplatte vollst. 26 391 M Front plate Placa frontal	1 a)	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 529/24	Preis Price Precio
39 020	Abstimmscheibe 0,4 mm Washer Arandela	29	Frontplatte vollst., 26 391 M Front plate Placa frontal	1 +)	
39 021	Abstimmscheibe 0,2 mm Washer Arandela	27	Frontplatte vollst., 26 391 M Front plate Placa frontal	1 +)	
39 065 a	Unterlagscheibe Washer Arandela		Grundplatte mont., 26 392 T Base plate Placa de base	1	
39 150	Scheibe Disc Disco	30	Deckel mont., 103 515 T/1 Cover Tapa	1	
39 194	Scheibe Disc Disco	22	Camera compl., 529/24 Camera Cámara	1 +)	
39 426	Scheibe Disc Disco		Gehäuse mont., 52 383 dT Housing Caja	1	
39 555 a	Scheibe Disc Disco		Camera compl., 529/24 Camera Cámara	1	
39 557	Unterlagscheibe Washer Arandela	7	Camera compl., 529/24 Camera Cámara	1 +)	
39 572	Scheibe Disc Disco	29	Camera compl., 529/24 Camera Cámara	1 +)	
39 584	Scheibe Disc Disco	7	Camera compl., 529/24 Camera Cámara	1 +)	
39 614	Scheibe Disc Disco		Camera compl., 529/24 Camera Cámara	1 +)	
39 625	Abstimmscheibe 0,15 mm Washer Arandela		Frontplatte vollst., 26 391 M Front plate Placa frontal	1 +)	
40 083	Scheibe Disc Disco	30	Deckel mont., 103 505 T/1 Cover Tapa	1	
41 107	Federscheibe Spring disc Disco resorte	29	Camera compl., 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
42 228 Tm	Anschlag mont. Stop Tope	6	Camera compl., 529/24 Camera Camara	1	
42 254	Anschlagschraube Stop Tope	29	Camera compl. 529/24 Camera Camara	1	
44 017 T	Zahnstange mont. Rack Cremallera	11, 12	Camera compl., 529/24 Camera Camara	1	
45 148	Stirnrad (40 Zähne) Spur wheel Rueda frontal	12	Camera compl., 529/24 Camera Camara	1	
45 319 b	Aufzugsrad Winding wheel Rueda de arrastre	15, 27	Camera compl., 529/24 Camera Camara	1	
45 338	Schaltring Ratchad wheel Rueda de trinquete	22	Camera compl. 529/24 Camera Camara	1	
45 641 a	Stirnrad (28 Zähne) Spur wheel Rueda frontal	5	Grundplatte mont. 26 372 T Base plate Placa de base	1	
45 642	Stirnrad (20 Zähne) Spur wheel Rueda frontal	12	Grundplatte mont. 26 372 T Base plate Placa de base	1	
5 643	Zwischenrad (22 Zähne) Intermediate gear Rueda intermedia		Grundplatte mont. 26 372 T Base plate Placa de base	1	
45 644 Tm	Stirnrad mont. (40 Zähne) Spur wheel Rueda frontal	11	Grundplatte mont. 26 372 T Base plate Placa de base	1	
45 645 a	Filmtrommel Film drum Tambor p. película	5, 9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
45 646	Stirnrad (18 Zähne) Spur wheel Rueda frontal	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
52 384 dT	Rückdeckel mont. Back panel Tapa posterior	9	Gehäuse mont. 52 383 dT Housing Caja	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
52 407 T	Belichtungsmesser vormont. Exposure meter casing Caja de exposimetro		Belichtungsmesser mont. 52 407 M Exposure meter casing Caja de exposimetro	1	
52 407 M	Belichtungsmesser mont. Exposure meter casing Caja de exposimetro		Camera compl. 529/24 Camera Cámara	1	
53 198 a	Lagerflansch Bearing flange Brida de cojinete		Deckel mont. 103 505 T/1 Cover Tapa	1	
54 077	Zugstange Traction rod Varilla de traccion	14	Frontdeckblech 34 700 Tm Front plate Planchetta de recubrimiente frontal	1	
55 061	Nachführzeiger Follower mark Marca de reglaje	30	Deckel mont. 103 505 T/1 Cover Tapa	1	
56 071 Tm	Kupplungsgriff mont. Handle of coupling Osa de embrague		Blendeneinstellring vormont. 75525 T Diaphragm ring Anillo de diaphragma	1	
60 182	Schlitzmutter Slotted nut Tuerca entallada	6, 7	Camera compl. 529/24 Camera Cámara	1	
60 183	Schlitzmutter Slotted nut Tuerca entallada	8, 14	Camera compl. 529/24 Camera Cámara	1	
60 194	Sechskantmutter Hexagon nut Tuerca hexagonal	30	Deckel mont. 103 505 T/1 Cover Tapa	1	
65 411 aTm	Achse mont. Axle Eje	8, 9, 10	Gehäuss mont. 52 383 dT Housing Caja	1	
65 412 Tm	Rückspulachse Rewind axle Eje de rebobinar	7, 17	Gehäuss mont. 52 383 dT Housing Caja	1	
65 413	Spulenachse Spool axle Eje de carrete	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
65 414	Auslösestange Release rod Varilla de disparo	6	Camera compl. 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
66 235	Mitnehmerbolzen Winding pin Perno de arrastre	7, 17	Gehäuse mont. 52 383 dT Housing Caja	1	
66 451	Führungsbolzen Guide pin Perno de guía		Frontdeckblech 34 701 Tm Front cover plate Planchetta de recubrimiento frontal	1	
66 452	Mitnehmerbolzen Winding pin Perno de arrastre	7	Camera compl. 529/24 Camera Cámara	1	
72 418	Scheibe Disc Disco		Camera compl. 529/24 Camera Cámara	1	
72 538	Ring Ring Anillo	9, 10	Gehäuse mont. 52 383 dT Housing Caja	1	
72 539	Rückspulknopf Rewind knob Botón p. rebobinar	3, 4, 6, 22	Camera compl. 529/24 Camera Cámara	1	
72 576	Ring Ring Anillo	27	Frontplatte vollst. 26 391 M Front plate Placa frontal	1	
72 591	Indexring Index ring Anillo indicador	22	Camera compl. 529/24 Camera Cámara	1	
72 593	Zeiteinstellring Speed dial Anillo p. velocidades		Zeiteinstellring mont. 72 593 Tm Speed dial Anillo p. velocidades	1	
72 593 Tm	Zeiteinstellring mont. Speed dial Anillo p. velocidades		Camera compl. 529/24 Camera Cámara	1	
72 594	Indexring Index ring Anillo indicador		Camera compl. 529/24 Camera Cámara	1	
72 595	Ring Ring Anillo	29	Camera compl. 529/24 Camera Cámara	1	
74 143 aT	Blitzlichtanschluß mont. Flash synchronizer Sincronizador	18, 19, 20 26, 27	Frontplatte mont. 26 391 T Front plate Placa frontal	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
74 148 T/1	Gewindering m. Sucherlinse Threaded ring with lens f.eyepiece Anillo con rosca con lente p.mirilla	29	Camera compl. 529/24 Camera Cámara	1	
74 195	Schutzring Protective ring Anillo protector	29	Camera compl. 529/24 Camera Cámara	1	
75 467	Zählscheibe Counter disc Disco contador		Camera compl. 529/24 Camera Cámara	1	
75 507	Tiefenschärfenring Depth of field ring Anillo con escala de profundidad focal		Camera compl. 529/24 Camera Cámara	1	
75 522 Tm	Zeiteinstellring mont. Shutter speed setting ring Anillo graduador p.velocidades	23, 29	Camera compl. 529/24 Camera Cámara	1	
75 523 Tm	Blendenskala mont. Diaphragm scale Escala de diaphragma	29	Camera compl. 529/24 Camera Cámara	1	
75 524	Zeitskala Speed dial Escala de velocidades		Zeiteinstellring 72 593 Tm Shutter speed setting ring Anillo graduador p.velocidades	1	
75 525 T	Blendeneinstellring vormont. Diaphragm ring Anillo de diaphragma		Blendeneinstellring mont. 75525 Vm Diaphragm ring Anillo de diaphragma	1	
75 525 Vm	Blendeneinstellring mont. Diaphragm ring Anillo de diaphragma		Camera compl. 529/24 Camera Cámara	1	
75 526	Blendenskala Diaphragm scale Escala de diaphragma		Blendeneinstellring mont. 75525 Vm Diaphragm ring Anillo de diaphragma	1	
75 527 a	Empfindlichkeitsskala Film speed scale Escala p. sensibilidades	29	Camera compl. 529/24 Camera Cámara	1	
79 113 a	Tubus Tube Tubo	14	Camera compl. 529/24 Camera Cámara	1	
85 562 c	Aufzugshebel Winding lever Palanca de arrastre	7, 22, 23	Camera compl. 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 529/24	Preis Price Precio
91 056 a	Steuerscheibe Cam disc Disco de mando	30	Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
95 343	Blende Diaphragm Diafragma	5, 14	Camera compl., 529/24 Camera Cámara	1	
101 478	Sucherausblicklinse Front lens of viewfinder Lente frontal de visor	30	Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
103 446	Buchse Bushing Casquillo	10	Gehäuse mont., 52 383 dT Housing Caja	1	
103 4[illegible]	Scheibe Disc Disco	30	Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
103 450 b	Prismenscheibe Prism base Cristal prismático	30	Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
103 488	Deckel unten Cover lower Tapa inferior		Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
103 505 T[illegible]	Deckel bearbeitet Cover Tapa	30	Deckel mont., 103 505 T/1 Cover Tapa	1	
103 505 T/1	Deckel mont. Cover Tapa		Belichtungsmesser-Gehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
109 182	Bezug compl., Covering compl., Cubierta compl.,		Camera compl., 529/24 Camera Cámara	1	
109 180/1	Bezug für Gehäuse Covering f. housing Cubierta p. caja	3, 22	Camera compl., 529/24 Camera Cámara	1	
109 180/2	Bezug für Gehäuse Covering f. housing Cubierta p. caja	3, 22	Camera compl., 529/24 Camera Cámara	1	
109 182/3	Bezug für Rückwand Covering f. back panel of housing Cubierta p. tapa posterior de caja	23	Camera compl., 529/24 Camera Cámara	1	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio
109 180/4	Bezug für Boden Covering for cover lever Cubierta p.tapa inferior	3, 22	Camera compl., 529/24 Camera Cámara	1	
109 180/5	Bezug für Deckblech Covering f. cover plate Cubierta p.placa recubridora	2	Camera compl., 529/24 Camera Cámara	1	
110 049	Filzstreifen als Dichtung Felt strip Tira de fieltro		Camera compl., 529/24 Camera Cámara	1	
112 398	Dichtungsring Washer Arandela		Frontblech mont., 26 391 M Front plate Placa frontal	1	
113 669	Maske Mask Mascara		Belichtungsgehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
113 793	Isolierplatte Insulation Aislamiento	30	Belichtungsgehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
113 820	Dichtungsstreifen Tightening strip Tira impermeable		Gehäuse mont., 52 383 dT Housing Caja	1	
116 577	Schaltdraht Flex Conductor		Frontblech mont., 26 391 T Front plate Placa frontal	1	
116 598	Schaltdraht Flex Conductor		Belichtungsgehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1	
122 015	Stahlkugel Steel ball Bola de acero	7, 17	Gehäuse mont., 52 383 dT Housing Caja	1	
132 173	Widerstände nach Bedarf 0,25 4 4,5 5 5,5 6 6,5 7 7,5 8 8,5 9 9,5 10 10,5 11 11,5 12 12,5 KOhm 0,1 W. Resistance 0,25 - 12,5 KOhm 0,1 W. as may be required Resistencia 0,25 - 12,5 KOhmios 0,1 W. según se necesite	30	Belichtungsgehäuse mont., 52 407 M Exposure meter casing Caja de exposímetro	1 +)	

Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designation	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	Stück Number Número 529/24	Preis Price Precio
00 381	Prontor SVS 00 (Lichtwerte) mit Pantar 1:2,8/45 Prontor shutter SVS 00 with Pantar f = 1:2,8-45 mm Obturador Prontor SVS 00 Pantar 1:2,8/45	23, 27	Frontplatte vollst. 26 391M Front plate Placa frontal	1	
100 614	Unterlage Washer Arandela		Verschlußbajonett bei Reparatur Shutter Obturador	1+)	
1354/11	K-Instrument II Exposure meter movement Instrumento con bobina	30	Belichtungsgehäuse mont. 52 407 M Exposure meter casing Caja de exposimetro	1	
132 182 T/1	Zelle vollst. Photo cell Fotocelda	30	Belichtungsgehäuse mont. 52 407 M Exposure meter casing Caja de exposimetro	1	

+) Nach Bedarf
as required
según convenga


Teil-Nr. Serial-No. Pieza No.	Bezeichnung Name Designación	Abbildung Illustration Ilustración	Baugruppe, Bauteil Assembly Montaje	S t ü c k Number Número 529/24	Preis Price Precio

Contina III


Special tools

The same special tools as for Contina I and II can be used.

In order to enable proper repairing of the exposure meter, it is absolutely necessary to make use of the testing case VE 33.

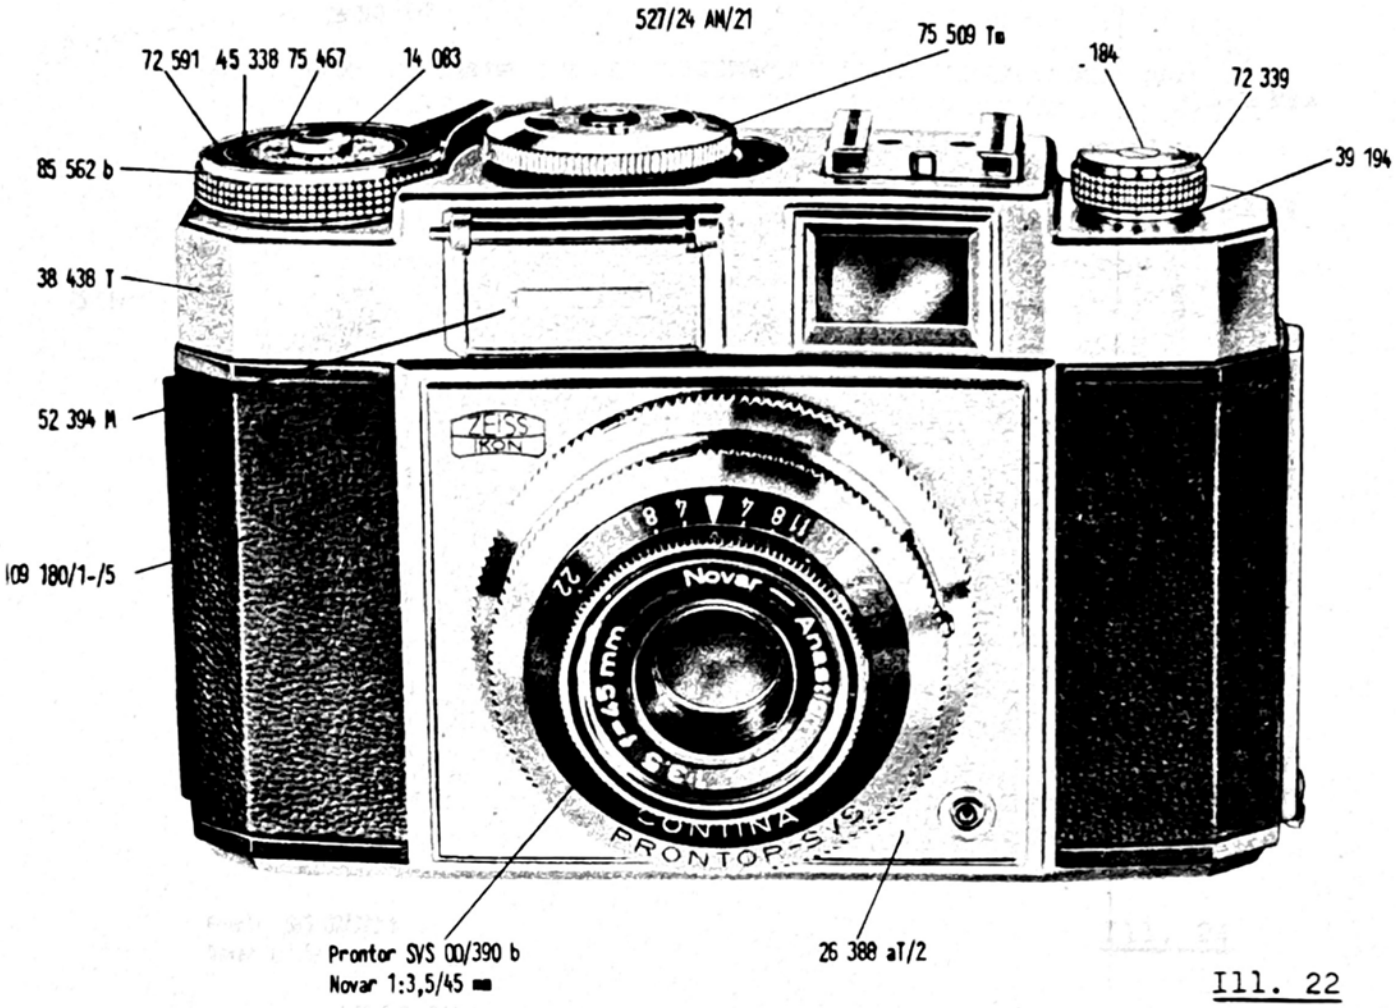

527/24 AN/21
72 591
45 338
75 467
14 083
75 509 Tm
184
72 339
39 194
85 562 b
38 438 T
52 394 M
109 180/1-/5
ZEISS IKON
Novar
CONTINA
PRONTOR-S V S
Prontor SVS 00/390 b
Novar 1:3,5/45 mm
26 388 aT/2

Ill. 22

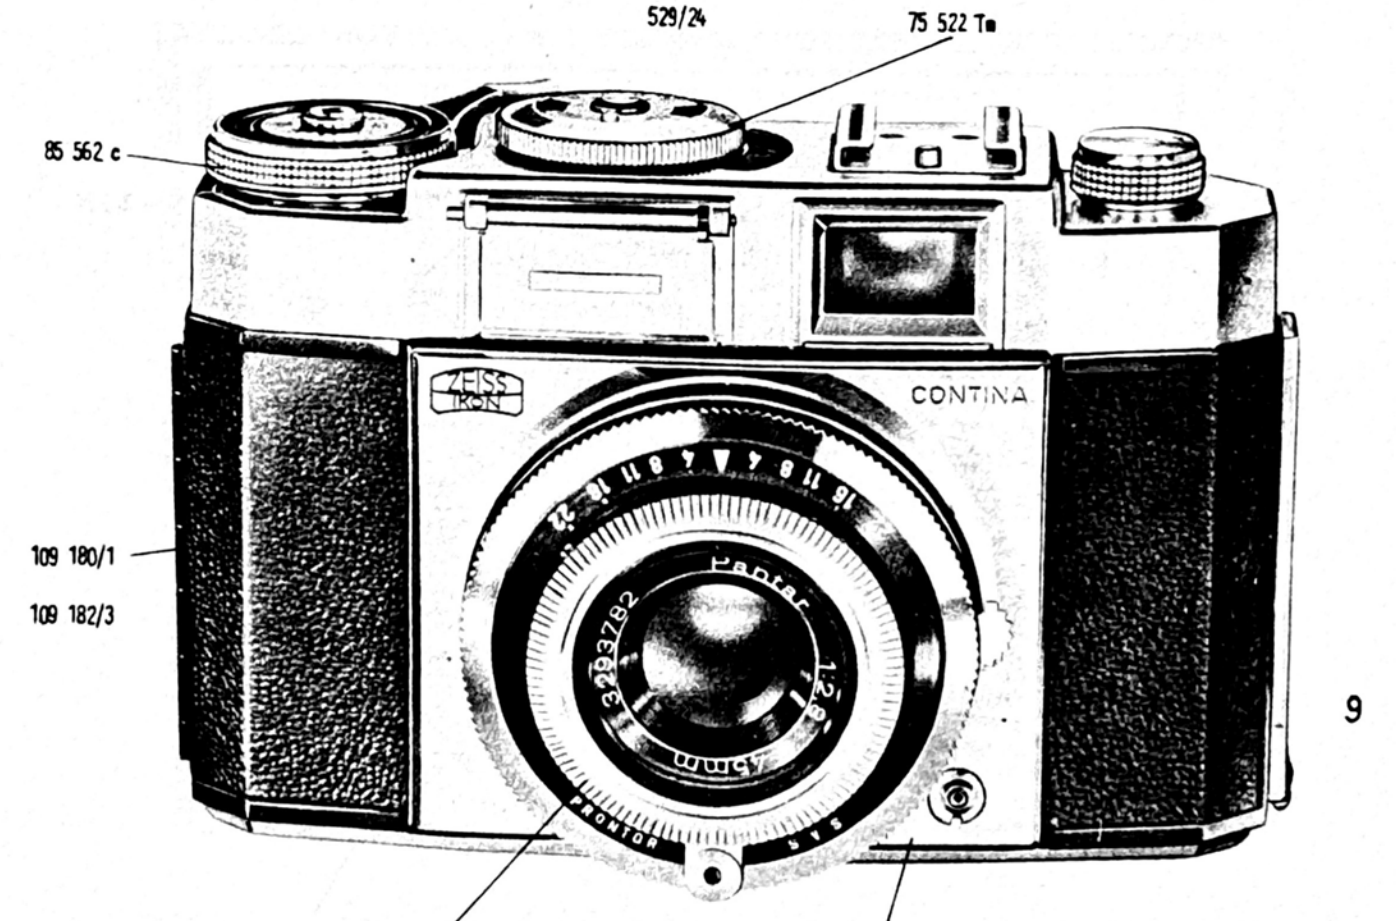
529/24
75 522 Tm
85 562 c
109 180/1
109 182/3
ZEISS IKON
CONTINA
Pantar
PRONTOR SVS
Prontor SVS 00/381
Pantar 1:2,8/45 mm
26 391 M

Ill. 23


26 388 aT/2

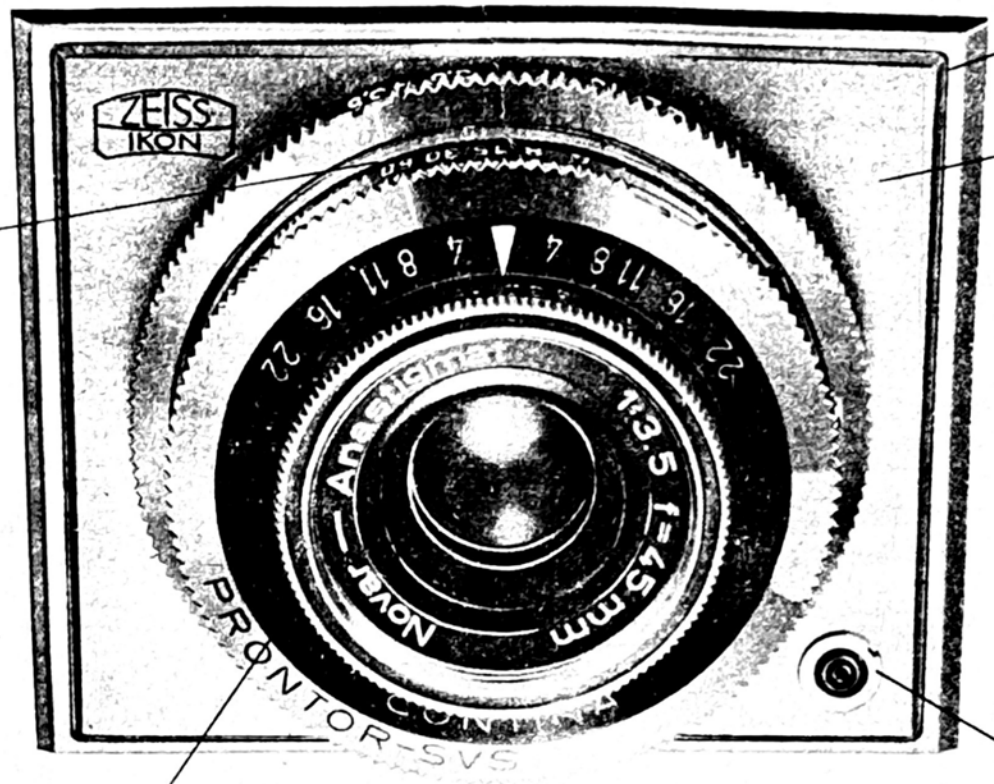

26 388 a
34 169
75 514
74 143 aT
Prontor SVS 00/390 b
Novar 1:3,5/4,5 mm


Ill. 24

26 388 aT/3

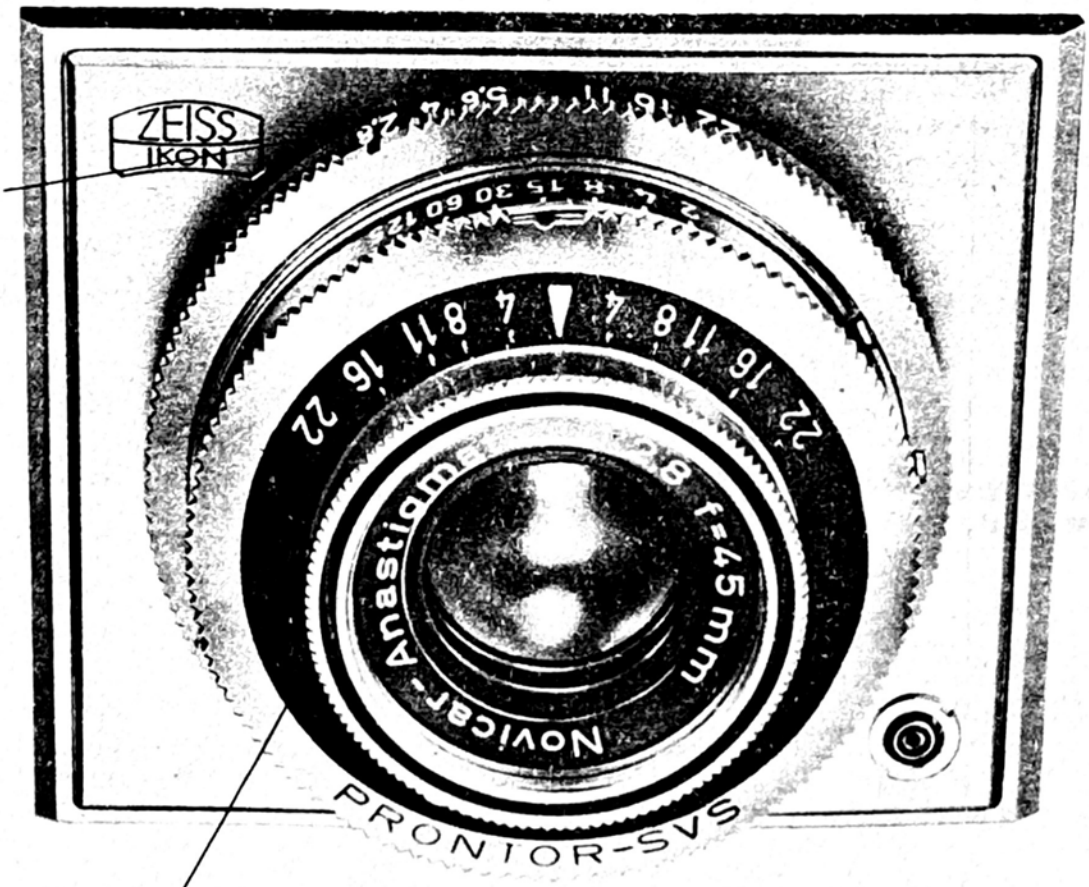


75 515
Prontor SVS 00/390 a
Novicar 1:2,8/45 mm

Ill. 25

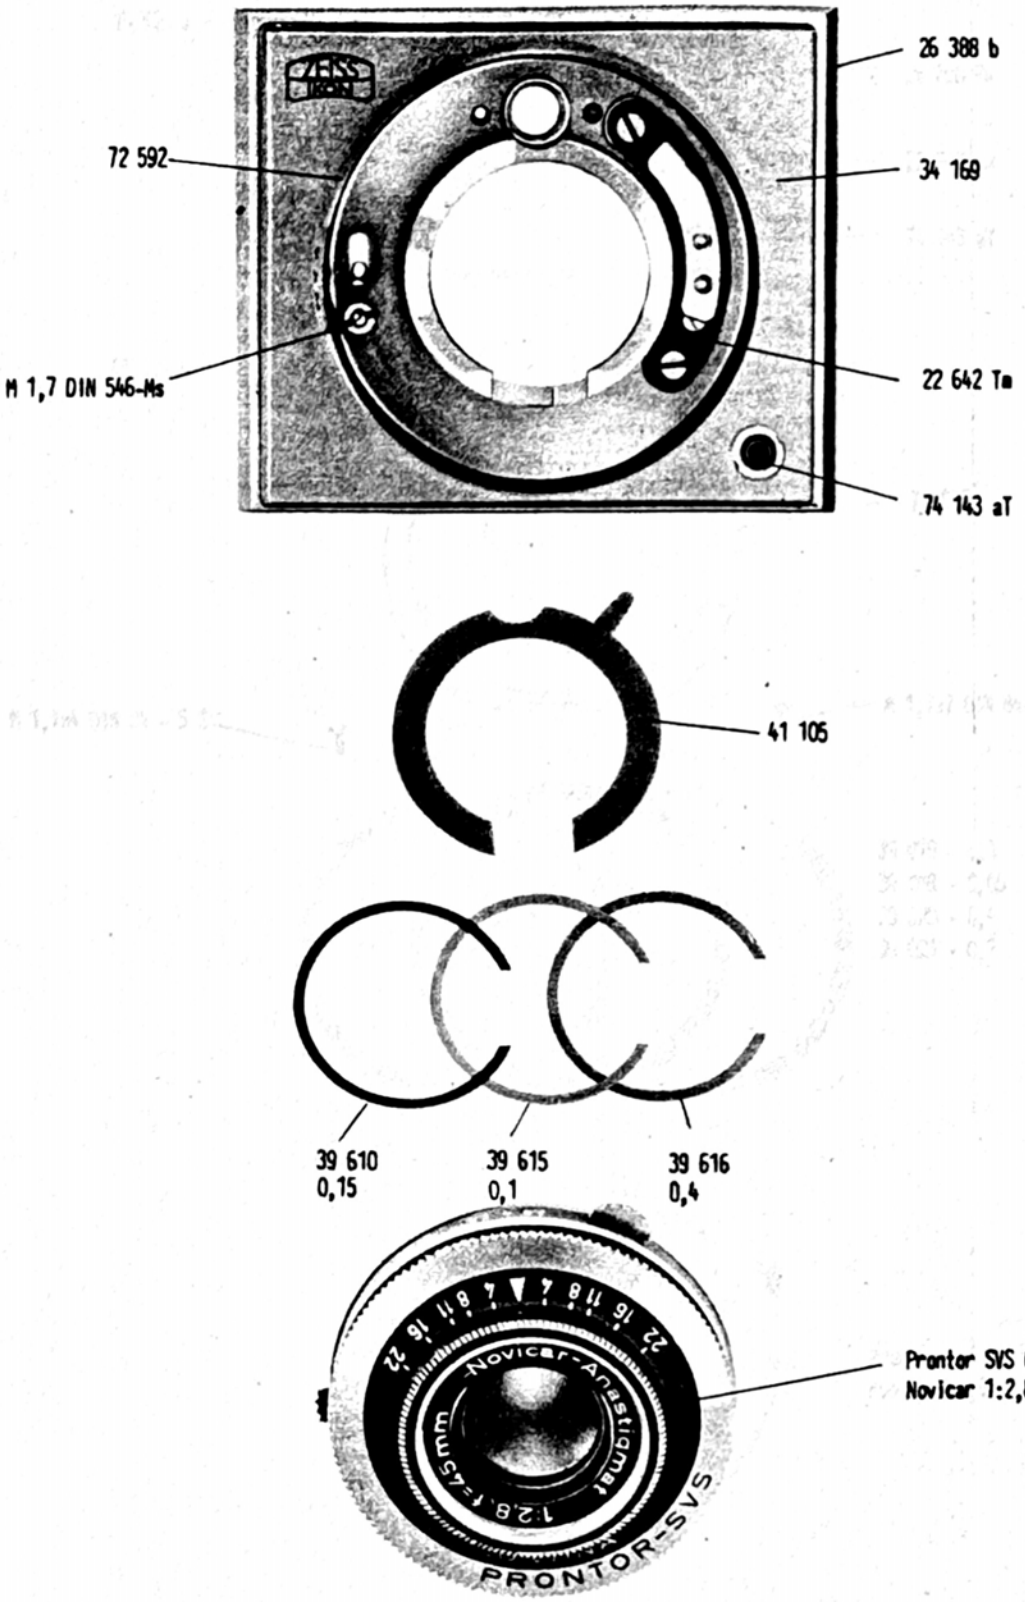

26 388 b
72 592
34 169
M 1,7 DIN 546-Ms
22 642 Tm
74 143 aT
41 105
39 610
0,15
39 615
0,1
39 616
0,4
Prontor SVS 00/476 a
Novicar 1:2,8/45 mm
Novicar-Anastigmat
1:2,8 f=45mm
PRONTOR-SVS

Ill. 26

26 391 T

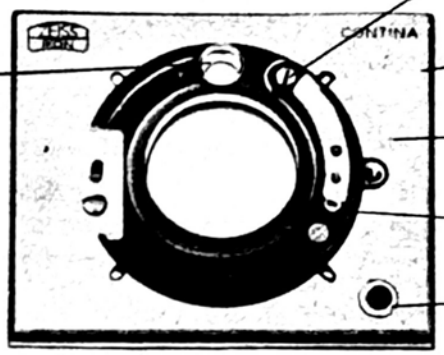

M 1,7 x 4 DIN 24-5 S
15 526 a
26 391 Ta
34 700 Ta
22 642 Ta
74 143 aT
CONTINA


45 319 b

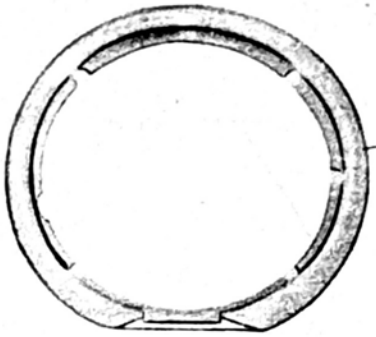

72 576



M 1,7x4 DIN 84 - 5 S


M 1,7x7 DIN 84-5 S

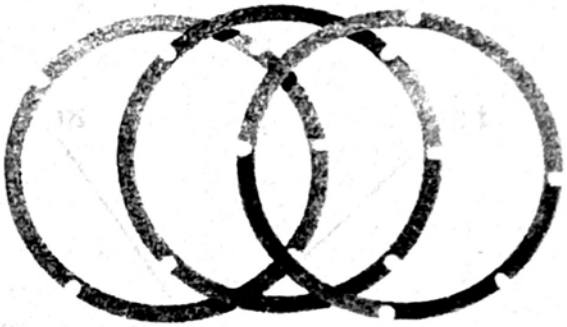

39 018 - 0,1
39 019 - 0,05
39 020 - 0,4
39 021 - 0,2


Prontor SVS 00/381
Pantar 1:2,8/45 mm

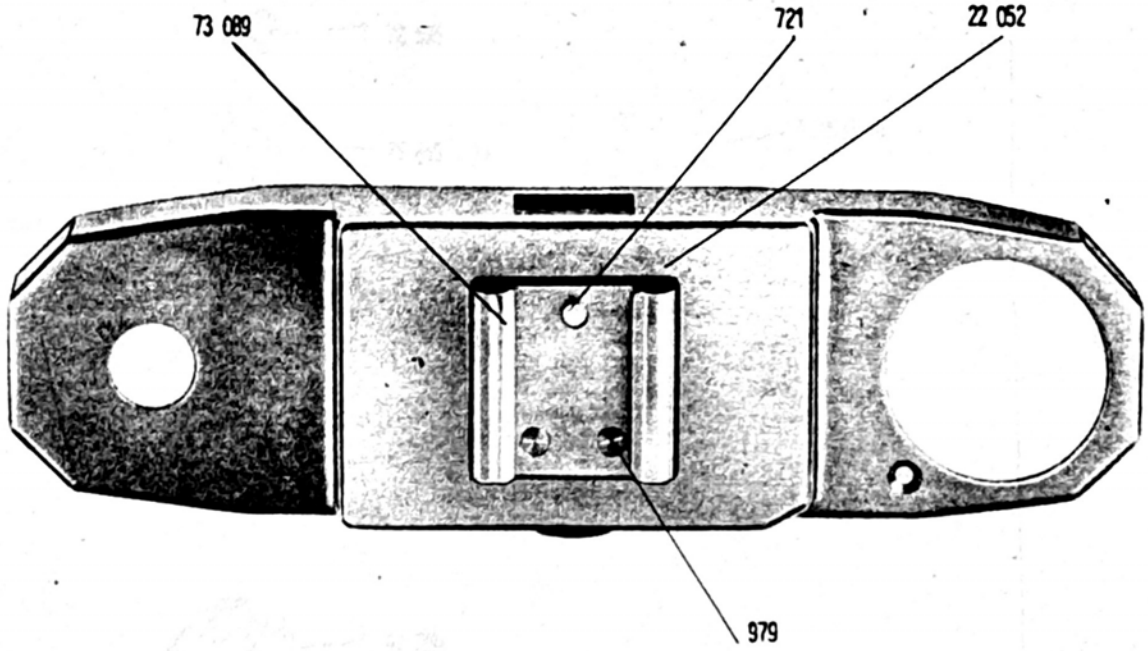


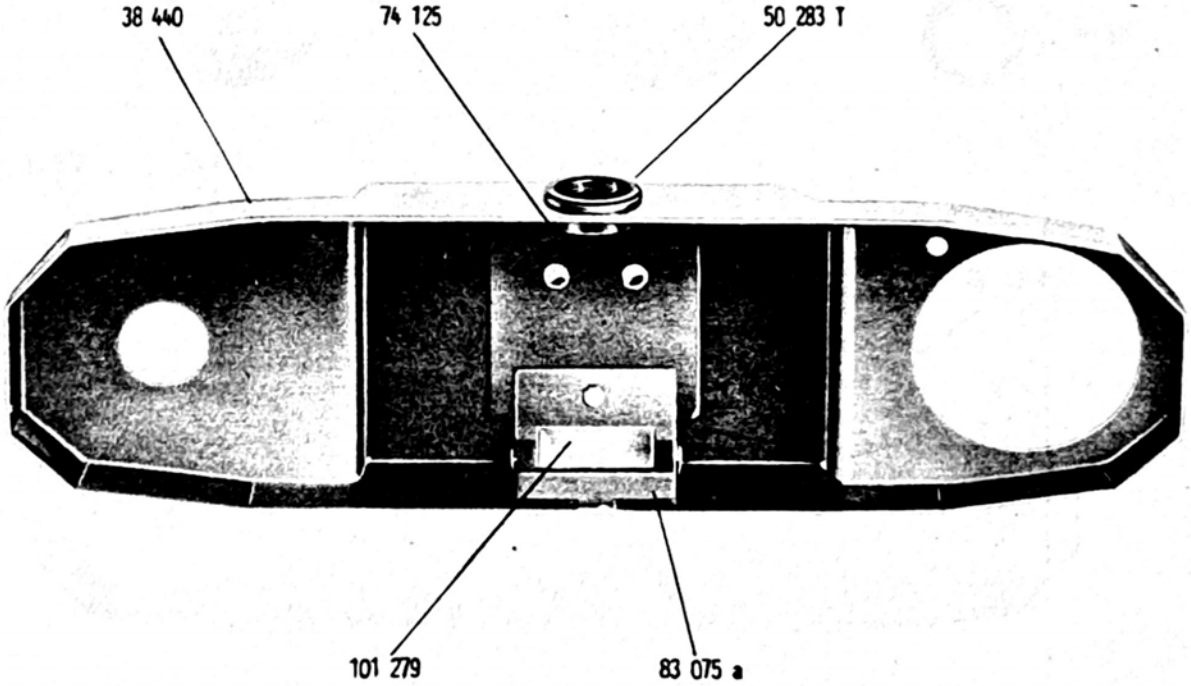


Ill. 28

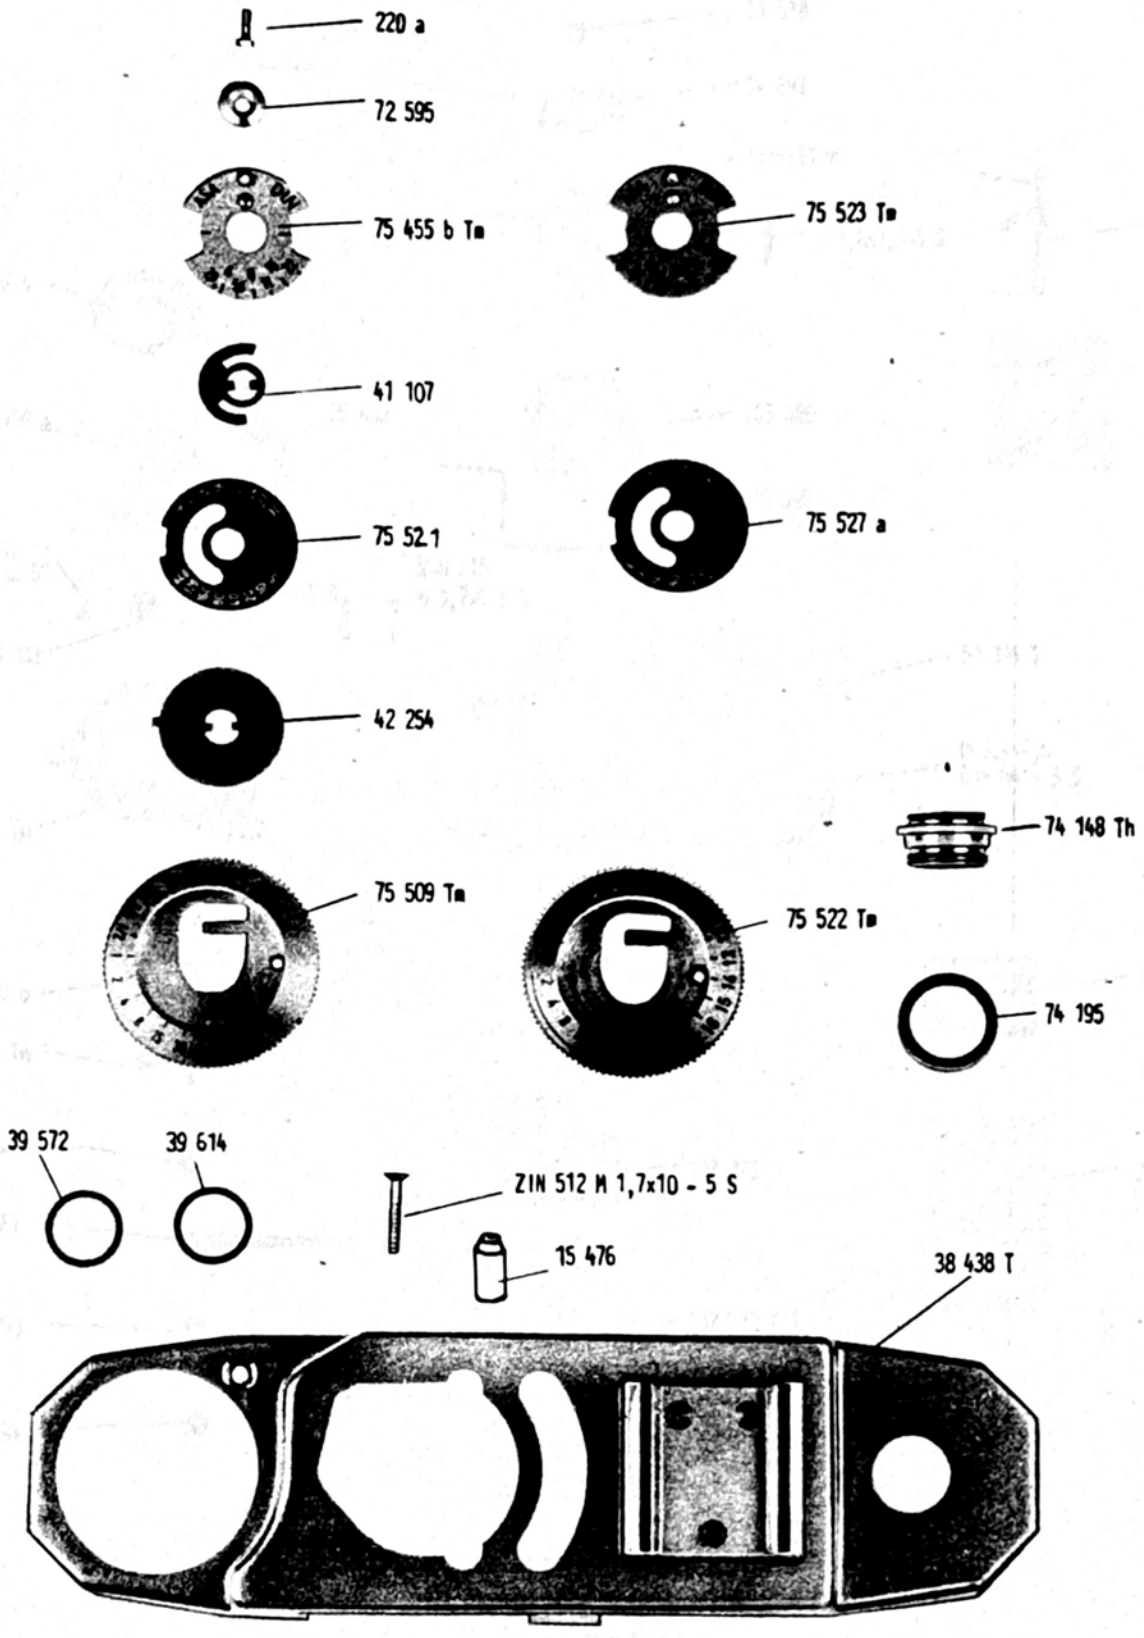

220 a
72 595
75 455 b Tm
75 523 Tm
41 107
75 521
75 527 a
42 254
74 148 Th
75 509 Tm
75 522 Tm
74 195
39 572
39 614
ZIN 512 M 1,7x10 - 5 S
15 476
38 438 T

Ill. 29

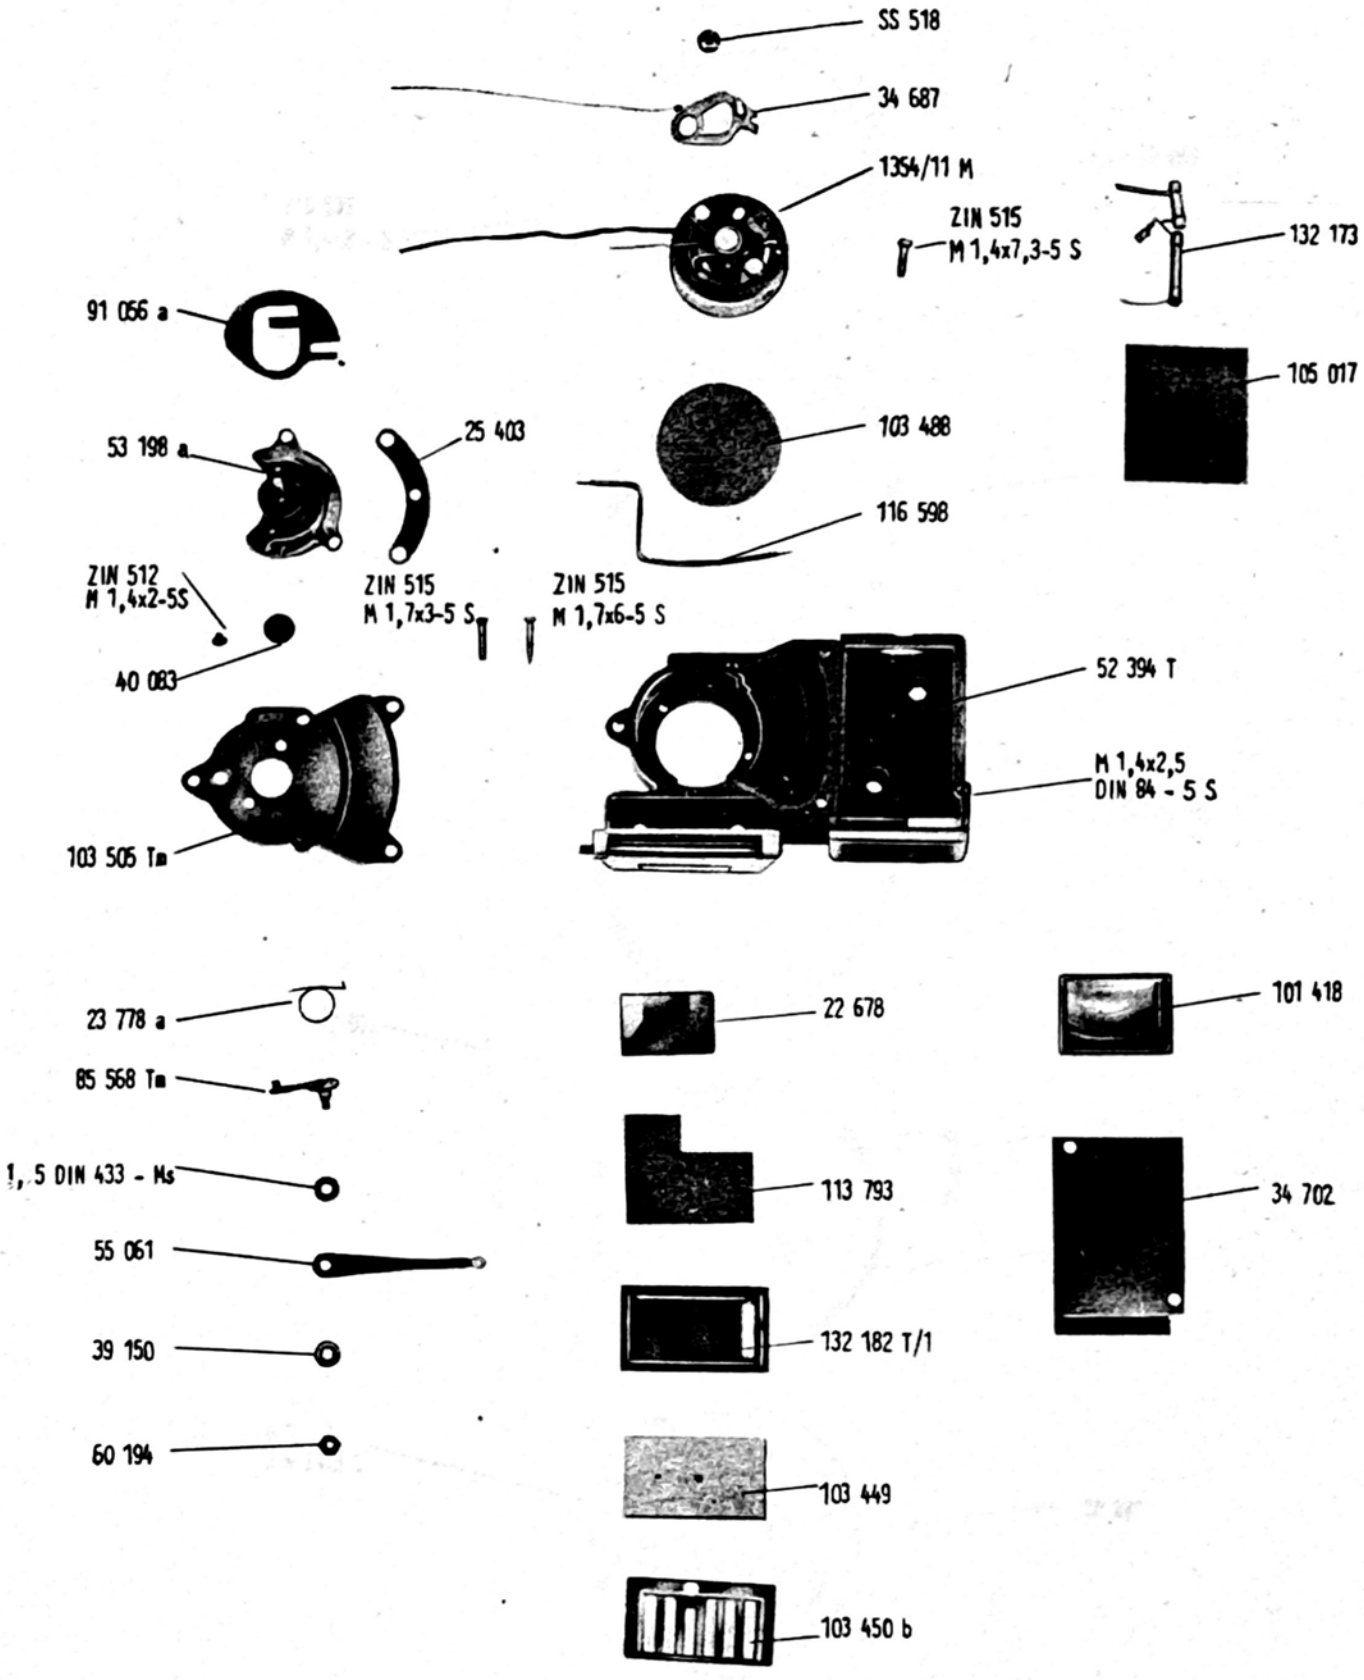
SS 518
34 687
1354/11 M
ZIN 515
M 1,4x7,3-5 S
132 173
91 056 a
105 017
53 198 a
25 403
103 488
116 598
ZIN 512
M 1,4x2-5S
ZIN 515
M 1,7x3-5 S
ZIN 515
M 1,7x6-5 S
40 083
52 394 T
M 1,4x2,5
DIN 84 - 5 S
103 505 Tm
23 778 a
22 678
101 418
85 568 Tm
1, 5 DIN 433 - Ms
113 793
34 702
55 061
39 150
132 182 T/1
60 194
103 449
103 450 b

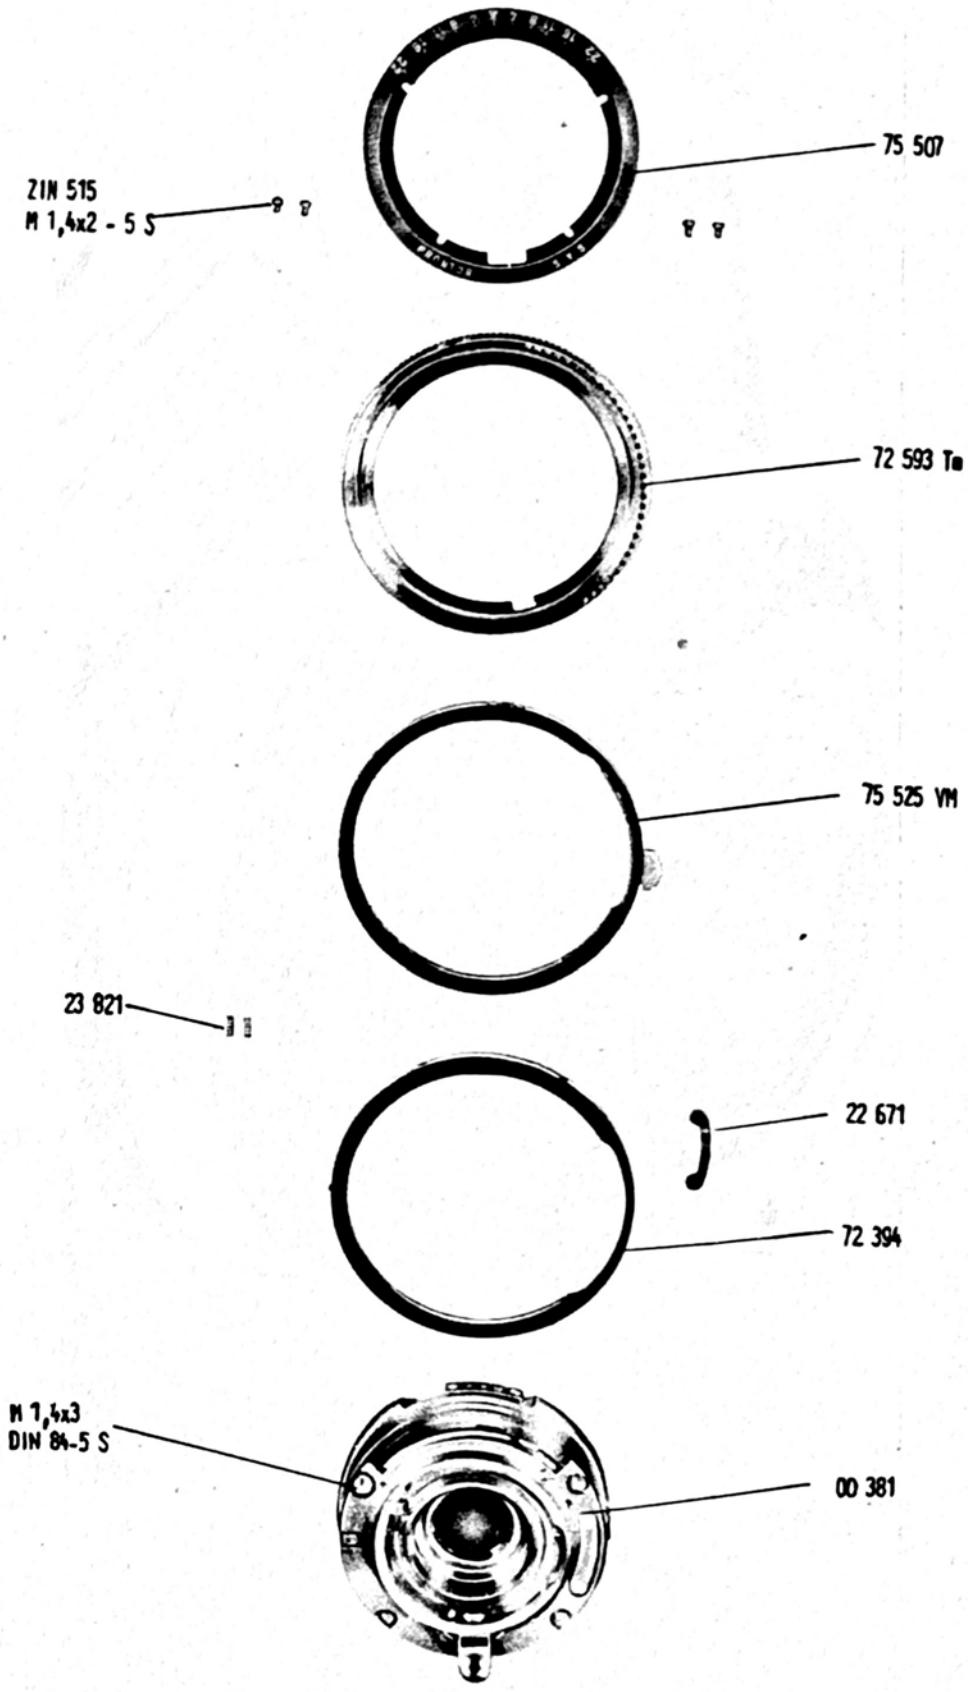
ZIN 515
M 1,4x2 - 5 S
75 507
72 593 Tm
75 525 VM
23 821
22 671
72 394
M 1,4x3
DIN 84-5 S
00 381

Ill. 31

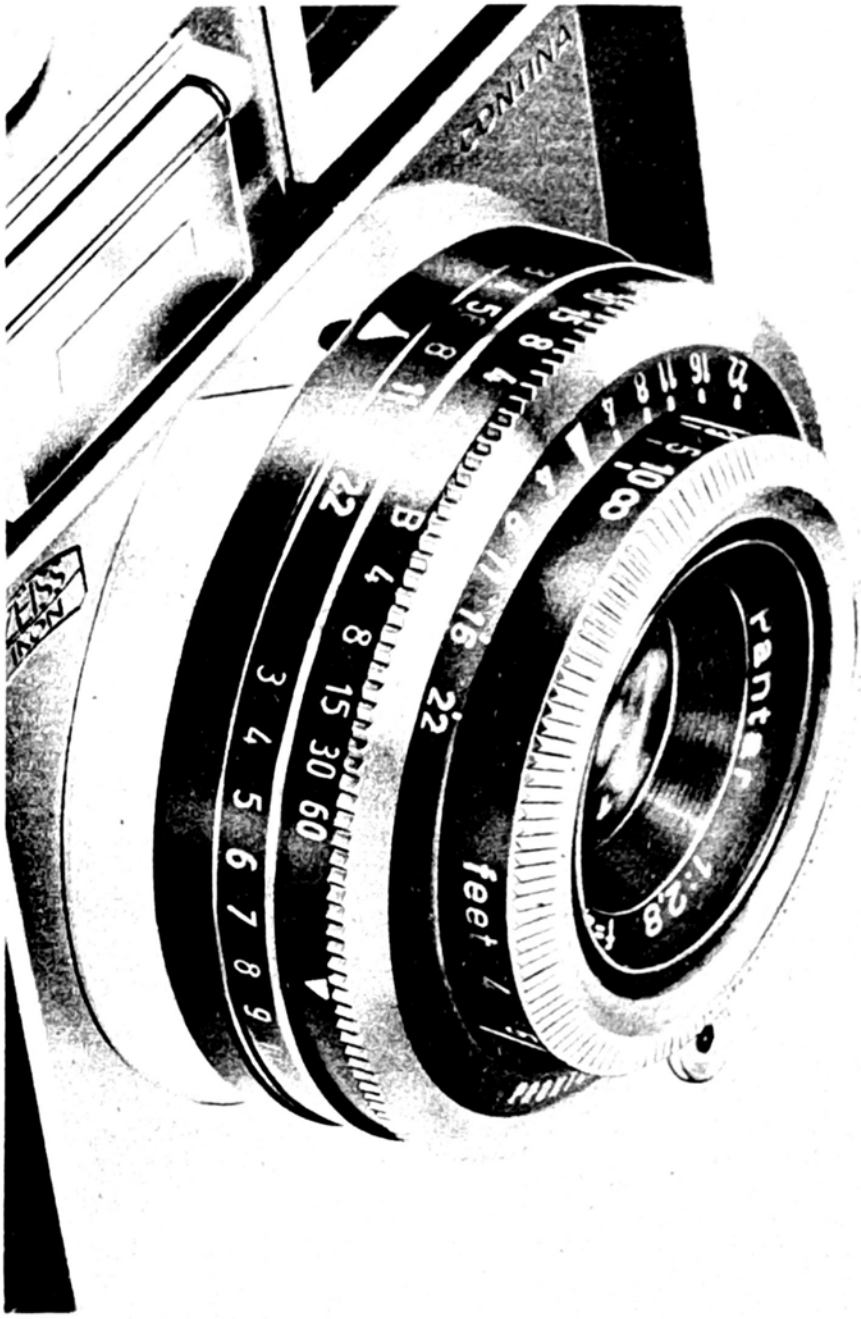

Ill. 32